



iNetVu® 7000 Series Controller User Manual
With SW/FW 7.5.7.0

The iNetVu® brand and logo are registered trademarks of C-COM Satellite Systems, Inc.
© Copyright 2009 C-COM Satellite Systems, Inc.

1-877-iNetVu6
www.c-comsat.com
September 22, 2014
Revision 1.47

This page is intentionally left blank.

NOTICE

C-COM Satellite Systems Inc. makes no warranty of any kind with regards to this manual including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

C-COM Satellite Systems Inc. shall not be liable for errors contained herein or direct, indirect, special, incidental or consequential damages in connection with the furnishing, performance or use of this material.

The information contained in this document is subject to change without notice.

Copyright © 2009. All rights reserved. C-COM Satellite Systems Inc.

This document contains information, which is protected by copyright. All rights reserved. Reproduction, adaptation, or translation without prior written permission is prohibited, except as followed under the copyright laws.

Both the iNetVu® and C-COM names and logos are registered trademarks of C-COM Satellite Systems Inc.

Intel® Pentium is a registered trademark of Intel Corporation. Microsoft, Windows, Windows NT and MapPoint are registered trademarks of Microsoft Corporation.

All other product names mentioned in this manual may be trademarks or registered trademarks of their respective companies and are the sole property of their respective manufacturers.

FCC and INDUSTRY CANADA INFORMATION TO THE USER:

The FCC and Industry Canada have imposed the following conditions when operating, installing and deploying iNetVu® Mobile Earth Stations and is mandatory for all installations made within the Continental United States and Canada as well as Hawaii, Alaska, Puerto Rico, the U.S. Virgin Islands and other U.S. Territories. The FCC requires that a certified installer perform the installation. It is also strongly recommended that a qualified professional RV dealer/installer mount the system on your vehicle. These conditions are also required by C-COM for all other installed locations.

All iNetVu® Mobile earth station installers must be C-COM Certified, and must have specifically acknowledged the requirements for iNetVu® Mobile installations, which are as follows:

1. "Installation" is the physical mounting and wiring of the Satellite provider's earth station on a vehicle or other stationary site in order to prepare for correct operation. Only Certified C-COM iNetVu installers may perform the installation and removal of an iNetVu® Mobile system.
2. "Deployment" means the raising, pointing and orienting of the earth station to the communicating satellite, every time it is raised from a stowed position for use. The deployment of an iNetVu® Mobile system must only be done by a trained installer or by a consumer using the deployment software.
3. Installers shall install the iNetVu® systems only in locations that are not readily accessible to children and in a manner that prevents human exposure to potential radiation hazards.
4. For large vehicles with roof mounts, the height of the bottom lip of the earth station when fully deployed must be at least six feet above the ground at all times, or six feet above a surrounding surface which a person may easily access.
5. If a roof access ladder or any other means of access to the roof is installed on the vehicle, then the ladder or access must be blocked by a suitable rope or other barrier while the earth station is deployed or in operation. The installer must provide this rope or barrier directly to the end user at the time of installation and advise the user to use it at all times when the earth station is deployed or in operation. Warning signs shall also be provided by the installer to the end user to be posted on the improper installation or due to the failure to provide required information to the end user.
6. Installers and end users will be deemed directly liable for any damages resulting from either of their failure to comply with the above rules. These rules are meant to ensure that extraordinary precautions and measures are used to prevent satellite interference or exposure to harmful radiation. C-COM reserves the rights to immediately **suspend without liability or previous notice** the operation of the earth station upon detection of a deviation from its installation or operational requirements until the deviation is corrected. In addition, C-COM reserves the right to suspend or cancel the Installer Certificate of any installer that has not fully complied with these installation requirements.

7. Further, the installer and end user may be directly liable for any damages resulting from any change undertaken by either of them. Including but not limited to, any modification of any part of the hardware, software, specific operational frequencies, the authorized satellite, or the size or other characteristics of the earth station supplied to them by C-COM or C-COM's authorized representatives. Warning signs shall be posted at prominent locations on the earth station informing all persons of the danger of harmful radiation from the earth station while it is deployed or while in operation.
8. The iNetVu® Mobile system may only be operated when the vehicle is stationary.
9. The installer must inform the end user that the vehicle must be stabilized during the transmission, to prevent movement of the vehicle for any reason, including movement of persons on or off the vehicle, or high winds. The installer shall advise the end user how to appropriately stabilize their vehicle.
10. Installers shall be liable for all damages if they fail to comply with the above mandatory conditions. This includes, but is not limited to damages caused by improper installation or due to the failure to provide required information to the end user.

Note 1:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this instruction manual, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Note 2:

This Class B digital apparatus complies with Canadian ICES-003.

Table of Contents

1. Introduction	9
2. Specifications	10
3. Minimum Recommended PC Requirements	10
4. Physical	11
5. Typical Connection Configuration	12
5.1. Typical Network Interface Connection	13
5.2. Typical USB Communication Interface	14
5.3. Typical Serial Communication Port Interface	15
5.4. Typical Connection – PC Free	16
5.5. System Diagram with Splitter	17
6. Installation	18
6.1. Rack Installation	18
6.2. iNetVu® Software – Software and USB Driver Installation	18
6.3. Setup	24
6.4. Serial RS232 Setup	24
6.5. Existing iNetVu® Mobile Platform Installation	25
7. iNetVu® Front Panel Operation	28
7.1. LED Definition	28
7.2. Manual and Automatic Controls Button Operation	29
7.3. LCD Screen and Navigator Keypad Operation	30
7.4. Front Panel Menu Navigation Tree	31
7.5. Opening Screen	32
7.6. Main Menu	32
7.6.1. MONITOR	33
7.6.1.1. MAIN	34
7.6.1.2. EL	36
7.6.1.3. AZ	37
7.6.1.4. PL	38
7.6.1.5. GP	39
7.6.1.6. SM	39
7.6.1.7. S1	40
7.6.1.8. S2	41
7.6.1.9. MB	42
7.6.1.10. IP	43
7.6.1.11. GW	44
7.6.2. OPERATION	44
7.6.3. CONF1	49
7.6.3.1. Password Protection	49
7.6.3.2. Configuration Menu (CONF1)	49
7.6.3.3. S1	50
7.6.3.4. SM1	51
7.6.3.5. SM2	52
7.6.4. CONF2	53
7.6.4.1. Configuration Menu (CONF2)	54
7.6.4.2. S2	55
7.6.4.3. MB	56
7.6.4.4. EL	58
7.6.4.5. AZ	60
7.6.4.6. PL	61
7.6.4.7. GP	63

7.6.4.8.	C1	63
7.6.4.9.	C2	65
7.6.4.10.	C3	68
7.6.4.11.	SG	68
7.6.4.12.	IP	69
7.6.4.13.	SR	69
7.6.5.	TST	70
7.6.5.1.	E&A&P	71
7.6.5.2.	DPY	72
7.6.5.3.	DPYQ	73
7.6.5.4.	DPY_C	73
7.6.5.5.	CP	74
7.6.5.6.	A_ACP	75
7.6.5.7.	M_ACP	75
7.6.5.8.	S_ACP	75
7.6.6.	INFO	75
7.6.6.1.	CC1	76
7.6.6.2.	CC2	76
7.6.6.3.	DVB_D	77
7.6.6.4.	DVB_P	77
7.6.6.5.	MOD	77
7.6.6.6.	SYS1	78
7.6.6.7.	ERR	78
8.	iNetVu® 7000 Series Software	79
8.1.	Setup Wizard	79
8.2.	Navigating Menus	80
8.2.1.	iNetVu Controls	80
8.2.2.	Maintenance	92
8.2.2.1.	Platform Parameters	93
8.2.2.2.	Search Parameters	95
8.2.2.3.	GPS and Compass Override	97
8.2.2.4.	Elevation Parameters	104
8.2.2.5.	Azimuth Parameters	105
8.2.2.6.	Polarization Parameters	107
8.2.2.7.	Maintenance Menu Buttons	109
8.2.3.	Configuration	111
8.2.3.1.	Target Satellite Parameters	112
8.2.3.2.	Reference Satellite Parameters	115
8.2.3.3.	Modem Parameters	116
8.2.3.4.	Beacon receiver	119
8.2.3.5.	Controller Parameters	120
8.2.3.6.	Log Data and Controller ID	123
8.2.3.7.	LNB LO & 22KHz Tone	124
8.2.3.8.	PC Application	125
8.2.3.9.	Configuration Menu Buttons	125
8.2.3.10.	Maintenance Test	126
8.2.4.	About	128
8.2.5.	Language	130
8.2.6.	Exit	130
9.	iNetVu® 7000 Series Controller Web Interface	131
9.1.	Navigating Menus	131
9.2.	Controls	133

9.3.	Configuration.....	134
9.4.	System Test.....	135
9.5.	About	136
9.6.	Firmware/Satellite Table Update	137
9.6.1.	Firmware Update	138
9.6.2.	Satellite Table Update	139
10.	Controller Connectivity	140
10.1.	Network Configuration Example	141
10.2.	How to Set Network Configurations on your PC.....	142
11.	Integrations and Compatibility Features.....	143
11.1.	GLONASS Navigation System.....	143
11.2.	Uplix Remote Management	143
12.	APPENDICES	144
12.1.	Appendix 1: Default Limits and Configuration Data Tables	145
12.2.	Appendix 2: Compass Direction and System Ref. AZ Table	148
12.3.	Appendix 3: LCD Table Summary.....	149
12.4.	Appendix 4: Router Configuration Example	153
12.5.	Appendix 5: Tooway Look-up Table.....	154
12.6.	Appendix 6: DC Input Power Cable Connectivity	158
12.7.	Appendix 7: Setup Wizard Configuration Steps	160
12.8.	Appendix 8: Declaration of Conformity.....	165

<p>Proprietary Notice: This document contains information that is proprietary and confidential to C-COM Satellite Systems, Inc., and is intended for internal and or C-COM Satellite Systems Inc. authorized partners use only. No part of this document may be copied or reproduced in any way, without prior written permission of C-COM Satellite Systems, Inc.</p>
--

1. Introduction

The iNetVu® 7000 Series Controller is a one-box, one-touch solution for satellite auto-acquisition. Designed to interface with a number of Satellite Modems, iNetVu® VSATs, and DVB-S/DVB-S2ACM Receivers, the iNetVu® 7000 Series Controller is an easily configurable and operated antenna controller unit which now comes with the combined GPS/GLONASS Satellite Navigation System.



Fig. 1: *iNetVu® 7000 Series Controller*

The iNetVu® 7000 Series Controllers are fully functional and configurable straight out of the box solution. No PC or monitor required. An I/O GLONASS/GPS Module inside and the capability to connect an external GLONASS/GPS device via serial port, a DVB-S2ACM/CCM Tuner, an onboard LCD displaying real-time system status, and a Keypad Navigator, makes using the iNetVu® 7000 Series Controller extremely simple.

The iNetVu® 7000 Series Controllers along with any iNetVu® platform can work as a complete stand-alone unit. No modem or RF splitters are required for satellite acquisition. The LNB can be powered straight from the controller.

Equipped with a 32-Bit Micro-Controller, the iNetVu® 7000 Series Controllers obtain extremely precise readings from all axes resulting in quicker and more reliable satellite acquisition time.

The 7000 Series Controllers are compatible with iNetVu® legacy systems in the field. Existing users can easily upgrade to this new line of controllers.

2. Specifications

Dimensions:	Width: 17.1" x Depth: 11.0" Height: 2.0"
Weight:	9.9 lbs. (4.5 kg)
Operating Temperature:	-20°C to +50°C
Elevation Output:	12VDC, 15A (Max.)/24 VDC, 8A
Azimuth Output:	12VDC, 10A (Max.)/24 VDC, 6A
Polarization Output:	12VDC, 3A (Max.)/24 VDC, 2A
Power Consumption (Idle):	12VDC @ 1A /24 VDC @ 0.5A
Universal AC Input:	100 – 240 VAC, 2.2 – 1.1 A, 50/60 Hz
Motor Control Connector:	9 Position Circular AMP Connector
Signal Input:	Female DB26 Connector
GPS Connector:	SMA (<u>S</u> ub- <u>M</u> iniature Version <u>A</u>)
Rx Connector:	Type F RG6
PC Interface:	USB Interface Network Interface Serial Interface Web Interface
Front Panel Interface:	Automatic and Manual Control Keypad LCD Screen and Keypad Navigator

Tuner Specifications

RF Input Range:	950MHz to 2150MHz
Input Signal Level:	-65dBm to -25dBm
Input/Output Impedance:	75 Ω
Symbol Rate:	~1 to 45Msps

****NOTE**** Controller specifications include/cover model 7000B, 7000C, 7024A, 7024B and 7024C

3. Minimum Recommended PC Requirements

Operating System	Windows XP, Vista, W7 and W8
CPU	2.0 GHZ
Memory (RAM)	1.0GB
MSN.Net Framework	3.5 installed

4. Physical

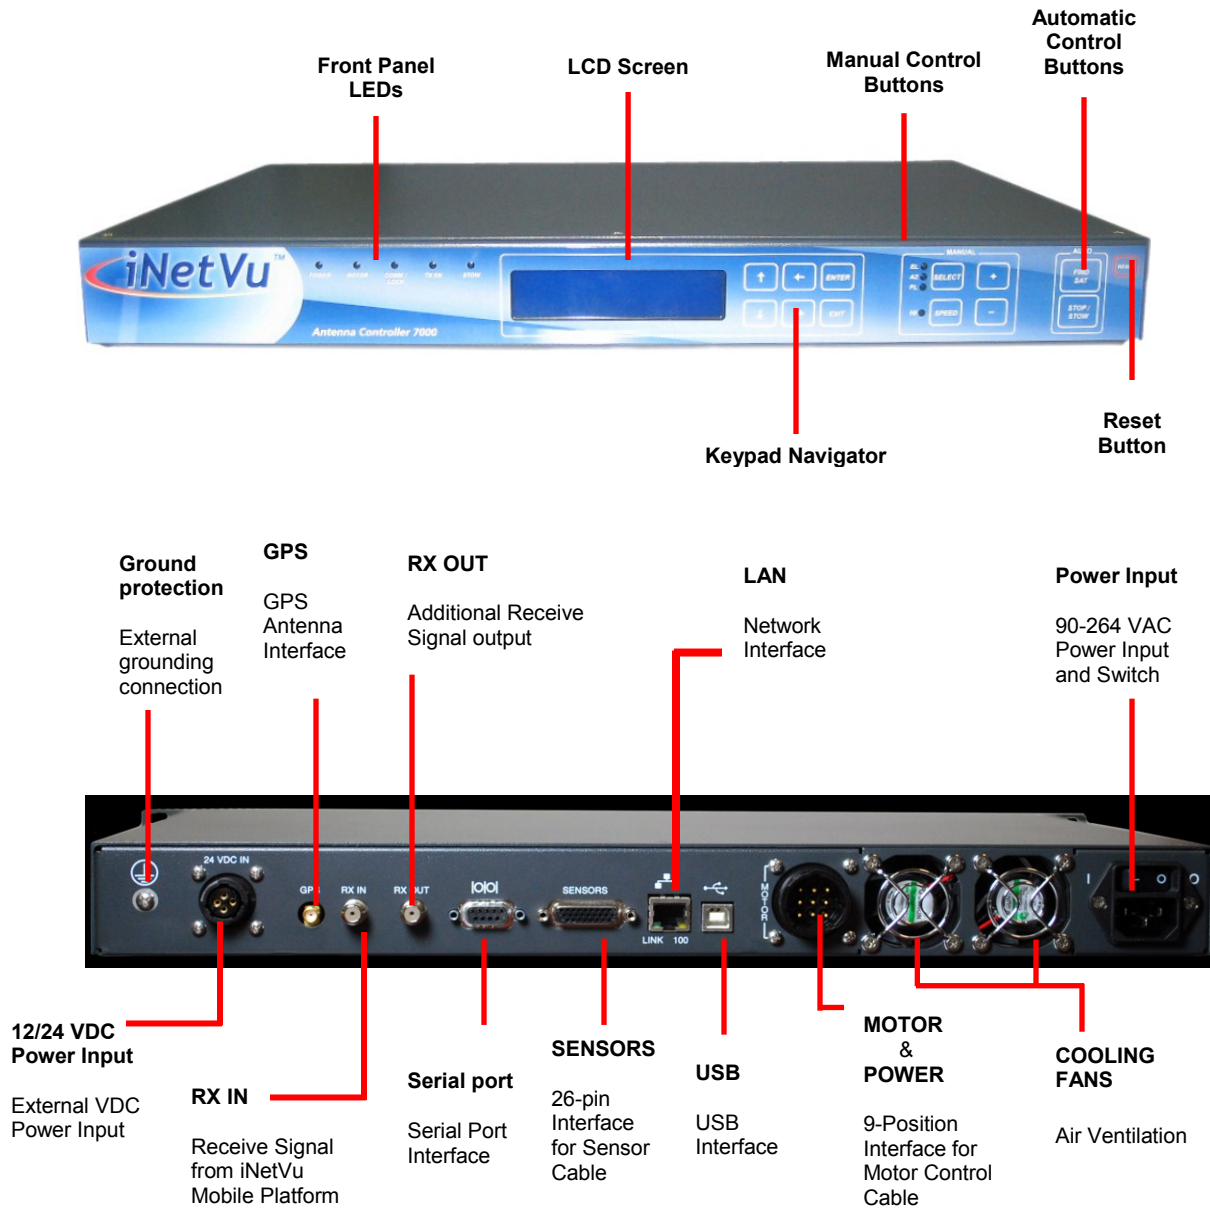


Fig. 2: iNetVu® 7000 Series Front and Rear Panel

Note: VDC Power Input feature is available in the 7000C and 7024C Models Only. See Appendix for VDC power input external cable connectivity wiring.

5. Typical Connection Configuration

The typical connection configuration for each service will be the same regardless of the Satellite Modem / VSAT. However, the configuration parameters for Satellite Modem / VSAT Communication will differ depending on service. See iNetVu® System Manual for configuration procedures corresponding to the service used.

CAUTION

This situation or practice might result in property or equipment damage. Ensure Sensor and Motor cables are connected prior to powering on 7000 Series Controller. Do not connect or disconnect cables once controller has been powered on. It is recommended that controller is properly grounded at all times

NOTE: The 7000C/7024C controllers must use the GLONASS/GPS antenna that was shipped with the system for optimal GPS signal reception.

5.1. Typical Network Interface Connection

7000C/7024C must use the GLONASS/GPS antenna that was shipped with the controller.

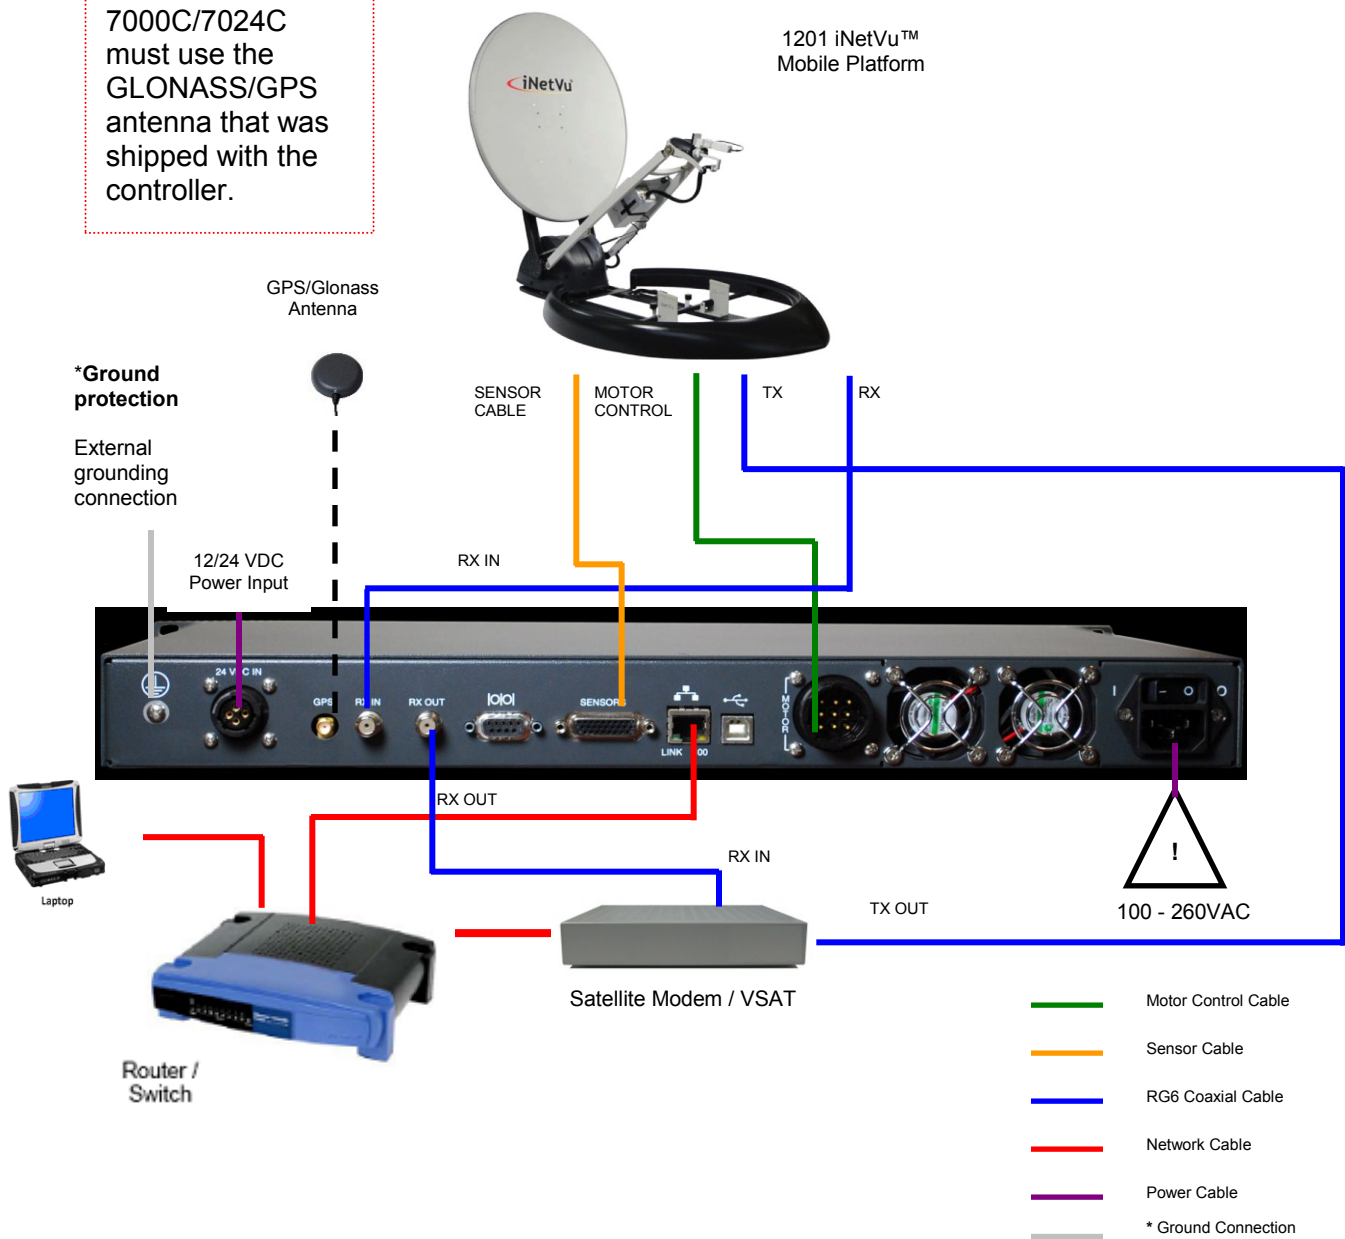


Fig. 3: iNetVu® 7000 Controller Typical Connection Configuration

***Recommended for proper grounding of iNetVu® systems.**

Note: VDC Power Input feature is available in the 7000C and 7024C Models Only. See Appendix for VDC power input external cable wiring.

5.2. Typical USB Communication Interface

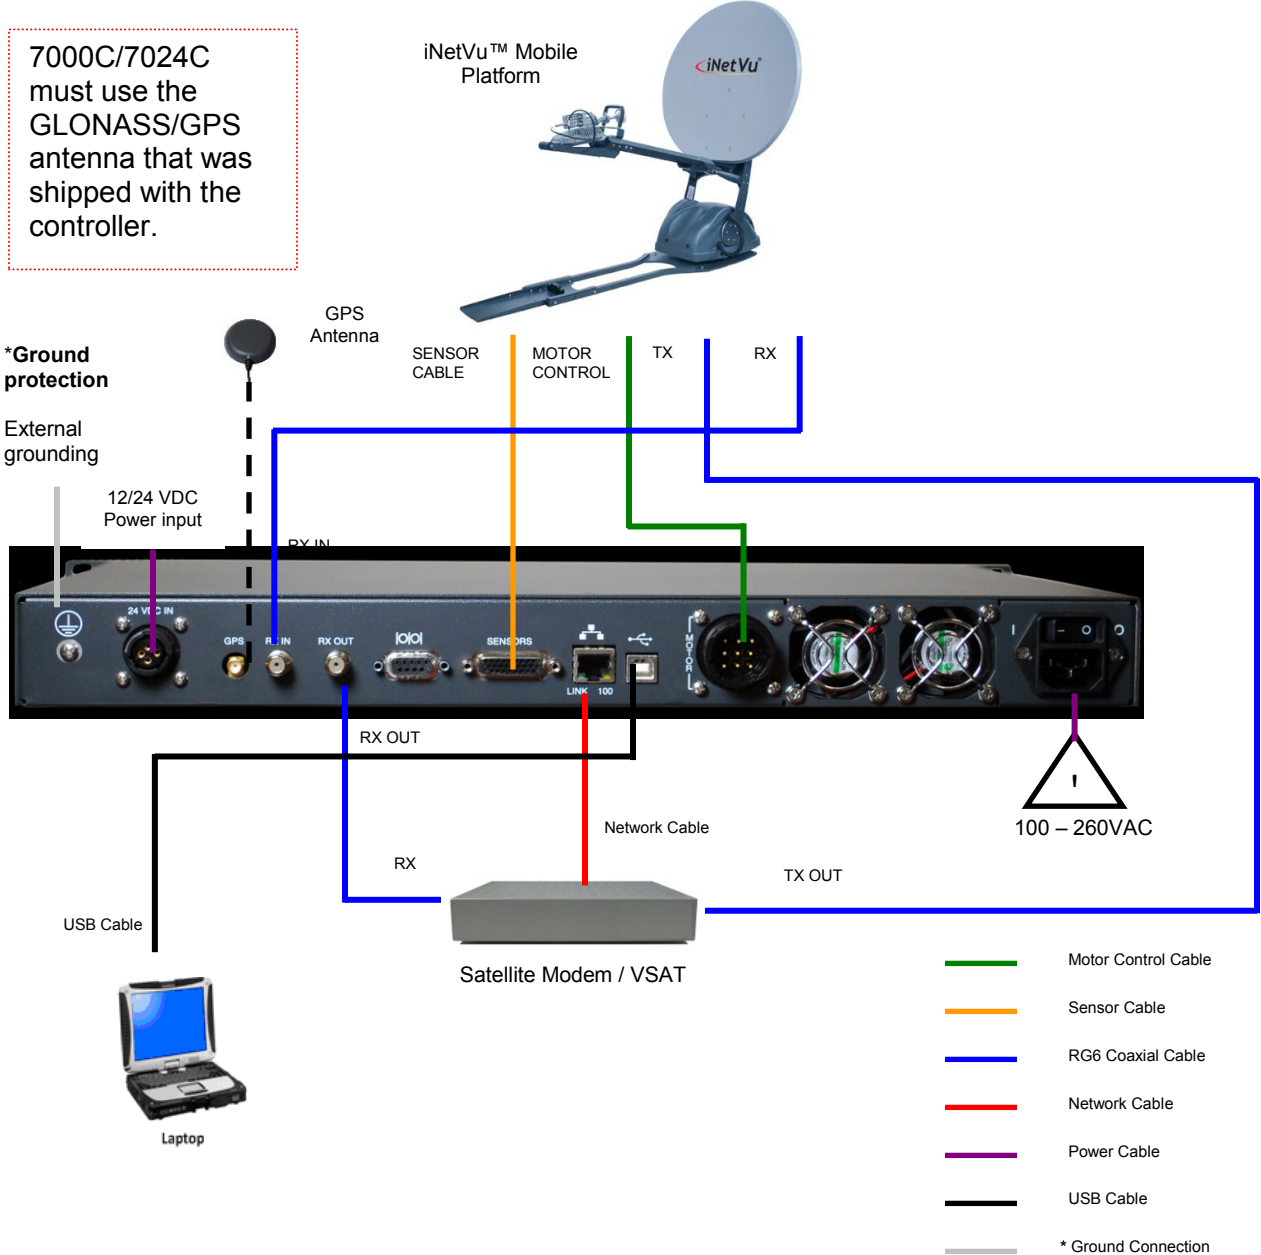


Fig. 4: USB Configuration Interface

***Recommended for proper grounding of iNetVu® systems.**

Note: VDC Power Input feature is available in the 7000C and 7024C Models Only. See Appendix for VDC power input external cable wiring.

5.3. Typical Serial Communication Port Interface

7000C/7024C must use the GLONASS/GPS antenna that was shipped with the controller.

iNetVu™ Mobile Platform

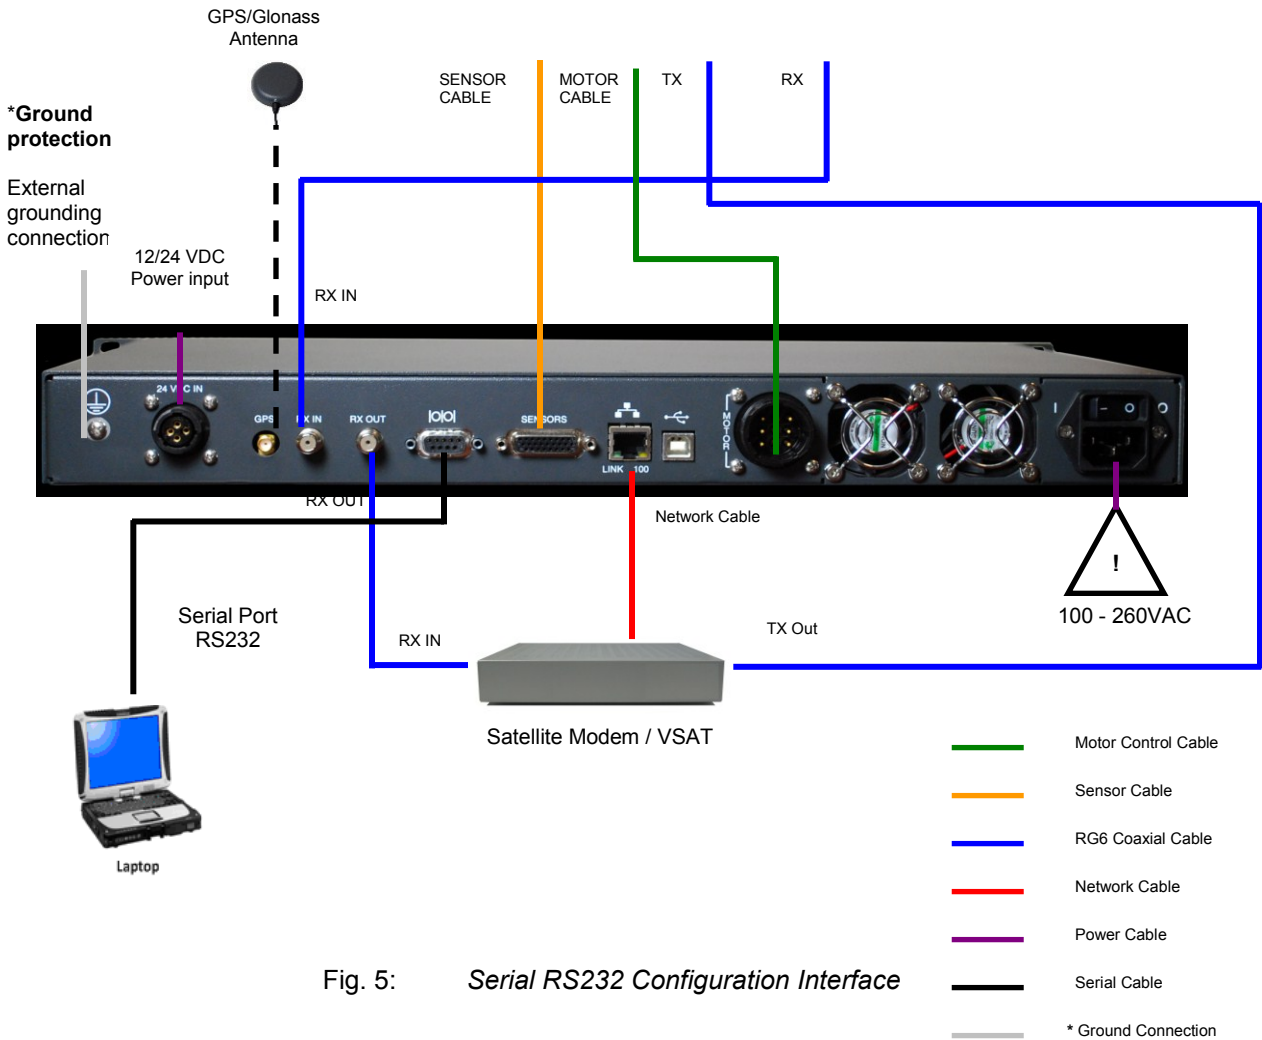


Fig. 5: Serial RS232 Configuration Interface

*Recommended for proper grounding of iNetVu® systems.

Note: VDC Power Input feature is available in the 7000C and 7024C Models Only. See Appendix for VDC power input external cable wiring.

5.4. Typical Connection – PC Free

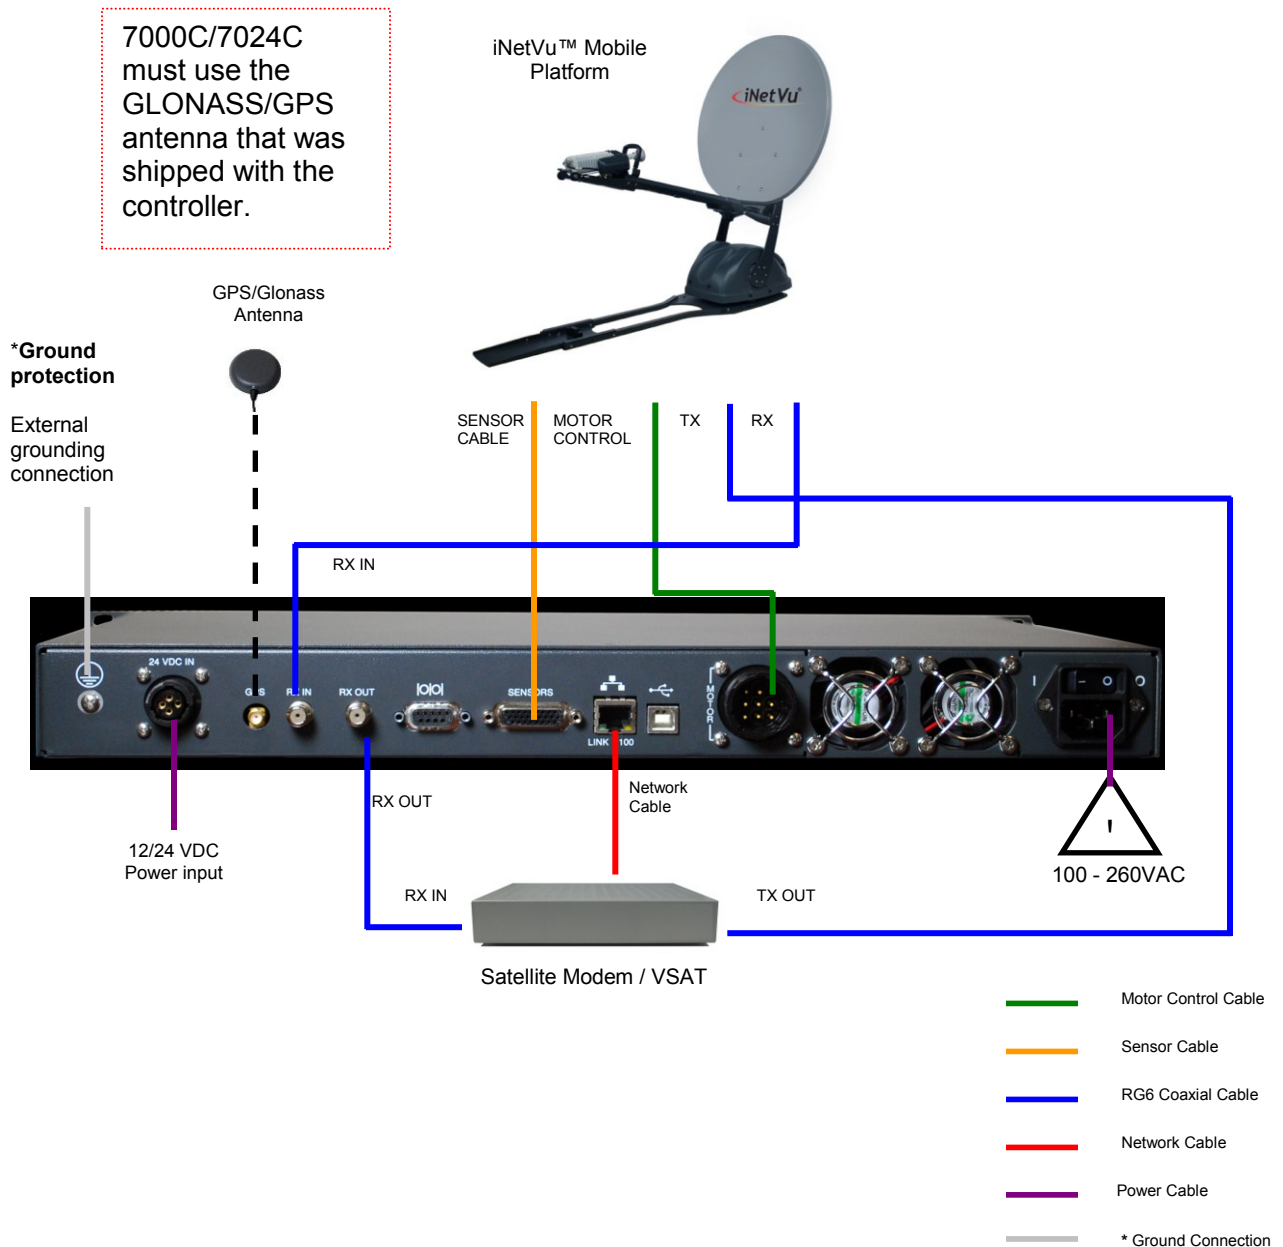


Fig. 6: iNetVu® 7000 Series Controller PC Free Connection Configuration

***Recommended for proper grounding of iNetVu® systems.**

Note: VDC Power Input feature is available in the 7000C and 7024C Models Only. See Appendix for VDC power input external cable wiring.

5.5. System Diagram with Splitter

****Please Note:** Using a splitter is optional. If the user does not wish to power the LNB from the Controller, a splitter must be used such that power is passed to the LNB from the VSAT Modem (or alternate power source).

7000C/7024C must use the GLONASS/GPS antenna that was shipped with the controller.

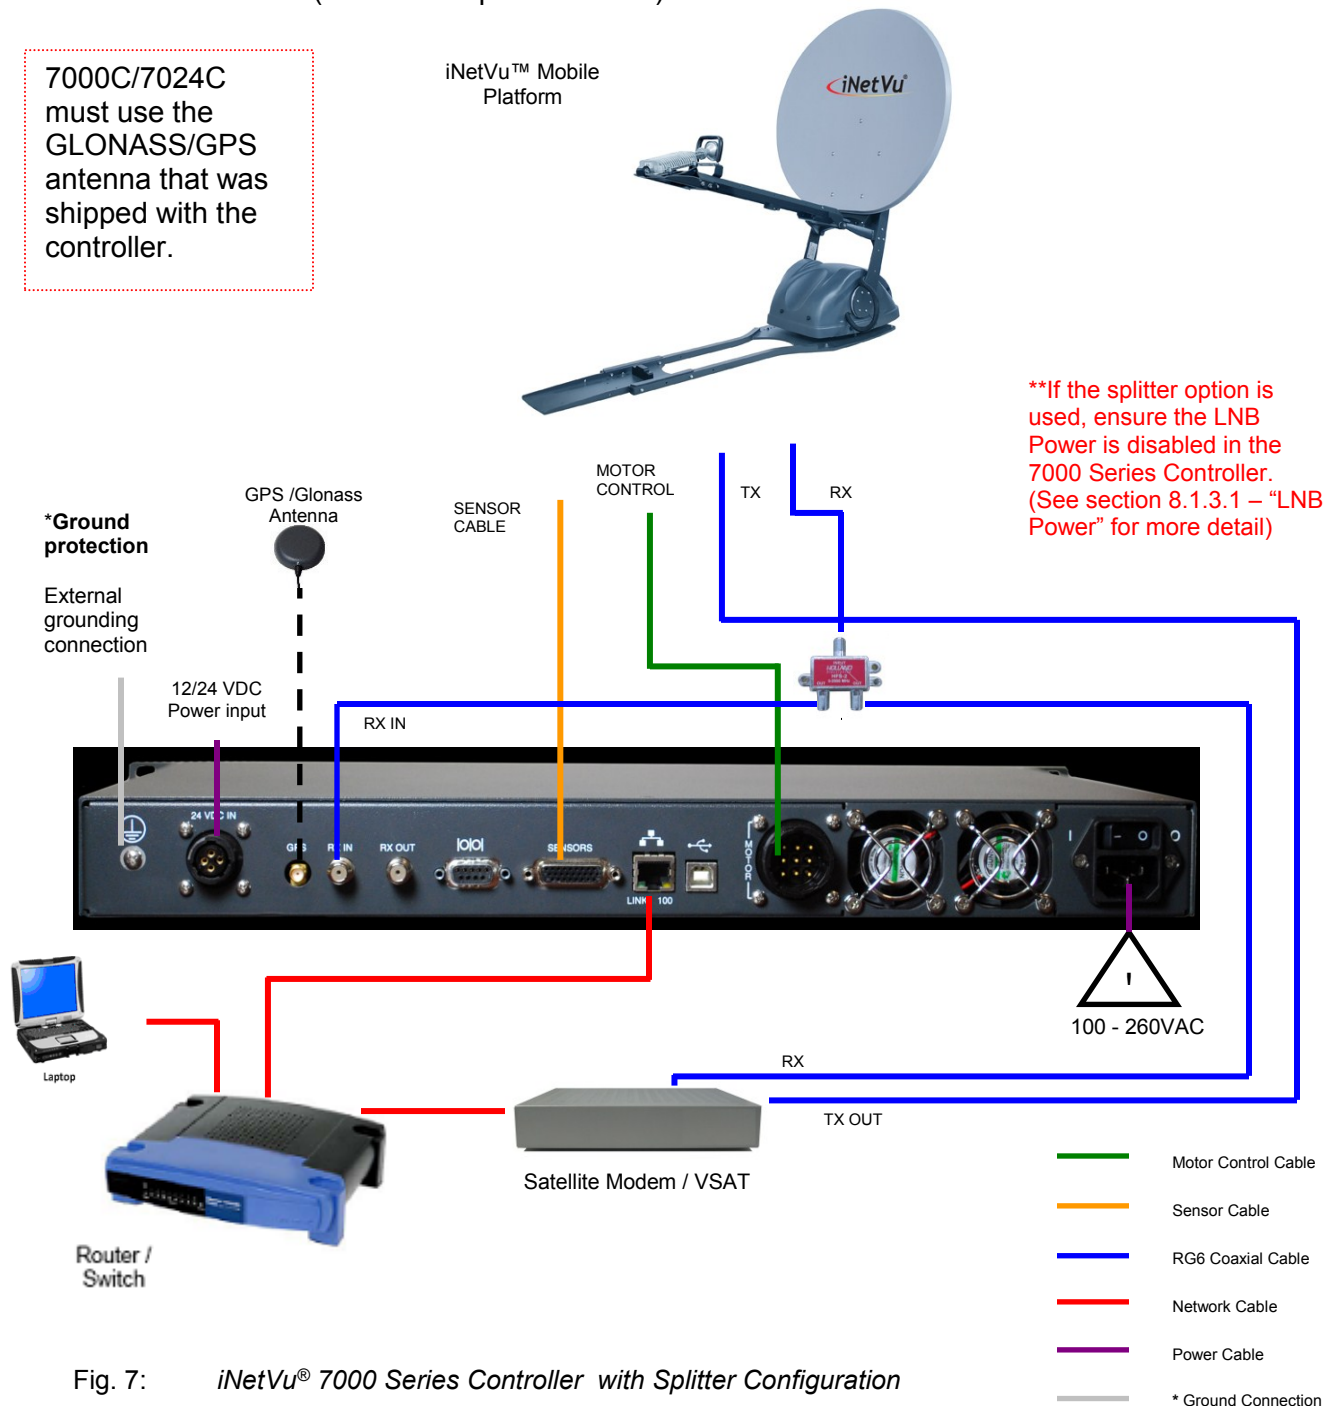


Fig. 7: iNetVu® 7000 Series Controller with Splitter Configuration

***Recommended for proper grounding of iNetVu® systems.**

Note: VDC Power Input feature is available in the 7000C and 7024C Models Only. See Appendix for VDC power input external cable wiring.

6. Installation

The iNetVu® 7000 Series Controllers are shipped pre-configured and calibrated with the iNetVu® Mobile Platform and service which you plan to use. Only configuration of the Satellite Modem / VSAT Communication parameters and the satellite you wish to find is required.

*****Note:** controllers may have 4 or 5 digit serial number which is required to be entered for correct default configuration values.

6.1. Rack Installation

The iNetVu® 7000 Series Controllers include attachable “ears” which make the iNetVu® 7000 Series Controllers configurable for rack-mounted installation.

If you are installing the iNetVu® 7000 Series Controller onto a rack, ensure that you use supporting rails or a shelf to support the weight of the iNetVu® 7000 Series Controller, and use the provided “ears/brackets” to fasten the unit to the rack face.

6.2. iNetVu® Software – Software and USB Driver Installation

It is recommended that the previous software be uninstalled before installing latest software version if upgrading. See minimum recommended pc requirements for most favorable working system.

Warning!! Please make sure you have administrative rights (privileges) on the computer before you continue the installation. The setup wizard will display a warning Contact your system administrator for additional info.

Note: The application will exit if controller communication is via USB and Modem Configuration Type is set to HN_KA during any power recycle or loss of communication (cable unplugged) without warning. This will NOT hold true if controller is in Firmware update mode. More info under Maintenance Menu Buttons section.

1. Windows Vista and Windows 7/8 with 64-bit Operating System must disable UAC (User Access Control) when using Ethernet or Serial COM interface to communicate between controller and computer.


Please Note: Do not connect the Controller via USB until the drivers and software have been installed

2. Install the software from the Memory Stick or downloaded file by double clicking on iNetVuSetup.exe and follow the installation wizard.



Note: The Driver installation will be done in two stages. FTDI CDM Drivers and, USB Drivers.


3. Windows CMD will appear in the background (for iNetVu USB drivers) and close indicating drivers' installation in progress. Click on Extract.

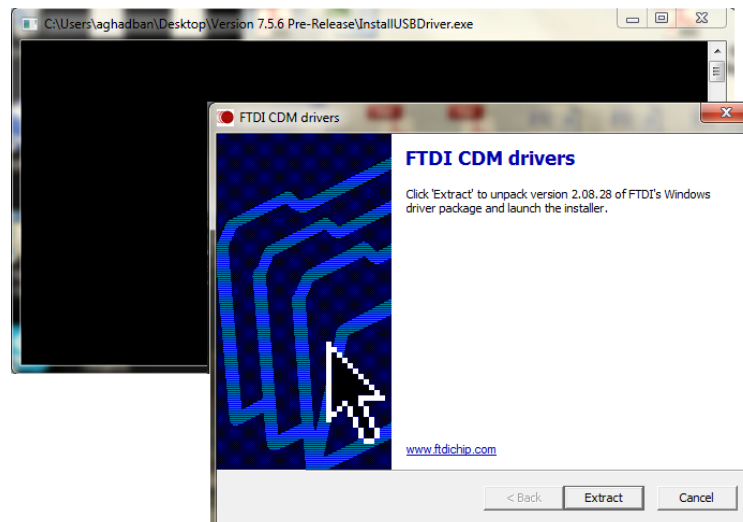



- Click **Next** on “Device Driver installation Wizard” window. Two windows may appear one for FTDI and one for Legacy click Next on both.




- The installation will begin, click Continue Anyway on the Windows Logo testing popup if prompted.

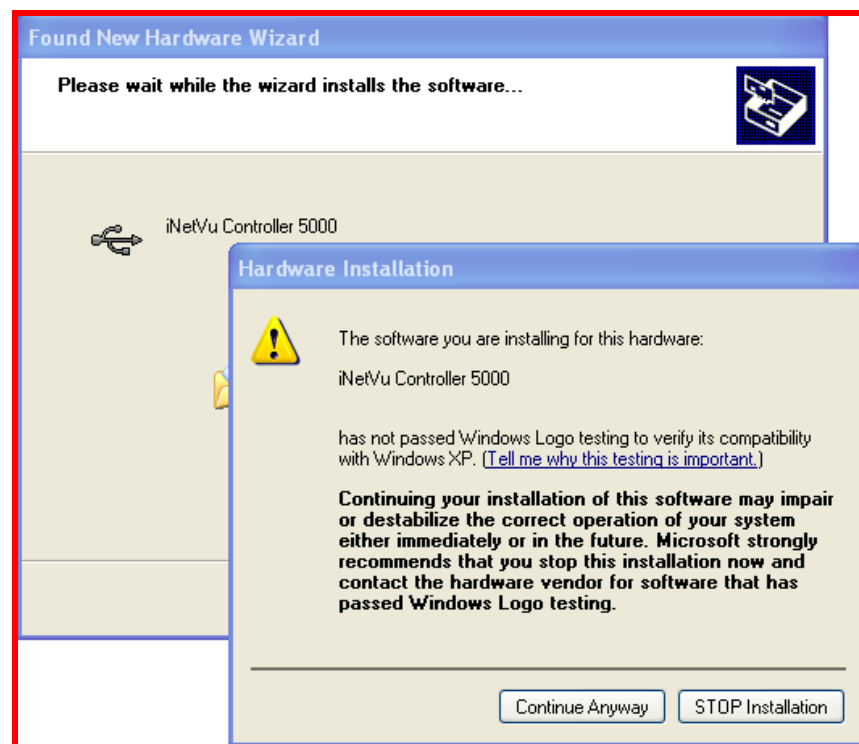


6. Click the Finish button (twice) to complete the USB drivers' installation.

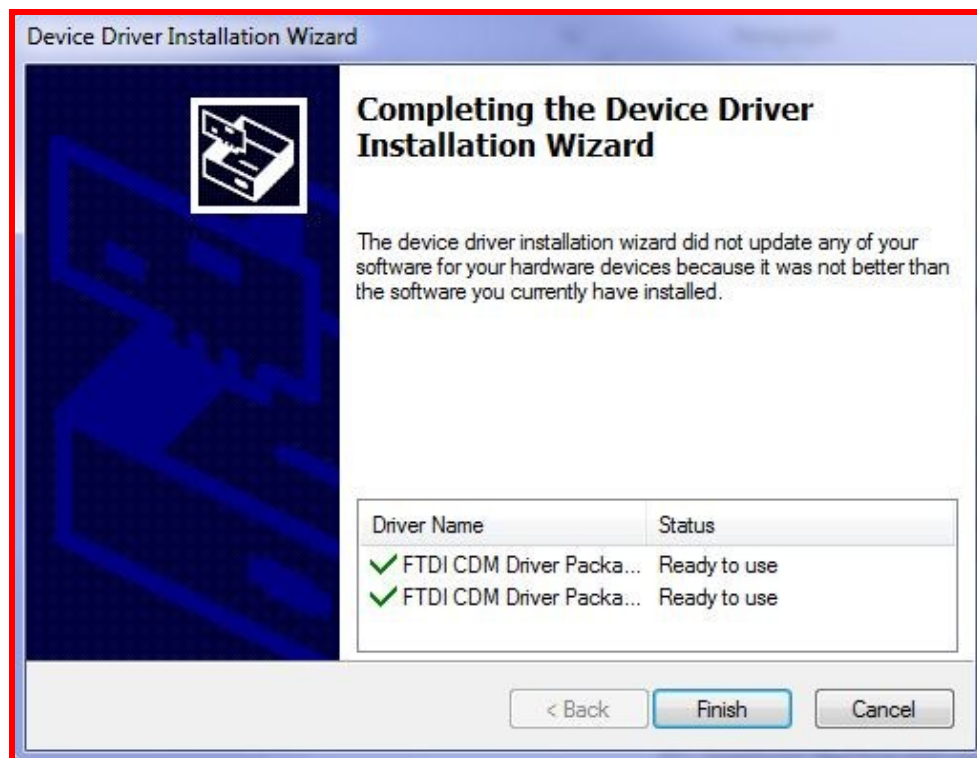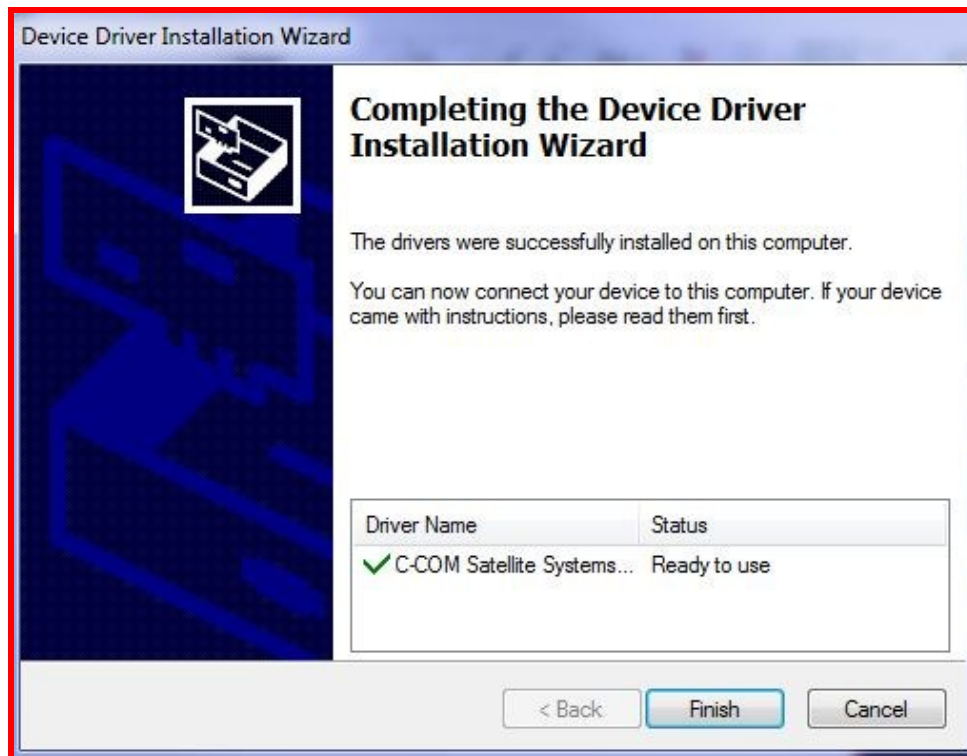


7. The iNetVu Mobile software will now begin, click on the **Next** button.

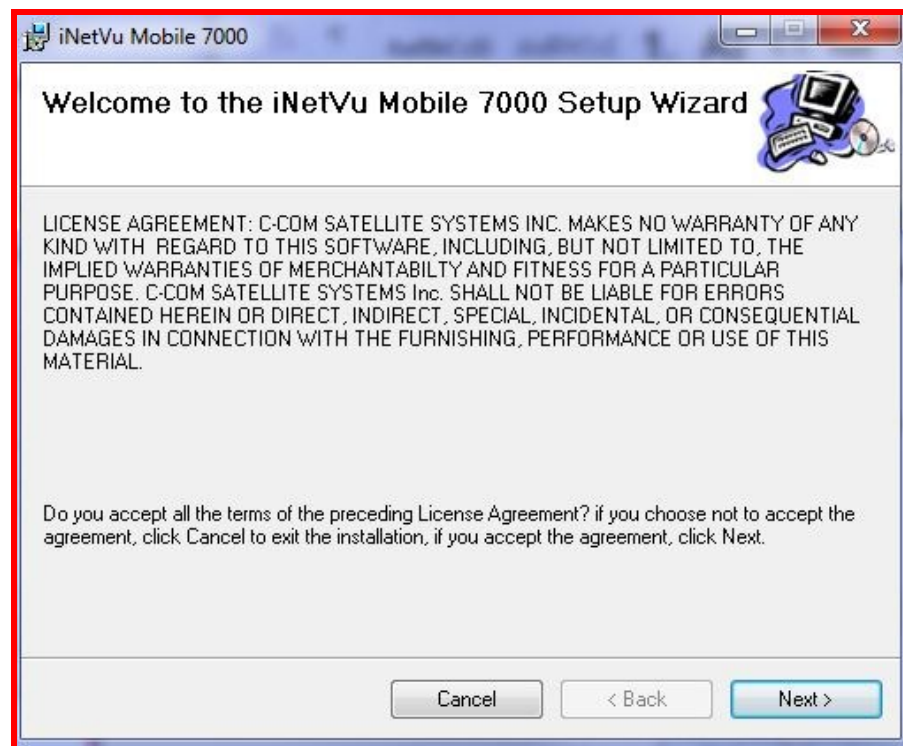


8. Click the **Next** button; leaving the default installation path as is "C:\Program Files\CCOM\iNetVu Mobile 7000\", this may be changed if desired.

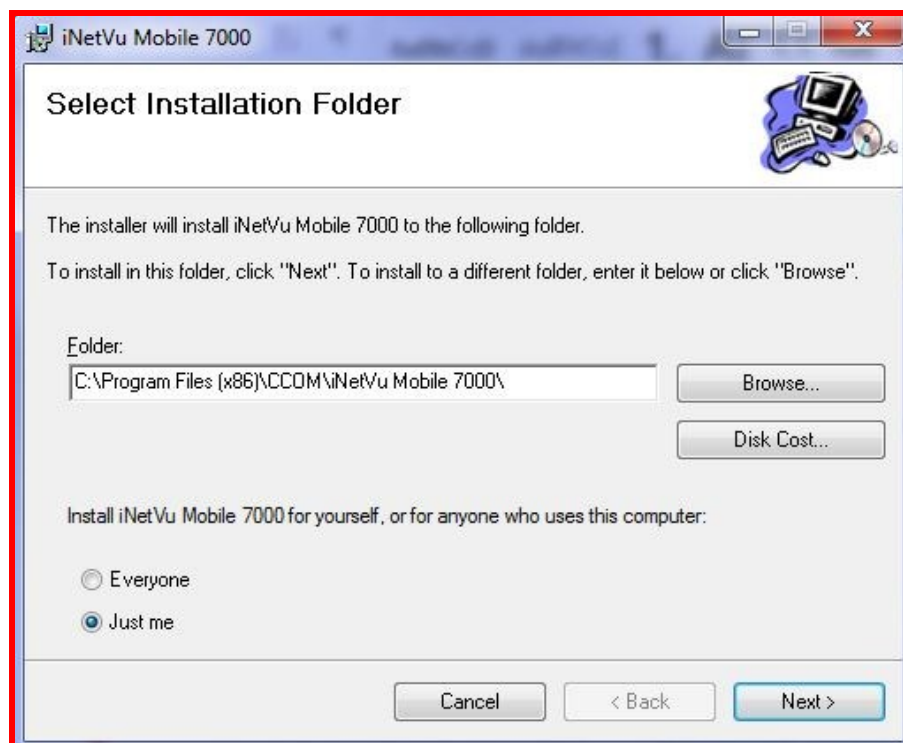

9. Continue with the software installation; click the **Close** button to complete the installation.

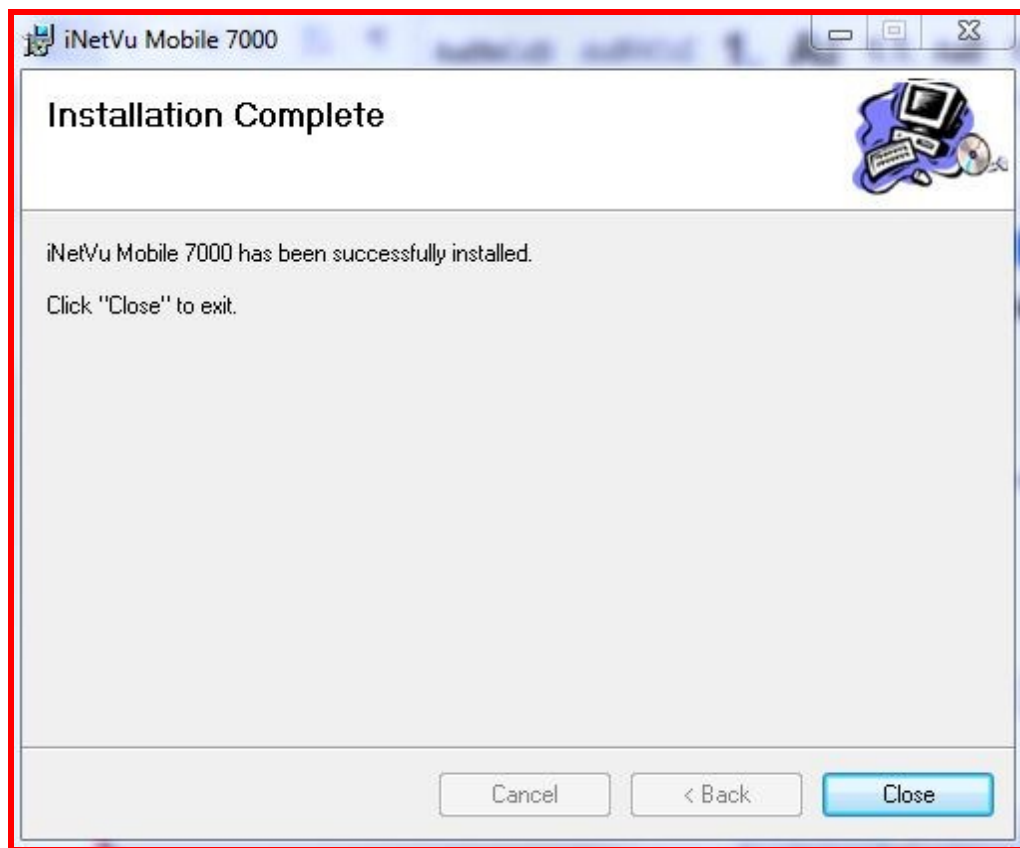

10. Now that the drivers and software package has been installed, connect the iNetVu 7000 Controller via USB to your PC.
11. **Windows Vista and 7** users, the drivers should install automatically without any further user action when the controller is powered up.

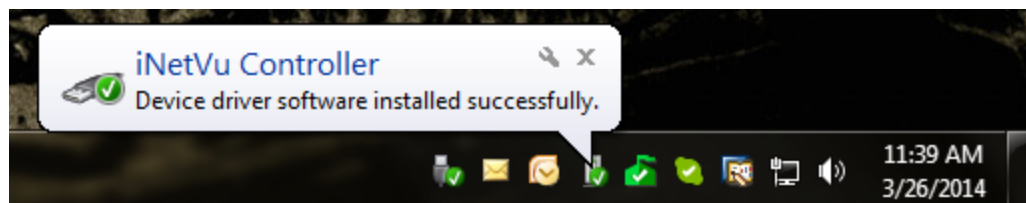

6.3. Setup

1. Connect all of the cables and components as depicted by the previous section. Select connections that are best suited for your application.
2. Power on the iNetVu® 7000 Series Controller.
3. Set your external PC IP on the same subnet as the iNetVu® 7000 Series Controller (Default controller IP Address of the 7000 is 192.168.0.2)
4. Refer to the appropriate User Manual for service based system configuration
5. Controller should be power cycled after each and every configuration change.

6.4. Serial RS232 Setup

1. Power ON the controller and connect the RS232 cable from the PC to the Controller.
2. Refer to section 5.3 (RS232 setup diagram) before continuing with the RS232 serial port connection.
3. Set the C2 option in the controller to **PC---9600**, to do this advance to **CONF2** option on the controller key pad and depress **ENTER** button; in the password field enter the password, if this was changed from the default. If default password has not been changed press up ↑ arrow followed by the **ENTER** button.
4. Navigate to the **C2** menu option and press the **ENTER** button.
5. Using the up ↑ arrow button change the C: option to read **C: PC---9600** press **ENTER**.




Fig. 8: C2 Screen from Configuration for RS232 Communication

Press the EXIT button 2 times, you will receive a prompt to save the configuration select **Y** for yes and press **ENTER**. The setting change has been completed on the controller side which will automatically update within the software.

6. Launch the Application Software from your computer.
7. Advance to the Maintenance screen, browse down to the Controller section and ensure that the Interface option is set to **PC**, the **BAUD** rate is set to **9600** and the COM Port is set to **COM1** in PC Application section.

Controller Configuration

TCP/IP Settings

IP Address: 192.168.100.2

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.0.1

Site Name:

☐ Enable DHCP

COM Port Interface

Interface: DEBUG

Baud Rate(bps): 19200

Inclined Orbit Configuration

Re-Peaking Time: DIS

Max ES/NO: 255

Feature

☒ Transmit DC Enable

☐ Motion Protection

☐ Enable iDirect Broadcast

☒ Automatic Tx Disable

Beep: D

☐ Unattended Operation

Log Data and Controller ID

Controller ID: 7873

Log Data: 1H

LNB

LNB_LO: 10.6

LNB 22KHz Tone: ☐

PC Application

ACU IP Address: 192.168.0.2

COM Port: COM2

Fig. 9: Configuration screen for controller RS232 options

8. The iNetVu® 7000 Series Controller is now set to communicate via RS232 serial connection.

****Note:** as a rule of thumb you should always be running the latest iNetVu Firmware version (version 7.5.7.0+ or greater) to get full functionality of the features. In some cases the latest boot loader (7.6.0.0 at time of document creation) is also required to compliment the software features.

6.5. Existing iNetVu® Mobile Platform Installation

If you are replacing an existing iNetVu® Controller with Newer iNetVu® 7000 Series Controller, you will need to perform an Azimuth and Polarization Calibration (PL Calibration not required on platforms with Tilt Sensors 980/1200 version 3.0+ or 1800 version 2.0+ and all new generation platforms) and set the iNetVu® Mobile Platform Serial Number prior to searching for satellite.

LCD Method

1. Advance to the Operations menu using the '←' and '→' arrows on the keypad.
2. Advance to "AZC" using the '←' and '→' arrows and press the "Enter" key on the keypad. IMS will begin the Azimuth Calibration Function. Verify that there are no obstructions that would impede a full Azimuth sweep.
3. After this is complete, go back to the Operations menu by pressing the "Exit" button to navigate backwards.
4. Advance to "PLC" using the arrows and select the "Enter" key on the keypad. IMS will begin the Polarization Calibration Function. Verify that there are no obstructions that would impede a full Polarization sweep. "PLC" is not valid with some iNetVu® Mobile Platform and thus may be skipped.
5. After this is complete, navigate to the "Conf2" menu from the keypad. The "Exit" button on the keypad can be used to navigate back to the original menu, and the "Enter" button will allow the user to enter into a menu. (default Conf1 menu access password "**password**")
6. Navigate to "C2" in the configuration menu and select the "Enter" button on the keypad.
7. A screen containing Console Port, Platform Type, Platform Version and Serial Number Data will appear. Navigate to the far bottom right section of the screen where the platform description appears (i.e. A12B for 1.2 mobile unit), and click on the '↑' arrow once. This action will allow you to make modifications to that section.




Fig. 10: C2 Screen from Configuration

8. Next to the dish size (i.e. A12B, etc.), there exists a platform hardware version followed by 4/5-digit platform serial number as outlined in the figure above. Change version number and the iNetVu® Platform Serial Numbers by using the '→' to advance between digits, and the '↑' or '↓' to change the value of the digit. The iNetVu® Mobile Platform Serial Number and Hardware Version will be found on your iNetVu® Mobile Platform ONLY the LAST 5 DIGITS need be entered for the Serial No. Older systems may have ONLY 4 DIGITS.

Note: When configuring iNetVu® system you must enter serial number first then select platform type, not following this priority order may result in inaccurate values.

-
9. Click the “Enter” button on the keypad once the serial number has been entered, and exit the configuration menu by click the “Exit” button twice. One time to return to the configuration screen and one more time to exit the configuration screen.
 10. Once prompted if you would like to save the configuration, press the ‘↑’ button such that ‘Y’ is selected for “yes”, and press, “Enter”.

That’s it. You have successfully completed the installation and setup of the iNetVu® 7000 Series Controller and are ready to find satellite.

7. iNetVu® Front Panel Operation

7.1. LED Definition



Fig. 11: *iNetVu® 7000 Series Controller Front Panel LED Panel*

POWER

Solid light indicates power is ON.

MOTOR

Flashes when any of the three motors are instructed to move.

COMM / LOCK

Indicates Communication between Controller and Modem, it also indicates communication between GPS and controller. NA must be selected when checking GPS communication status.

Slow blinking (2 sec. intervals) indicates no communication.

Slow blinking (1 sec. intervals) indicates idle communication.

TX EN

Solid Light indicates transmitter has been enabled.

STOW

Solid Light indicates iNetVu® Mobile Platform Elevation Axis (EL) is in the stowed position.

7.2. Manual and Automatic Controls Button Operation

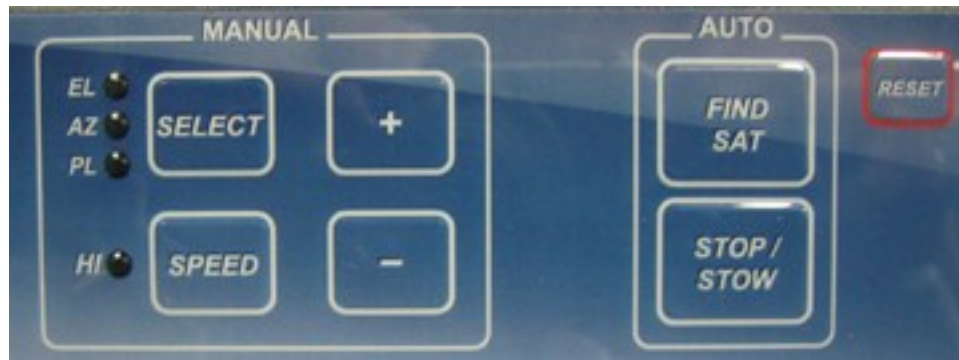


Fig. 12: iNetVu® 7000 Series Controller Front Panel Buttons

How to Find Satellite

Press “FIND SAT” Button.

iNetVu® Mobile Platform will automatically attempt to locate, lock, peak and enable the system onto the configured satellite or last satellite to lock/enable system. Pressing the FIND SAT button for 1 second or less will initiate satellite searching routine (on SAT0, default) or last satellite searched. Holding down the FIND SAT for 3 seconds or more will bring up the satellite menu and display choice of 5 satellites or 4 Beam Colors to select from. Once in the satellite menu pressing the FIND SAT will search on the selected Satellite, Beam or Beam Color. The LCD keypad can also be used to maneuver to the required satellite, use the arrow keys (right or left) to move over to the required selection and press FIND SAT will launch satellite search routine on that selection.

Search routine will ignore GPS and RF status until after compass heading has been read to reduce search time. If GPS and RF conditions not met after 60 seconds the search will fail and a message will be displayed.

How to Stow the Antenna

Press “STOP/STOW” Button, and hold for 2 seconds.

iNetVu® Mobile Platform will automatically re-center itself and lower into the stow position.

How to Stop

Press “STOP/STOW” Button (do not hold). Stops all ongoing operations such as motor movements and automatic functions, like Find Satellite and Stow.

How to Manually Move the Mobile Platform

Press “SELECT” to select the axis of motion you wish to move. The LED corresponding to the axes chosen will light up. Press “SPEED H/L” to select the speed (LED ON – HI, LED OFF - LOW). Press and release “+” and “-” for short duration movement & angle readings. Press and hold “+” and “-” for long duration movement. **Warning:** User must watch antenna limit sensors (EL UP/ST, AZ ST, PL ST) when using manual controls. See LCD ‘Monitor’ section explanation for more details.

How to Turn ON/OFF the Controller

Turn off the AC power switch on the back panel of the iNetVu® 7000 Series Controller.

When using DC external power source, the DC input power ON/OFF is controlled by the external source.

How to Reset the Controller

Press "RESET" Button
Power-cycles the iNetVu® Controller
DOES NOT reset default values

7.3. LCD Screen and Navigator Keypad Operation

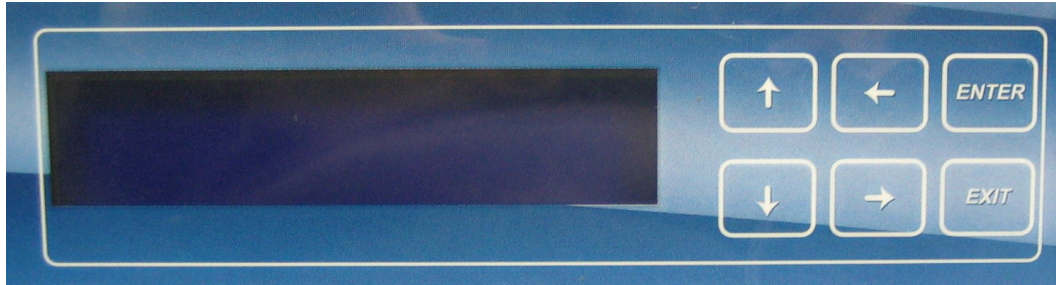
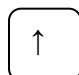

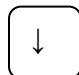
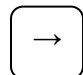




Fig. 13: *iNetVu® 7000 Series Controller LCD and Keypad Navigator*

- | | | |
|--|---|---|
|  |  | Used to move the cursor position. |
|  |  | |
| |  | Used to select a displayed function |
| |  | Used back out of a selection and return the display to the previous selection |

7.4. Front Panel Menu Navigation Tree

The following is a tree consisting of a list of the menu options available with the LCD interface.

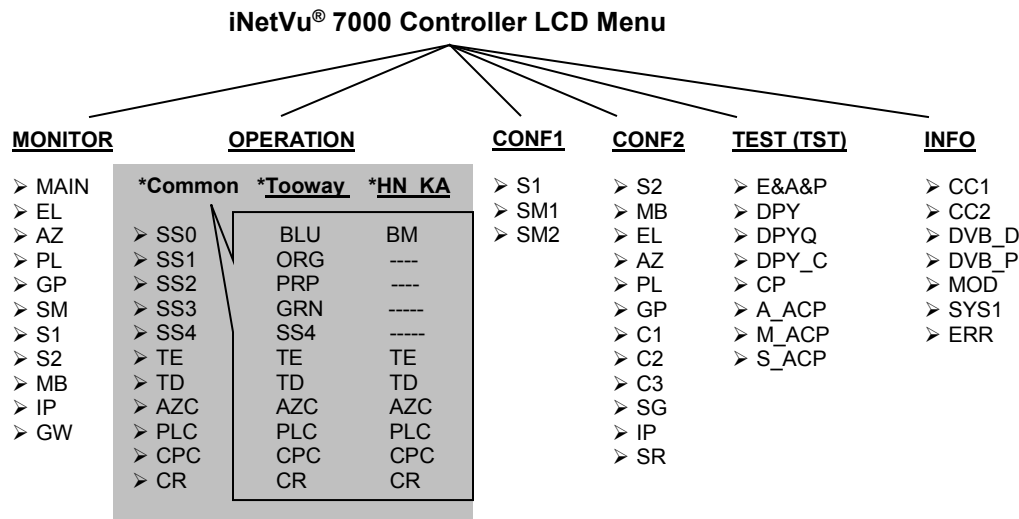


Fig. 14: iNetVu® 7000 Series Controller LCD Menu Options

***Note:** These are not sub-menus and do not exist under the OPERATION menu. They are merely used to identify the different sub menu options under the OPERATION menu depending on the modem service that is configured.

Note: In order for the user to make changes to configuration data in a sub-category of the “CONF1 or CONF2” menu, or apply changes to data in a sub-category of the “TEST” menu, the ‘↑’ button on the keypad must be pressed above the data portion in the sub-category before changes can be made.

For example, if the user wishes to change the longitudinal value of the target satellite position in the S1 subcategory of the “CONF1” menu. The steps involved include:

- 1) Navigating to the ‘CONF1’ menu on the main screen using the ‘→’ button.
- 2) Press the “ENTER” button once the cursor is above the ‘CONF1’ menu.
- 3) At this point, the user should be in the ‘CONF1’ menu after entering password and can select any of the sub-categories available. Press the “ENTER” button once the cursor is above the ‘S1’ sub-category.
- 4) To change the longitudinal coordinate of the target satellite, navigate to the area of where this information is located, and press the ‘↑’ button once to enable modification.
- 5) At this point, the user can change the character values of the longitudinal coordinate by using the ‘↑’ and ‘↓’ buttons. The ‘→’ and the ‘←’ buttons can be used to navigate between characters.

6) Press the “ENTER” button once complete.

7.5. Opening Screen

When powering the iNetVu® 7000 Series Controller, the LCD will display one of the following during the initial boot-up sequence.



Fig. 15: LCD Opening Screen

7.6. Main Menu

The iNetVu® controller is ready for usage when the following is displayed on the LCD.

There are Six (6) Main Menu items to select from: **MONITOR**, **OPERATION**, **CONF1**, **CONF2**, **TST**, and **INFO**.



Fig. 16: LCD Main Menu

MONITOR	This menu branch allows the user to monitor the status of the iNetVu Mobile Platform, its components, and displays information concerning the iNetVu 7000 Series Controller and the Satellite Modem / VSAT.
OPERATION	This menu branch allows the user to perform miscellaneous functions, such as enabling/disabling the transmitter, Find Satellite, Stow, and perform axes calibrations, etc.
CONF1	This menu branch allows the user to configure and save the 5 Satellite parameters with 5 Beacon settings as well as the search mode.
CONF2	This menu branch allows the user to configure the iNetVu® System, including platform, modem parameters, and controller.
TST	This menu branch allows the user to run demo test on all three axes, as well as check/test compass, deploy the antenna, and ACP testing.
INFO	This menu branch allows the user to verify the 7000 Series controller / modem settings, such as software versions, hardware versions, DVB module, and error codes.

7.6.1. MONITOR

This section describes briefly what each item and menu represents. For a more detailed explanation of each menu, see the configuration section of this manual. (Section 7.6.4)

MAIN	EL	AZ	PL	GP	SM
S1	S2	MB		IP	GW

Fig. 17: Monitor Menu

MAIN	Displays real-time system status and receive signal.
EL	(Elevation) Displays real-time current drawn and speed settings for the elevation motor, as well as real-time elevation angle and limits, offset, window size, and Elevation adjustment gap.
AZ	(Azimuth) Displays real-time current drawn and speed settings for the azimuth motor, as well as real-time azimuth angle and limits, window size, and AZ zero.
PL	(Polarization) Displays real-time current drawn and speed settings for the polarization motor, as well as real-time polarization angle and limits, window size, and PL zero.
GP	Displays GPS Status and coordinates.
SM	(Search Mode) Displays compass status, Search Mode (RF status).
S1	(Satellite) Displays Target Satellite longitude and the antennas target coordinates. This branch also contains the DVB Carrier programmed and the LNB Power
S2	(Satellite) Displays Reference Satellite longitude and the DVB Carrier programmed for the reference satellite along with the LNB Power
MB	(Modem and Beacon Receiver) Displays Modem status as well as the Beacon Receiver frequency and signal (if a beacon receiver is used)
IP	Displays IP of iNetVu 7000 Series Ethernet Port, and the VSAT modem IP.
GW	(Gateway) Displays Subnet, and Gateway IP.

7.6.1.1. MAIN

This branch menu displays the real-time Elevation, Azimuth, Polarization Angles, their respective limits (Up, Down, Stow), the RF Receive Signal, Signal Strength, and the System Status.

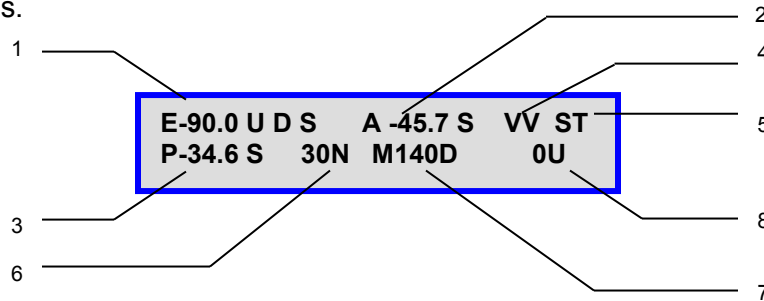


Fig. 18: "MAIN" (Main) Display

1 – Elevation Angle and Limit Indicators

740/750/950/980 Mobile Platform Range:	-90° to 65°+
981/985/755 Drive-away Platform Range:	-90° to 93°+
1200/1500/1800 Mobile Platform Range:	-90° to 76°+
Flyaway Antenna (1200Q)	5° to 78°+
Airline Checkable (1210A)	9° to 99°+
1201 Drive-away	-90° to 93°+

Elevation Angle will be -90.0 when the Elevation Stow Indicator is ON for mobile/drive-away units

- U** Elevation up Limit has been reached.
Typically set above 75° for 1200/1500/1800 Mobile Platforms, above 65° for 740/950/980 Mobile Platforms, and above 90° for the 1201/985/755 Drive-away Platforms. The Flyaway is set above 78°.
- D** Elevation down Limit has been reached.
Typically set between 5° and 10° for 1200/1500/1800 Mobile Platforms and between 0° and 10° for 740/950/980 Mobile Platforms.
- S** Elevation Stow Limit has been reached.

2 – Azimuth Angle and Stow Limit Indicator

Range:	-200° to +200°
Flyaway Range:	-180° to +180°
Airline Checkable:	-195° to +195°

- S** Azimuth Stow Limit has been reached.
Mobile Platform should be physically centered on the Azimuth axis.

3 – Polarization Angle and Stow Limit Indicator

740/950/980 Mobile Platform Range: -70° to 70°
 1500/1800 Mobile/Flyaway Platform Range: -90° to 90°
 1200 Mobile Platform Range: -90° to 90°(ST at +65°)
 981/1201 Drive-away Platform Range: -90° to 90° (ST at +/-50° for 981)
 Ka75/ka98 1800 Circular Band Signals will have the Polarization Angle disabled, and will display "DDD"
 Stow Limit will also be disabled and display "STF".

- S** Polarization Stow Limit has been reached.
 Mobile Platform should be physically centered on the Polarization axis.
 The New Gen 981 and 1201 platforms will stow at angle +/-50 (981) and angle +/-90 (1201) based on last PL target angle.

4 – GPS Status Flag and Compass Status Flag

The first letter represents the GPS status, and the second letter represents the Compass status (i.e. VV, FF, OO, FO, OF, OV, VO).

- V** GPS/Compass Status is Valid/Normal
F GPS/Compass Status has failed
O GPS/Compass Coordinates have been overridden

5 – System Status (status meanings explained in the software section of this report)

- AC** Azimuth Calibration
AT ACP Testing
CC Compass Calibration
DT Dish Testing
II Idle
MM Manual Movement
PC Polarization Calibration
PK Peaking (PA/PE)
PS Positioning
SR Searching
ST Stowed

6 – Receive RF/DVB Signal

Receive RF Signal as measured from the LNB. The letter 'N' next to the RF Value indicates the LNB is not being powered properly and there is an issue with the RF connection, whereas no letter next to the RF value indicates the LNB is powered properly. When the system is not in RF search Mode, and is searching via DVB carrier, the value represents the DVB signal, and the letter "L" next to the value indicates a DVB signal LOCK.

7 – Modem Status

Displays the receive strength of the satellite, and the Modem/Transmitter Status.

- D** Transmitter Disabled
E Transmitter Enabled
U Unknown (Communication with Satellite Modem / VSAT has failed)

(E.g. M140D represents modem signal strength of 140, and transmitter is disabled)

8 – Beacon Receiver Signal

This section represents the strength of the Beacon Receiver Signal (if used). The letter 'U' next to the Beacon Signal indicates an unlocked status, whereas the letter 'L' next to the Beacon Signal indicates a Locked on satellite status.

7.6.1.2. EL

Displays real-time current drawn and speed settings for the elevation motor, as well as real-time elevation angle and limits, offset, window size, and Elevation adjustment gap.

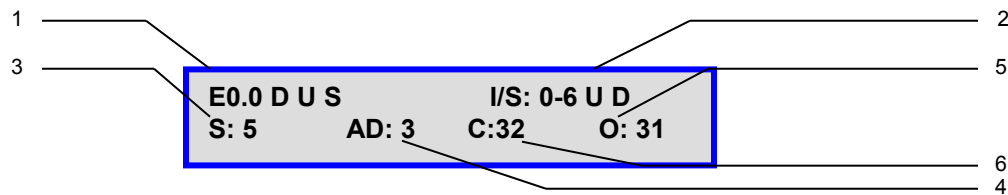


Fig. 19: "EL" (Elevation) Display

1 – Real-Time Elevation Angle

E (Elevation) The number value after the "E" represents the real time elevation angle.

- D** The letter "D" will appear to indicate Down Limit has been reached on the elevation axis
- U** The letter "U" will appear to indicate UP Limit has been reached on the elevation axis
- S** The letter S will appear to indicate the Elevation angle has reached the stow position (Antenna Stowed).

The inclinometer used to read the elevation angle will compensate for an incline up to +/- 15°. For example if a user is on a 10° slope and the system is searching along the azimuth, if the elevation reading changes due to a horizontal incline, the elevation will adjust to maintain the correct elevation angle while searching along the azimuth.

2 – Current and Speed Settings

- I/S** Real-Time current of the elevation motor is to the left of the dash, and speed constant of the elevation movement is to the right of the dash (i.e. 0-6 represents current of 0 at a set speed of 6).
- U** The letter "U" will appear if there is an up movement on the elevation axis.
- D** The letter "D" will appear if there is a down movement on the elevation axis.

3 - Search Window Elevation Limit

This value represents the amount of degrees the antenna will point above and below the calculated target elevation coordinate when searching for satellite. (S: 5 – implies elevation search window is 5°)

4 – Advanced Search Elevation Gap (EI Adjustment)

When parked on an incline, azimuth movement can affect the Elevation angle. This happens because the azimuth is on a fixed plane parallel to the roof of the vehicle and the Elevation angle is relative to gravity. For example, at a very high incline, moving 20 degrees of azimuth could gradually drop (or raise) the elevation 3 degrees from the calculated target. Since this could cause you to miss the satellite, we stop the azimuth movement, re-position the Elevation to the target, then continue the azimuth sweep. The default value is 3 degrees of elevation change allowed before adjustment. Since these adjustments will increase the amount of time it takes to find the satellite, we recommend to park the vehicle on the most level surface available.

5 - Elevation Offset

The number of degrees at which the iNetVu® Mobile Software will offset the reading from the Inclinator in order to produce an accurate (+/- 2°) Elevation Angle (e.g. O: 31 implies elevation offset of 31). These values initially default, and are set after target calibration is performed.

6 – Elevation of Compass Reading Status

Number of degrees that the Antenna requires to be elevated to ensure that the compass is level and is able to acquire an accurate compass reading (see Appendix 1 for default values).

7.6.1.3. **AZ**

Displays real-time current drawn and speed settings for the azimuth motor, as well as real-time azimuth angle and limits, search window size, and AZ zero.

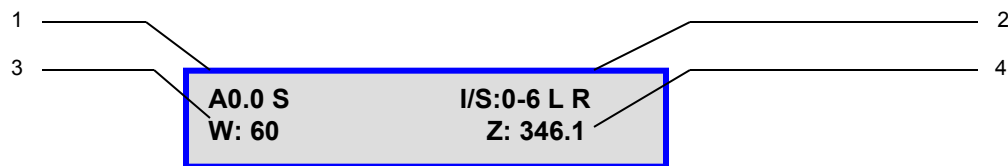


Fig. 20: "EL" (Elevation) Display

1 – Real-Time Azimuth Angle

- A** (Azimuth) – Real time Azimuth angle reading, down to the tenth of a decimal.
S The letter "S" will appear to indicate the stow Limit has been reached on the azimuth axis

2 – Current and Speed Settings

- I/S** Real-Time current of the azimuth motor is to the left of the dash, and speed constant of the azimuth movement is to the right of the dash (i.e. 0-6 represents current of 0 at a set speed of 6).
L The letter "L" will appear if there is a 'left' movement on the azimuth axis.
R The letter "R" will appear if there is a 'right' movement on the azimuth axis.
 (See Appendix for detail on default speed and current settings)

3 - Search Window Azimuth Limit

This value represents the amount of degrees the antenna will search for satellite along the azimuth axis to the left and right of the calculated target antenna azimuth coordinate when searching for satellite. (I.e. W: 60 implies 60° search to the left and right of the target antenna azimuth angle, totally 120°)

Note: system may overshoot by 10° from the set window limits and thus the displayed value will be off 10° on either side of the target angle.

4 – Z (AZ Zero)

AZ Zero is an A/D value from the potentiometer which physically determines where the iNetVu® Mobile Software places Azimuth Angle 0°. The AZ Zero may vary approximately +/-15% from the Default values (see Appendix).

AZ Zero is calculated during the Azimuth Calibration process.

7.6.1.4. PL

Displays real-time current drawn and speed settings for the polarization motor, as well as real-time polarization angle and limits, offset, and PL zero.

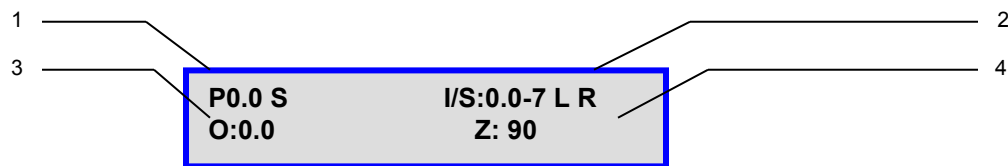


Fig. 21: "PL" (Polarization) Display

1 – Real-Time Polarization Angle

P (Polarization) – Indicates the real time polarization angle of the iNetVu® Antenna.

S The letter "S" will appear to indicate the stow Limit has been reached on the polarization axis

2 – Current and Speed Settings

I/S Real-Time current of the polarization motor is to the left of the dash, and speed constant of the polarization movement is to the right of the dash (i.e. 0.0-7 represents real-time current of 0.0 and a set speed of 7).

L The letter "L" will appear if there is a 'left' movement on the polarization axis.

R The letter "R" will appear if there is a 'right' movement on the polarization axis.
See Appendix 1 for default speed and current values.

3 - Polarization Offset

This value represents the offset in the polarization angle.

4 – Z (PL Zero)

PL Zero is a converted A/D value from the potentiometer and or a software generated fixed value from inclinometer that physically determines where the iNetVu® Mobile Software places Polarization Angle 0°. The PL Zero may vary approximately +15% from the default values for the potentiometer (see Appendix 1) while the inclinometer will provide a more accurate reading with minimal variances.

The PL Zero is used to convert the A/D calculated value during the polarization calibration process. Polarization calibration is not valid for platforms (980 and 1200 version 3.0+) and all platforms equipped with the inclinometer tilt sensor.

7.6.1.5. GP

Displays GPS Status and current GPS Heading.

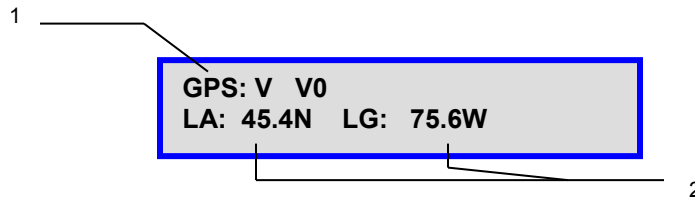


Fig. 22: "GP" GPS Display

1 – GPS Status

V V GPS Status is Valid, second V is for Velocity Status
F GPS Status has failed
O GPS Coordinates have been overridden

2 – GPS Coordinates

LA Current Latitude Coordinate rounded to one decimal place in degree format.
LG Current Longitude Coordinate rounded to one decimal place in degree format.

7.6.1.6. SM

Displays Search Modes Status, Compass Status, Compass Heading and AZ Window.

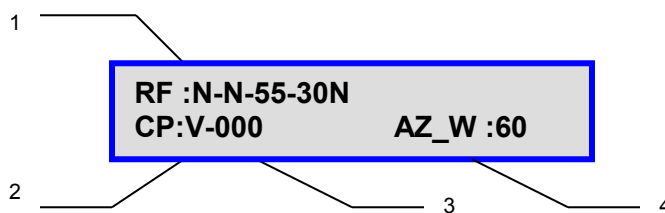


Fig. 23: "SM" Search Mode and Compass Display

(See Compass Configuration section under CONF1----SM1 (CP))

1 – RF Search Mode Status

N RF Mode is disabled; **Y** will be displayed when enabled.

N RF override mode is disabled; **O** will be displayed when enabled.

RF Threshold (55) Value will be displayed here, this value is configurable.

RF/DVB signal value (30N) – If in RF search mode this will represent RF signal value, if in DVB Mode it will display DVB carrier signal. The letter '**N**' next to the RF Value indicates the LNB is not being powered properly. The letter '**L**' next to the value indicates a DVB signal LOCK.

2 – CP (Compass) Status

V Valid – The compass reading is functioning properly

O Override – the compass has been overridden, and direction entered manually considered

FS Full Search – searches a full 360° search window.

3 – Compass Heading/ Calibrate/Check Compass Routine

Displays Compass Heading after Compass has been read.

Approximate Headings:	North	354°
	East	87°
	South	176°
	West	265

Antenna will rotate 90° to each of the following positions and read the compass at each: 0°, 90°, 180°, -90°, 0° and display the compass headings. Vehicle front end (windshield window) must be pointed North during these routines to achieve proper compass headings and a software pop-up will be displayed on the pc screen to ensure this Platform is properly orientated.

4 - AZ Search Window Status

The Search Window is the area of the sky which the iNetVu® Mobile System will search for the desired Satellite. It uses a rectangular window and searches for the Satellite using smaller concentric windows until the desired Satellite is found.

7.6.1.7. S1

This menu displays the Target Satellite Number and Longitude, Target Antenna Coordinates, DVB Transponder (Frequency, Symbol Rate, and Code Rate) and LNB Power.

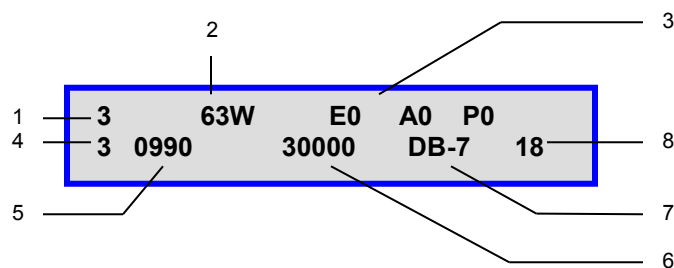


Fig. 24: "S1" (Target Satellite) Display

1 - Target satellite number

2 - Target Satellite Longitude and Hemisphere

3 - Target Satellite Antenna Elevation, Azimuth (within reference to true north), and Polarization coordinates respectively.

4 - Transponder Number

(There are usually six (6) transponders for each satellite stored into the controller memory) 0 – 2 are horizontal receive, and 3-5 are vertical receive) the user may overwrite the transponder data with his/her own (see configuration section).

5 - DVB Transponder Frequency (MHz)

6 – Transponder Symbol Rate (Ksps)

7 –Transponder Code Rate.

DB-1 = 1/2

DB-2 = 2/3

DB-3 = 3/4

DB-5 = 5/6

DB-7 = 7/8

AUTO (DVB-S2 ACM SELECTION)

8 – Power Supplied to LNB from the 7000 Series Controller for the Target Satellite

7.6.1.8. **S2**

This menu displays the Reference Satellite Status, Longitude, Target Antenna Coordinates, DVB Transponder (Frequency, Symbol Rate, and Code Rate) and LNB Power. The reference satellite is another search option that could be utilized by the user. If this option is disabled, you may disregard all this information.

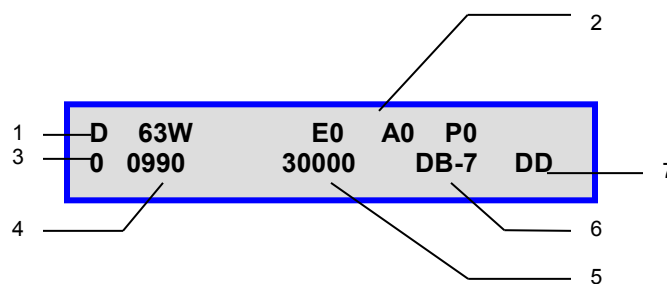


Fig. 25: "S2" (Reference Satellite) Display

1 – Reference Satellite Longitude, Hemisphere, and Status

Status "D": implies the reference satellite option is disabled

Status "E": implies the target satellite option is enabled

2 – Reference Satellite Antenna Elevation, Azimuth, and Polarization coordinates respectively.

3 - Transponder Number (for reference satellite)

(There are usually six (6) transponders for each satellite stored into the controller memory) 0 – 2 are horizontal receive, and 3-5 are vertical receive. The user may overwrite the transponder data.

4 – Reference Satellite DVB Transponder Frequency (MHz)

5 – Reference Satellite Transponder Symbol Rate (Ksps)

6 – Reference Satellite Transponder Code Rate. (DVBS1 requirement)

DB-1 = 1/2

DB-2 = 2/3

DB-3 = 3/4

DB-5 = 5/6

DB-7 = 7/8

7 – Power Supplied to LNB from the 7000 Series Controller for the Reference Satellite

7.6.1.9. MB

This menu displays the modem status, beacon frequency and signal strength.

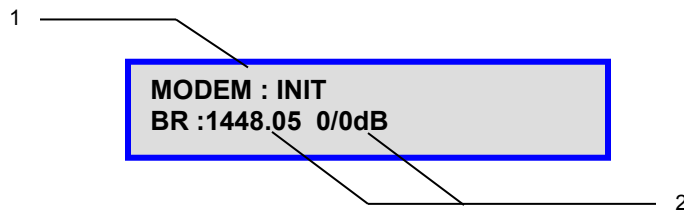


Fig. 26: *Modem and Beacon Receiver*

1 – Modem Communication Status

INIT will appear if still initializing communication.


NA will appear if no modem selected.

SQ: with value will appear if modem is communicating with controller.

2 – Beacon Receiver Frequency and Signal Strength

The Beacon Receiver is an optional unit that could be used to acquire satellite with the 7000 Series Controller. See "iNetVu User Manual – Beacon Receiver" (7000 Controller section) for details

7.6.1.9.1 Hughes Modem Status (Only)

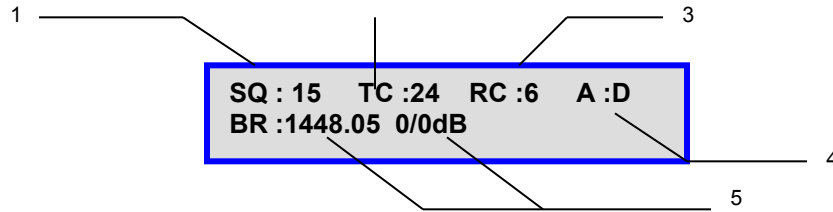

1 – Modem Communication Status.

INIT will appear if still initializing or no communication

NA will appear if no modem selected.

SQ will appear with after modem communication is establish (Modem TX Disabled).

2 – Displays the status of the (TX) satellite receiver transmit state.

3 – Displays the status of the (RX) Satellite receiver receive state.

4 – ACP status enables or disables the ACP routine after locking on signal.

D Disables the ACP after locking on signal

E enables the ACP after locking on signal in which an isolation value is displayed after successfully passing the 2 tests.

A_ST ACP has started

A_SP ACP has passed

5 – Beacon Receiver Frequency and Signal Strength

The Beacon Receiver is an optional unit that could be used to acquire satellite with the 7000 Series Controller. See “iNetVu User Manual – Beacon Receiver” (7000 Controller section) for details

7.6.1.10. IP

This menu displays the IP address of the user configured iNetVu® 7000 Series Controller and Modem. (Ensure the IP address of the modem configured is the actual IP address of the modem, and that the 7000 Controller is operating on the same network as the modem)


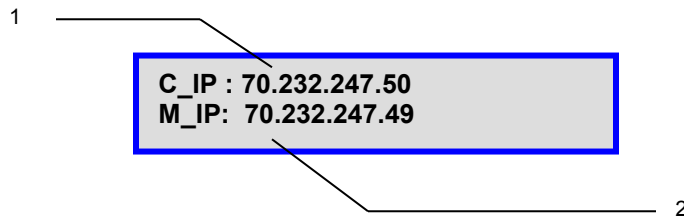


Fig. 27: "IP" (Controller and Modem IP) Display

1 – C_IP: iNetVu® 7000 Series Controller's IP Address – Default 192.168.0.2

2 – M_IP: The Modem IP configured in the 7000 Series Controller.

7.6.1.11. GW

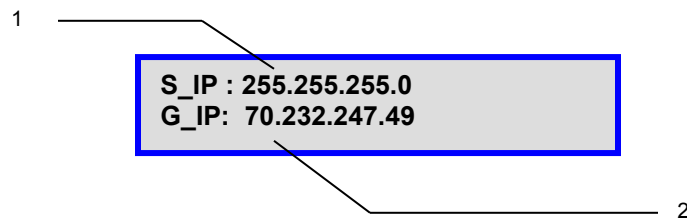

1 – S_IP (iNetVu® 7000 Series Controller's Subnet Mask IP Address – Default 255.255.255.0)

2 – Gateway IP Address (Default: 192.168.0.32 or 192.168.100.1 depends on Modem Type/Service)

7.6.2. OPERATION


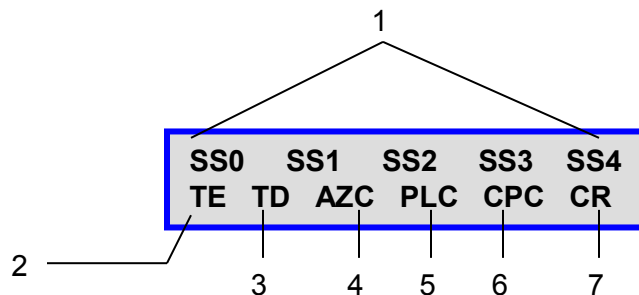


Fig. 28: Default Operation Menu

Note: The OPERATION sub menu items may differ for Ka services. The satellite numbers (SS0, SS2, etc...) will be replaced with GPS location Beam Colors for Tooway or Beam ID for HN_KA.



BLU ORG PRP GRN SS4
TE TD AZC PLC CPC CR

BM01
TE TD AZC PLC CPC CR

Fig. 29: Operation Menu, Tooway service on left and HN_KA service on right

SS0	(Find Satellite 0) Performs automatic satellite acquisition for configured satellite 0.
BLU	(Find Satellite BLU) Performs automatic satellite acquisition on the Blue Beam.
BM00	(Find Satellite BEAM ID) Performs automatic satellite acquisition on the Beam ID selected.
SS1	(Find Satellite 1) Performs automatic satellite acquisition for configured satellite 1.
ORG	(Find Satellite ORG) Performs automatic satellite acquisition on the Orange Beam.
SS2	(Find Satellite 2) Performs automatic satellite acquisition for configured satellite 2.
PRP	(Find Satellite PRP) Performs automatic satellite acquisition on the Purple Beam.
SS3	(Find Satellite 3) Performs automatic satellite acquisition for configured satellite 3.
GRN	(Find Satellite GRN) Performs automatic satellite acquisition on the Green Beam.
SS4	(Find Satellite 4) Performs automatic satellite acquisition for configured satellite 4.
TE	(Transmitter Enable) Enables the transmitter after locking onto the designated satellite.
TD	(Transmitter Disable) Disables the transmitter after locking onto the designated satellite.
AZC	(Azimuth Calibration) Performs a complete Azimuth Calibration.
PLC	(Polarization Calibration) Performs a complete Polarization Calibration.
CPC	(Compass Check) Tests the Compass' accuracy and Calibrates the Compass, should the compass be found to be inaccurate
CR	Restores Compass to factory calibrated defaults.

--	--

1 – Find Satellite

Automatically finds and locks onto the satellite signal by communicating with the Satellite Modem and using the GPS coordinates, the compass heading and internal parameters of the Satellite Modem. Typically, it takes approximately 3-5 minutes to find satellite. The “Service Type” must be selected and “Update Beam Table” button applied for the correct Beam ID information to propagate when using HN_KA Modem Type.

If the Antenna is already pointed on the satellite, clicking **Find Satellite** will re-peak or re-deploy the Antenna onto the last satellite signal found. There are 5 configurable satellites in the 7000 Series Controller (S0-S4) and each is now capable of having 5 configurable beacon settings. Press “Enter” onto the corresponding satellite, Beam Color or Beam ID to begin search.

Note: The Tooway service will display Beam Colors while the HN_KA and iDirect Dual Beam Ka service will display Beam ID number.

2–Transmitter Enable (TE)

Enables the Transmitter once locked onto satellite.

3 –Transmitter Disable (TD)

Disables the Transmitter once locked onto satellite.

4 –Azimuth Calibration (AZC)

This feature will only be available on Legacy mounts. All new generation platforms (i.e. Ka-75V, 98H/98G/98V, 1201 etc...) will have this option disabled by default.

Performs a complete Azimuth Calibration.

- Antenna will move CW to a set point.
- Antenna will move back in the opposite direction to locate Stow switch.
- Antenna will attempt to locate the cut-off edges of the Azimuth Stow Switch and center itself.
- After detecting at which angles the ST Switch turns OFF, the Azimuth zero position is calculated and the AZ Zero(Pot) is set at the zeroed A/D value.

5 – Polarization Calibration (**PLC**)

Performs a complete polarization calibration. On platforms with tilt sensors the system will complete a PL Zero point calibration and set the Zero point value. Tilt sensor must be levelled prior to running the Calibrate PL routine on system with Polarization tilt sensors.

- Antenna will completely rotate counter-clockwise to the physical limit and temporarily record the A/D value from the Potentiometer.
- Antenna will completely rotate clockwise to the physical limit and temporarily record the A/D value from the Potentiometer.
- Based on the A/D values of the two (2) physical limits and the maximum range of motion for the Mobile Platform, the center angle is determined.
- Antenna will center itself and attempt to locate the cut-off edges of the Polarization Stow Switch.
- After detecting at which angles the ST Switch turns OFF, the Polarization zero position is calculated and the PL Zero is set at the zeroed A/D value.

6 – Compass Calibration (**CPC**)

Ensure that there are no metallic objects that could interfere with the Compass, and that the Mobile Platform is on level surroundings.


Orient the Mobile Platform as depicted in the following figure. If Platform is vehicle mounted ensure front end (windshield window) is pointed north. It is recommended that you use an external compass to be as accurate as possible with the orientation.

Note: The New Generation Platforms (these include and not limited to ka-75V, 98H/98G/98V and 1201A) are equipped with newer versions of the compasses which are factory calibrated and do not require calibration in the field unless performed by C-COM support authorization only. Restore CP replaces the compass calibration on systems equipped with the newer compass version, these systems are identified by platform version. Please consult with C-COM Technical support before running the compass calibration.



Fig. 30: *Compass Orientation and Approximate Values*

Software will display a pop-up on the pc screen asking end user to verify correct orientation of platform after Compass Calibration is selected within software.

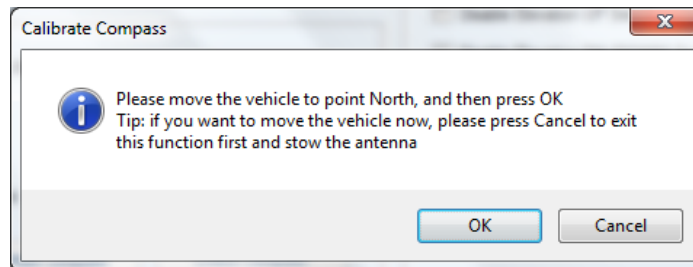

The Antenna will now rotate in 90° intervals and attempt to calibrate the compass. The LCD Screen will indicate that the Compass Calibration has been completed successfully or not.

7 – Compass Restore (CR)

Restores the compass to its original calibrated state as was shipped from the manufacturer. Use this button only after consulting with C-COM Support.

7.6.3. CONF1

This Menu will allow the user to configure and save all 5 Satellites with 5 beacon settings and Search Modes of the iNetVu® System. A description of each menu and their purpose is outlined below. This section explains the different sub-menus of the configuration (CONF1) menu, and what each field parameter means.

7.6.3.1. Password Protection

The LCD Configuration Interface is password protected.



Fig. 31: Password screen

The default password is **“password” (case sensitive)**. Use the “↑” or “↓” button to select the characters, and the “←” or “→” to navigate through the character fields. Press on the “ENTER” button of the front panel when the password has been completely entered.

If the password has been changed, and the user does not know the password, entering a specific reset ID in the bottom row will reset the password to the default (“password”). The Reset ID (RST) is **“123456789”**

7.6.3.2. Configuration Menu (CONF1)




Fig. 32: CONF1 (Configuration) Menu

S1	Allows the user to configure and save the Orbital slot / Longitude of the desired Target Satellite (0-4 satellites), along with the corresponding DVB Transponder and LNB Power Requirement. 5 satellites can be configured and saved with different search parameters
SM1	Allows the user to configure and save the search mode (RF Search or DVB mode), Compass, RF Threshold and AZ search window.
SM2	Allows Modem Beam ID configuration and Beacon configuration for each Satellite. 5 configurable Beacon settings can be configured to work with 5 satellites

7.6.3.3. S1

This menu allows for the configuration of the target satellite(s) (5 satellites maybe configured and saved) and the satellite polarization offset. If the user is using DVB as a search option, the transponder information must be entered along with the LNB power requirements.

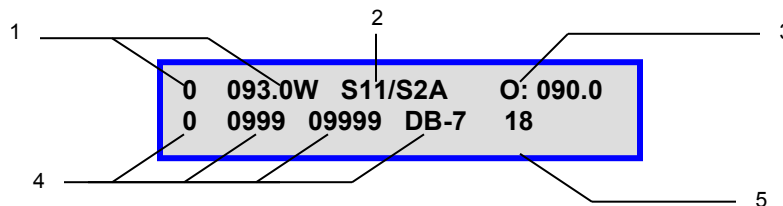


Fig. 33: "S1" (Target Satellite) Configuration Display

1 – Target Satellite

Satellite Number and Orbital slot / Longitude of the desired Satellite. The **Find Satellite** command will use this value when attempting to find and lock onto a satellite signal. The user can configure and save up to 5 satellites (0 to 4).

2 – DVB Configuration

The user can configure the type of carrier to search for either DVB-S1 or DVB-S2ACM. The DVB-S2 ACM carrier requires controller model 7000B Rev 1.0 or greater.

3 – Satellite Transmit Polarization Offset (range: -180 to +180)

In North America and not limited to the rest of the world
 1201/1200/1800/1500/1.2 Flyaway –Horizontal Receive (Offset = 0, with feed/OMT position standing up),
 Vertical Receive (Offset = 90, with feed/OMT position flat). Polarization is based on the Receive (RX) Polarity.
 Vertical RX and Horizontal TX (VH) requires Pol Offset be set to 90.
 Horizontal RX and Vertical TX (HV) requires Pol Offset be set to 0.
 Therefore: VV requires Offset to be set to 90 and HH to 0.
 Eutelsat configuration will automatically propagate the offset value after entering 0 or 90.
 980/740 – Offset = 0 (considering OMT is adjusted manually).

4 – DVB Transponder Information.

0 – Transponder Number (0-2 are for Horizontal Receive, 3-5 are for Vertical Receive)

0999 – Transponder Frequency (MHz)

09999 – Transponder Symbol Rate (Ksps)

DB-7 – Transponder Code Rate (DVBS1 requirement)

DB-1 = 1/2

DB-2 = 2/3

DB-3 = 3/4

DB-5 = 5/6

DB-7 = 7/8

5 – LNB Power (Target Satellite)

In cases where the LNB requires more power than the modem can provide, or if the user would like to power LNB from the controller, or if the user would like to find satellite without the use of a modem, this option allows for power from the controller to be supplied to the LNB through the RX IN cable from the controller to the platform itself.

DD – will disable this option, and provide power to the LNB straight from the modem. In this case, a splitter must be used for the RF connection as depicted in the figure below.

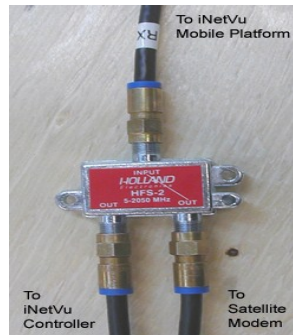


Fig. 34: *RF Cable Setup for DIS selection*

7000 Series Controller Power Output Range Option Capabilities: **13, 14, 18, 19, V @ 500mA (max)**

If the user chooses to power the LNB from the controller, he/she should verify the power/voltage range requirements of the LNB in use, and configure the iNetVu® 7000 Series Controller according to those power/voltage requirements.

7.6.3.4. SM1

This menu allows for the configuration and saving of the Satellite Search Modes with a total of 5 different configurable satellites, each can be configured with different RF Search Mode parameters.

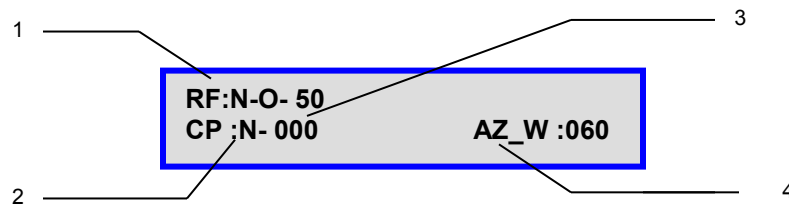


Fig. 35: *"SM1" Search Mode Configuration Display*

1 – RF Search Mode

N RF Mode is disabled; **Y** will be displayed when enabled.
N RF override mode (second digit) is disabled; **O** will be displayed when enabled.
RF Threshold (50) Value will be displayed here, this value is configurable.

2 – CP (Compass)

V Valid – The compass reading is functioning properly
N Normal – Full Search NOT selected, (nor is compass overridden).
O Override – the compass has been overridden, and direction entered manually considered
F Full Search – searches a full 360° search window, Fly-away systems (70 °), Full search also overrides compass.

3 – Compass Heading

Compass Heading after Compass has been read.

Approximate Headings:	North	354°
	East	87°
	South	176°
	West	265

Calibrate/Check Compass Routine see **CPC** under **OPERATION** or **CP** under **TST**.

4 - AZ Search Window

The Search Window is the area of the sky which the iNetVu® Mobile System will search for the desired Satellite. It uses a rectangular window and searches for the Satellite using smaller concentric windows until the desired Satellite is found. The window value represents the amount of degrees the antenna will search for satellite along the azimuth axis. Window will be expanded from 60 to 90 degrees if satellite not found during the first run.

Note: system may overshoot by 10° from the set window size limits.

7.6.3.5. SM2

This Menu allows the user to set modem Beam ID for the desired Satellite search as well as set the Beacon and ACQ Attenuation with different values for 5 Configurable Satellites. 5 different Beacon settings can be configured and saved.

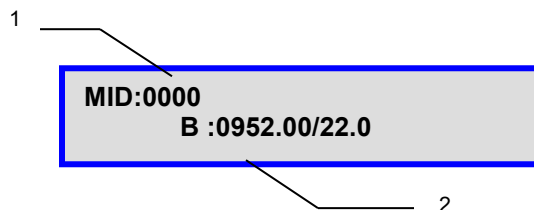


Fig. 36: “SM2” Modem Beam ID and Beacon Configuration Display

1 – Modem Beam ID

Modem ID number can be entered from the front panel. Used with YAHSAT and Avanti Ka modems only at this point in time.

2 – BR (Beacon Receiver Frequency and Power Level – Optional)

If the Optional Beacon Receiver is used to acquire satellite, the user may enter the beacon frequency of the satellite that he/she wishes to lock onto, also the Power level for peaking on the Beacon Signal. See "iNetVu User Manual – Beacon Receiver" (7000 Series Controller section) for details

7.6.4. CONF2

This menu will allow the user to select and set the configuration of the iNetVu® System as well as the Reference satellite option. The target satellite(s) S1 is configured in the CONF1 menu. A description of each menu and their purpose is outlined below. This section explains the different options of the configuration menu, and what each component means. **A step-by-step procedure of how to configure the system is explained in the corresponding Service Provider Based Quick Start User Manuals. Please refer to the manual based on the service you are using with the 7000 Series Controller.**

7.6.4.1. Configuration Menu (CONF2)

Password must be entered before accessing CONF2 menu and submenu.

S2	MB	EL	AZ	PL	GP
C1	C2	C3	SG	IP	SR

Fig. 37: CONFIG2 (Configuration) Menu

S2	(Reference Satellite Option Use Only) Allows the user to configure the Orbital slot / Longitude of a reference satellite, along with the corresponding DVB Transponder and LNB Power Requirement.
MB	Allows the user to configure the Modem parameters such as transmit and receive polarization, as well as frequency and symbol rate (if required).
EL	(Elevation) Allows configuration of the elevation current, limits, slow speed, window size, and adjustment gap.
AZ	(Azimuth) Allows configuration of the azimuth zero, stow limit, speed, search window size, and current limits.
PL	(Polarization) Allows configuration of the polarization zero, skew adjustment, stow limit, polarization offset, speed, and current limits.
GP	(GPS and Compass) Configuration of GPS coordinates and Compass parameters.
C1	Contains controller configuration feature information such, Motion Protection, ES/NO, Inclined Orbit etc...
C2	Contains configuration of the platform type, serial number, and the controller console port.
C3	Contains the password information. The user may change the password in this screen.
SG	(Gateway and Subnet) Allows for the configuration of the controller subnet IP address, as well as the controller gateway IP address.
IP	Configuration screen of the controller IP address, and the VSAT modem's IP address.
SR	The user may configure the service type, as well as the interface used to establish communication between the controller and modem (telnet, console, etc.) Ka services (HN_KA) will have the ability to change Beam ID.

7.6.4.2. S2

This menu allows for the configuration of the reference satellite parameters. If the user is using the Reference Satellite Search option, the transponder information must be entered along with the LNB power requirements of the reference satellite used. The controller will lock onto the Reference satellite DVB carrier, and will pivot to the target satellite position to peak on the modem signal. Users acquiring Satellite signal using RF Search or direct DVB search with the Target satellite **DO NOT** require this option, and should ensure that this method is disabled (as will be explained below) . Reference Satellite Search option will only work with DVB search method. The Max ES/NO is automatically disabled and reverted back to default value of 255 when Ref Sat is enabled.

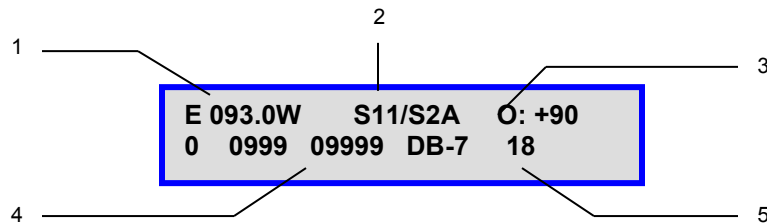


Fig. 38: "S2" (Reference Satellite) Configuration Display

1 – Reference Satellite

Orbital slot / Longitude of the Reference Satellite. If the reference satellite option is enabled, the **Find Satellite** command will use this value when attempting to find and lock onto the reference satellite signal then pivot to the target satellite position. Only works with DVB search mode.

"D" – The user should select "D" if he/she does not wish to use this option

"E" – If the user wishes to use the reference satellite, "E" should be selected.

2- DVB Configuration

The user can configure the type of carrier to search for either DVB-S1 or DVB-S2A. The DVB-S2 ACM carrier requires controller model 7000B Rev 1.0+ or greater. DVBS2 carriers are recommended.

3 – Satellite Transmit Polarization Offset (range: -180 to +180)

In North America and not limited to the rest of the world

981/1201/1200/1800/1500/1.2 Flyaway – Horizontal Receive (Offset = 0) with feed/OMT standing up.

Vertical Receive (Offset = 90) with feed/OMT position flat.

980/740 – Offset = 0 (considering OMT is adjusted manually)

Only RX Polarity is referenced for the Pol Offset field allowing both Cross-Pol and Co-Pol to work with setting the Pol Offset to 90 or 0 depending on the Receive Polarity required. **Rx = V = 90 (feed/OMT position flat) and Rx = H = 0 (feed/OMT position standing up)** for Cross-Pol and Co-Pol.

4 – DVB Transponder Information for the reference satellite.

0 – Transponder Number (0-2 are for Horizontal Receive and 3-5 are for Vertical Receive)
 0999 – Transponder Frequency (MHz)
 09999 – Transponder Symbol Rate (Ksps)
 DB-7 – Transponder Code Rate (DVBS1 requirement)
 DB-1 = 1/2
 DB-2 = 2/3
 DB-3 = 3/4
 DB-5 = 5/6
 DB-7 = 7/8

5 – LNB Power (Reference Satellite)

In cases where the LNB requires more power than the modem can provide, or if the user would like to power LNB from the controller, or if the user would like to find satellite without the use of a modem, this option allows for power from the controller to be supplied to the LNB through the RX IN cable from the controller to the platform itself.

DD – will disable this option, and provide power to the LNB straight from the modem. In this case, a splitter must be used for the RF connection as depicted in the figure below.

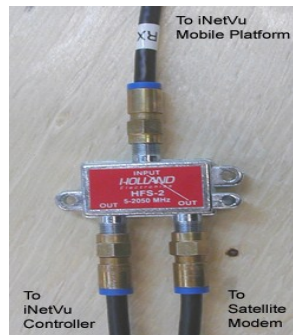


Fig. 39: RF Cable Setup for DIS selection

7000 Series Controller Power Output Range Option Capabilities: **13, 14, 18, 19, V @ 500mA (max)**

If the user chooses to power the LNB from the controller, he/she should verify the power/voltage range requirements of the LNB in use, and configure the iNetVu® 7000 Series controller according to those power/voltage requirements.

7.6.4.3. MB

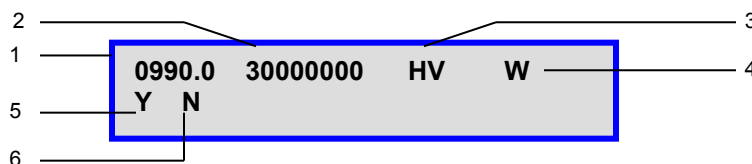


Fig. 40: "S2" (Reference Satellite) Configuration Display

1 – Configured Satellite Modem Receive Frequency in MHz with no decimals. (HNS Only)

2 – Configured Satellite Modem Symbol Rate in sps. (HNS Only)

1Msps = 1000 Ksps = 1 000 000 sps

3 – Receive and Transmit Polarization.

HH – Horizontal Receive, Horizontal Transmit

HV – Horizontal Receive, Vertical Transmit

VH – Vertical Receive, Horizontal Transmit

VV – Vertical Receive, Vertical Transmit

Receive polarity is represented by the first character, while Transmit polarity is represented by the second character

4 – Hemisphere of location of modem.

This is typically used for the HNS modem; other service providers may not need this requirement.

E – East

W – West

Modems operating in the eastern hemisphere require E to be selected, while modems operating in the western hemisphere require W to be selected.

5 – Auto Transmit Disable

N: If “N” is selected, the controller will leave the modem status as is if a reset is pushed to the modem from the NOC or for any other reasons.

Y: If “Y” is selected, the controller will automatically disable the modem transmit if a reset occurs once communication is re-established between the controller and the modem.

6 – ACP Enable / Disable

N: If “N” is selected, ACP will be enabled and the controller will try to perform ACP for HNS integrated modems after peaking on satellite and before enabling the transmitter.

Y: If “Y” is selected, ACP will be disabled and the controller will not perform ACP for HNS integrated modems after peaking on satellite, and will try to enable transmitter.

7.6.4.4. EL

The EL menu allows for the Configuration of the elevation axis. Options include configuring the elevation offset, the satellite search window, the elevation adjustment gap, the mechanical elevation limits, the slow speed, and the current limits.

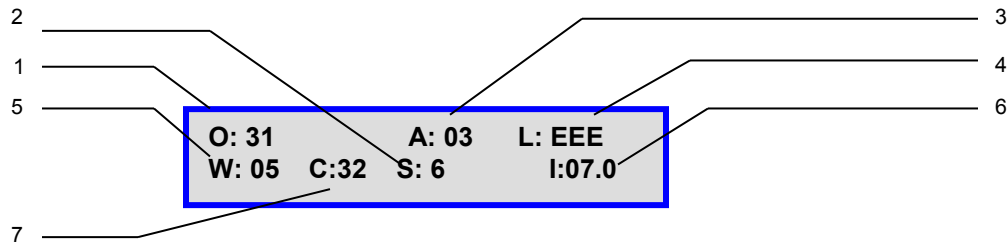


Fig. 41: "EL" (Elevation Configuration) Display

1 – Elevation Offset

The Elevation Offset is specific to each type of platform. See Appendix 1 for a list of all the elevation offset default values. It is the number of degrees at which the iNetVu® Mobile Software will offset the reading from the Inclinator in order to produce an accurate (+/- 2°) Elevation Angle. The user may set the offset with the range of 15°-55°, although altering this number from its default value may give an inaccurate offset reading. This should not be tampered with without first consulting a C-COM Technical Support Representative.

2 –Speed Setting

S The user may configure the slow speed of the elevation movement. The slow speed is a basis for the satellite searching procedure.

3 - Advanced Search Elevation Gap (EL Adjustment)

With a configurable range of (2°-20°) this parameter is used to determine the small incremental adjustments required for a more accurate satellite search. Decreasing this value will add accuracy to the Search Window, but will increase the search time. This value is used while searching on an inclined surface. For instance A: 03 means the elevation angle will adjust if 3° gap from the calculated angle. This value is set by default for optimum performance.

4 – Limit Switches (L: EEE)

Allows the enabling and disabling of the UP, DOWN, and STOW limits respectively.

The first character (EEE) represents the UP limit. The second character (EEE) represents the DOWN limit and the third character (EEE) represents the STOW limit. The user may change the limit configuration between:

D – Disable Limit
E – Enable Limit

D - Disable Limit

This option disables UP, DN, and ST limits for testing and troubleshooting (i.e. DEE – represents disabled up limit, and enabled down and stow limit).

E – Enable Limit

Once enabled, the up, down and stow limits will be activated whenever the up, down, and stow sensors have been triggered on the iNetVu® Mobile platform.

5 – Elevation Search Window

The Search Window is the area of the sky which the iNetVu® Mobile System will search for the desired Satellite. It uses a rectangular window and searches for the Satellite using smaller concentric windows until the desired Satellite is found. The Search Window range is pre-set by default for optimum performance; however this offset may be manually changed in the range of 2°-20°.

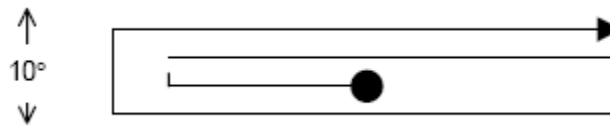


Fig. 42: *Elevation Coverage of search window*

The default Elevation (Vertical) range is 3° on each side of the Target Point. Increasing the size of the Search Window will increase the ability to find the desired Satellite, although increasing the Search Window will lengthen the search time. The search window will expand from 3 to 5 if first search run fails to lock on satellite.

6 – Current Settings

A software controlled current protection for the Mobile Platform's elevation motors. When any of the Mobile Platform's motors are moving at the associated speed, the current drawn to move the motor is monitored and should it exceed the Current Limit, an error message will appear. For Motor Speeds that are not listed (Speed 1, 2, 4, 5, 7, 8), the Current Limit for those speeds is calculated using a percentage of the Current Limit above it. See Appendix 1 for the default current limits for all iNetVu® Mobile Platforms.

- Current Limit 8 – 90% of Current Limit 9
- Current Limit 7 – 80% of Current Limit 9
- Current Limit 5 – 90% of Current Limit 6
- Current Limit 4 – 80% of Current Limit 6
- Current Limit 2 – 90% of Current Limit 3
- Current Limit 1 – 80% of Current Limit 3

I - Configurable Current Limit for Slow Speed (6) which is displayed by the **S:** field (#2 speed setting) movement is set to 7.0.
(i.e. **I:07.0** and **S: 6** Represents Current Limit of 7 A @ speed 6.

7 – Elevation of Compass Reading

Number of degrees that the Antenna requires to be elevated to ensure that the compass is level and is able to acquire an accurate compass reading for finding satellite (see Appendix 1 for default values).

7.6.4.5. **AZ**

The AZ menu allows configuration of the Azimuth axis, including AZ zero and stow limit, azimuth search window size, slow speed movements, and current limits at high and slow speeds.

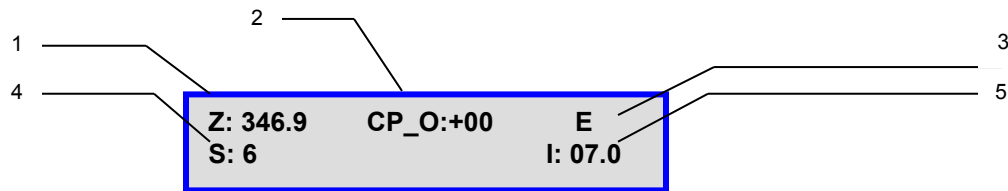


Fig. 43: "AZ" (Azimuth) Display

1 – Configurable AZ Zero (Pot)

AZ Zero is an A/D value from the potentiometer calculated upon azimuth calibration which physically determines where the iNetVu® Mobile Software places Azimuth Angle 0°. The AZ Zero may vary approximately +15% from the Default values (see Appendix 1). The user may edit these values through this window; however any changes may result in failure to recognize the correct 0° angle. This parameter has a configurable range of (150-700).

2 – Compass Offset

A fixed offset could be used to adjust the compass heading. This value would be added to the calculated compass heading to compensate for any consistent inaccuracy of the compass reading.

3 - Stow Limit

Enabling this function allows for the iNetVu® system to trigger the stow limit when the mechanical stow range of the azimuth is reached. Disabling this limit, may result in failure to initiate the automatic stow command.

E – Enable Stow Limit
D – Disable Stow Limit

4 –Speed Setting

S The user may configure the slow speed of the azimuth movement. The slow speed is a basis for the satellite searching procedure.

5 – Current Settings

A software controlled current protection for the Mobile Platform's azimuth motors. When any of the Mobile Platform's motors are moving at the associated speed, the current drawn to move the motor is monitored and should it exceed the Current Limit, an error message will appear. For Motor Speeds that are not listed (Speed 1, 2, 4, 5, 7, 8), the Current Limit for those speeds is calculated using a percentage of the Current Limit above it. See Appendix 1 for the default current limits for all iNetVu® Mobile Platforms.

- Current Limit 8 – 90% of Current Limit 9
- Current Limit 7 – 80% of Current Limit 9
- Current Limit 5 – 90% of Current Limit 6
- Current Limit 4 – 80% of Current Limit 6
- Current Limit 2 – 90% of Current Limit 3
- Current Limit 1 – 80% of Current Limit 3

Configurable Current Limit for Slow Speed (6) movement is displayed under the **I:** while the speed under **S:**
(i.e. I: 07.0 Represents Current Limit of 7 A @ speed 6)

7.6.4.6. PL

The PL menu allows for the configuration of the polarization axis. Options include the setting of the PL zero, as well as the skew adjustment and stow limit functionality, the polarization offset, slow speed, and current limits for fast and slow speeds.

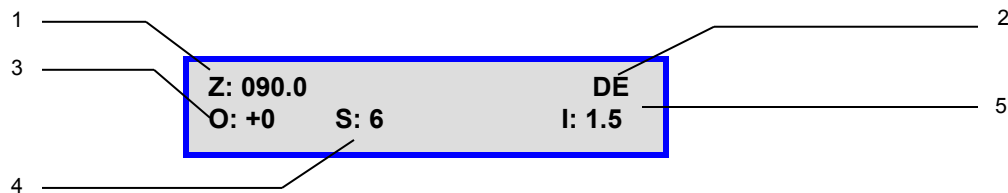


Fig. 44: "PL (Polarization) Configuration

1 – PL Zero

PL Zero is used to convert the A/D value from the potentiometer that physically determines where the iNetVu® Mobile Software places Polarization Angle 0. The potentiometer PL Zero may vary approximately +15% from the default values (see Appendix 1). The PL Zero is calculated during the Polarization Calibration process. All New Generation platforms (981, 1201, 1200 Fly-Away and 1210 AC) are equipped with Tilt Sensors. PL Zero point calibration calculates and sets the Zero value for all platforms. The user may edit these values through this window, however any changes may result in failure to recognize the correct 0° angle. This parameter has a configurable range of (50-500).

2 – Skew Adjustment and Stow Limit Function

Allows the enabling and disabling of the skew adjustment and polarization stow limit respectively.

The first character (**E**) represents the skew adjustment. The second character (**E**) represents the Polarization ST limit. The user may change the limit configuration between:

- EE** – Enable Skew Adjustment, Enable Polarization Stow limit
- DE** – Disable Skew Adjustment, Enable Polarization Stow limit
- ED** – Enable Skew Adjustment, Disable Polarization Stow limit
- DD** – Disable Skew Adjustment, Disable Polarization Stow limit

For an iNetVu® 1200/1500/1800 Ku Mobile Platforms, the Polarization Stow Limit is constantly ON. The Skew Adjustment will rotate the antenna on the azimuth axis 90° on each side of the peaked signal and then re-position on signal with an adjustment to the polarization for any inclined surface. For 2 axial (movement on EI and AZ) Ka Mobile Platforms **DD** the Skew and the Polarization Stow limit will always be disabled.

3 - Polarization Offset

By default this polarization-offset value is set to +0°. If there happens to be a requirement for a polarization offset in the satellite position, the user may manually enter this value in this area. This area is also updated automatically if the skew adjustment procedure recognizes inaccuracy in the target polarization angle. Misconfiguring this field will result in undesirable results.

4 –Speed Setting

- S** The user may configure the slow speed of the polarization movement. The slow speed is a basis for the satellite searching procedure. See Appendix 1 for details.

5 – Current Settings

A software controlled current protection for the Mobile Platform's polarization motors. When any of the Mobile Platform's motors are moving at the associated speed, the current drawn to move the motor is monitored and should it exceed the Current Limit, an error message will appear. For Motor Speeds that are not listed (Speed 1, 2, 4, 5, 7, 8), the Current Limit for those speeds is calculated using a percentage of the Current Limit above it. See Appendix 1 for the default current limits for all iNetVu® Mobile Platforms.

- Current Limit 8 – 90% of Current Limit 9
- Current Limit 7 – 80% of Current Limit 9
- Current Limit 5 – 90% of Current Limit 6
- Current Limit 4 – 80% of Current Limit 6
- Current Limit 2 – 90% of Current Limit 3
- Current Limit 1 – 80% of Current Limit 3

Configurable Current Limit for Slow Speed (6) movement is displayed under the **I**: while the speed under **S**:
(i.e. I: 1.5 Represents Current Limit of 1.5 A @ speed 6)

7.6.4.7. GP

Allows for the Configuration of the GPS parameters and settings,

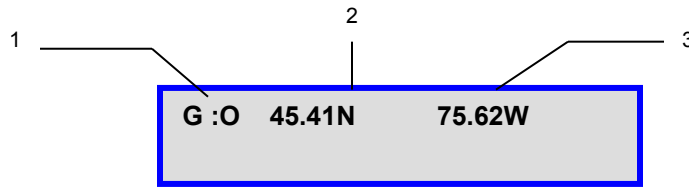


Fig. 45: "GP (GPS) Configuration

1 – GPS Status Configuration

- N** Use Coordinates from GPS Antenna
O Override GPS and use the coordinates entered (2) and (3). Enables the GPS coordinates to be manually overridden. This should only be enabled in the event that the GPS Antenna is malfunctioning and the user has a reliable, alternate source for coordinates.

CAUTION

Indicates a situation or practice that might result in property or equipment damage.

Note 1: If you have overridden the GPS coordinates, they will have to be updated if the Mobile Platform has moved to a new location since the overridden values will no longer be accurate.

Note 2: Overriding the GPS will affect movement protection on all mobile platforms preventing them from automatically stowing if vehicle movement and/or severe motion are detected. If the vehicle drives off with the platform deployed, it will not stow as it should because the GPS is overridden. Moving vehicle GPS speed and location must reach min 5km/h and or Elevation angle changes by 2 or more degrees in order for the movement protection feature to trigger.

2 – GPS Latitude Coordinate

3 – GPS Longitude Coordinate

7.6.4.8. C1

This menu allows for the configuration of the controller input settings as well as the platform type.

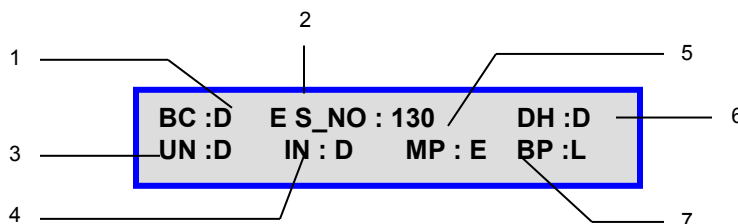


Fig. 46: "C1" Controller Display Screen 1

1-BC (iDirect TX Broadcast)

The 7000 Series Controllers can be configured to broadcast with iDirect service. This allows iDirect users with broadcast configured modems, to lock onto a DVB carrier, and enable the transmitter in the iDirect modem automatically after peaking through the 7000 Series Controller.

D – Disabled

E – Enabled

2 – ES_NO

The Maximum energy to noise of a modem or SNR signal that can be configured to save time during the satellite peaking routine. If Maximum ES/NO value reached the system will stop the peaking routine otherwise routine continues with the complete peaking process. Modifying this parameter may inhibit satellite searching sequence and stop the peaking before the highest possible receiving signal is reached. Only change this value if the highest Maximum ES/NO value is known otherwise leave at default value of 255 to achieve highest MAX ES/NO signal. This option will be disabled when Ref Sat is enabled.

3- Unattended Operation

The user may disable, or set the unattended operation to 5, 10, or 15 minutes. If the system detects motion it will wait 1min, if dish still on signal the system will re-acquire satellite, otherwise the dish will stow due to motion or movement, the system will automatically re-acquire satellite depending on the user entered delay time after stow. Initial stow will only wait 30 seconds no matter what the selected delay time is set to before re-acquiring satellite. For example, if the user selects 5 minutes from the drop down menu, and the system stows due to motion or movement while operational, on first stow it will only wait 30 seconds before re-acquiring satellite. The second stow system waits Five (5) minutes + 30 seconds before automatically re-acquire the satellite signal. The routine uses the following formula: Waiting Time for re-acquire == 30S+ (retry times*selected delay time) default retry time at first stow is 0, second stow is 1, etc... until one (1) hour (3600 seconds) reached.

DIS: Disabled

1: Re-acquire Satellite in 5 minutes

2: Re- acquire Satellite in 10 minutes

3: Re- acquire Satellite in 15 minutes

4 – Inclined Orbit (Sat_Inc)

Enabling this option will allow the system to maintain signal with an inclined orbital satellite. The user may select the time difference between each re-peak on the inclined orbital satellite without disabling the transmitter and maximizing on the signal strength. If signal strength drops before the re-peaking time is due, the system will automatically re-peak to maintain signal strength. Feature enhanced and will be used with regular Ka services to maintain strong signal when platform shifts.

DIS: Disabled

1: Re-peak every 10 minutes

2: Re-peak every 30 minutes

3: Re-peak every 1 hours

4: Re-peak every 2 hours

5: Re-peak every 3 hours

6: Re-peak every 4 hours

7: Re-peak every 6 hours

8: Re-peak every 8 hours

9: Re-peak every 12 hours

5 – Motion Protection

iNetVu® Platform will automatically stow if the antenna is moving at a speed faster than 5 km/h which also changes GPS location (See GPS note 2). Also, the iNetVu® Mobile Platform will automatically stow the antenna should it experience extreme motion, such as severe shaking caused by poor weather conditions. System will redeploy if stowed due to environment condition if “unattended Operation” is enabled but will not redeploy if cause was due to movement of vehicle.

D - Disabled
E - Enabled

6 –DHCP Status

The 7000 Series Controllers can be programmed to obtain an IP address from a DHCP Server (i.e. modem, router, etc.)

D – DHCP Disabled (IP must be entered statically)
E – DHCP Enabled (Controller will dynamically obtain an IP address from the DHCP Server)

7- Beep

This option allows for enabling and disabling the Beeping sound when navigating the LCD screen through the front panel keypad.

D – Beep Disabled, the sound will be completely removed.
L – Beep Enabled, a beeping sound will occur every 2 seconds.
M – Beep Enabled, a beeping sound will occur every 1 seconds.
H – Beep Enabled, a beeping sound will occur every 500 milliseconds.

7.6.4.9. C2

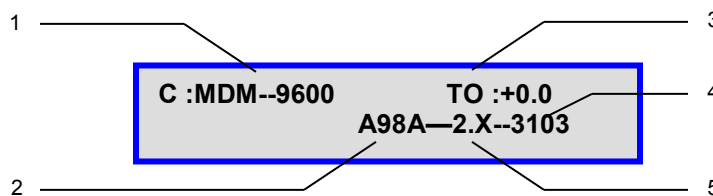


Fig. 47: Controller Configuration (Screen 2)

1 – Console Port Configuration

Used for the configuration of the console port of the 7000 Series Controllers. The Console port could be used for the following:

1) MDM (Modem Communication)

If the COM port is used to establish communication between the Controller and the VSAT Modem (i.e. iDirect, Viasat, etc.), then MDM must be selected in this field, along with the Baud Rate the Modem operates on, prior to configuring the Service, and Communication Interface.

MDM--4800

MDM--9600
MDM--38400

2) B_R (Beacon Receiver)

The Beacon Receiver is a satellite acquisition lock controller that could be used alongside the 7000 Series Controller as an option. The Beacon Receiver will lock on the Beacon Frequency of a satellite based on the power density of the signal. If the optional Beacon Receiver is used, B_R must be selected for the console. The default baud rate is 2400.

3) DBUG-19200 (internal use only)

4) GLOS (GLONASS GPS)

This option allows for external GLONASS GPS communication between the Controller and the external GPS device via COM Port. The default baud rate is 9600.

5) PC

If COM port communication is desired between the 7000 Series Controller and the IMS software application. The default baud rate is 9600, and COM1 through COM9 can be selected.

6) GPS

This option allows the user to communicate and output GPS readings/values from the 7000 series Controller via COM Port (RS232) connection. The default baud rate is 9600.

2- Platform Type

The user is capable of configuring the platform type using iNetVu LCD panel, as well as entering the serial number of the platform located next to the connector plate or on the elevation arm on the platform itself (only the last four or five digits need be entered). Location of serial number will differ between Legacy and New Generation platforms. Note the displayed names on the LCD will differ slightly from the names displayed in the software application.

A75A - iNetVu® A750 Mobile Platform (Ku – Band)
N755A - iNetVu® 75cm New Gen Drive-away Platform (Ka - Band Circular)
A98A - iNetVu® .98cm Mobile Platform (Ku – Band)
N981A - iNetVu® .98cm New Gen Drive-away Platform (Ku – Band)
N985A - iNetVu® .98cm New Gen Drive-away Platform (2 Axis Ka – Band Circular)
 ➤ Ka-98G (Skyware Global Feed boom)
 ➤ Ka-98H (HNS Feed boom)
 ➤ Ka-98V (Viasat Feed boom)
N985B - iNetVu® .98cm New Gen Drive-away Platform (3 Axis Ka – Band Circular)
 ➤ Ka-98G (Skyware Global Feed boom)
A12B - iNetVu® 1.2m Mobile Platform (Ku – Band)
A12P - iNetVu® 1.2m Flyaway Platform (Ku – Band)
A12Q - iNetVu® 1.2m Flyaway Platform (Ku – Band)
N121A - iNetVu® 1.2m New Gen Drive-away Platform (Ku – Band)
Q12A - iNetVu® 1.2m Airline Checkable Platform (Ku – Band)
A15A - iNetVu® 1.5m Mobile Platform (Ku – Band)
A15B/E - iNetVu® 1.5m Mobile Platform (C – Band Standard Linear/INSAT)
A15C - iNetVu® 1.5m Mobile Platform (C – Band Circular)
A18A - iNetVu® 1.8m Mobile Platform (Ku – Band)
A18C - iNetVu® 1.8m Mobile Platform (C – Band Circular)
A18B/E - iNetVu® 1.8m Mobile Platform (C – Band Standard Linear/INSAT)
P18A - iNetVu® 1.8m Flyaway (KU - Band)
P18B/E - iNetVu® 1.8m Flyaway (C – Band Standard Linear/INSAT)
P18C - iNetVu® 1.8m Flyaway (C – Band Circular)
M18A - iNetVu® 1.8m Fixed Motorized (Ku – Band)

M18B/E - iNetVu® 1.8m Fixed Motorized (C – Band Standard Linear/INSAT)
M18C - iNetVu® 1.8m Fixed Motorized (C – Band circular)
M18D - iNetVu® 1.8m Fixed Motorized (X – Band circular)
M12A - iNetVu® 1.2m Fixed Motorized (Ku – Band)
M121A - iNetVu® 1.2m Fixed Motorized C-COM version (Ku – Band)
M125A - iNetVu® 1.2m Fixed Motorized C-COM version (Ka – Band)
N18A - iNetVu® 1.8m Drive-away Platform (Ku– Band)
N18B/E - iNetVu® 1.8m Drive-away (C – Band Standard Linear/INSAT)
N18C - iNetVu® 1.8m Drive-away (C – Band Circular)

3 - TO (Mechanical Offset in Polarization Assembly)

This field allows the user to place a fixed offset for the target polarization angle. This value could make up for any noticeable mechanical offsets in the polarization assembly of the iNetVu platform between -5° to $+5^{\circ}$.

e.g. 1) Calculated Target Polarization Angle = 10°
TX_O = $+3^{\circ}$

The iNetVu system will position @ 7° when pointing

e.g. 2) Calculated Target Polarization Angle = 10°
TX_O = -3°

The iNetVu system will position @ 13° when pointing

4 - Platform Serial Number

The user must enter the last four or five-digits of the platform serial number located next to the connector plate on the iNetVu® Mobile Platform. If platform and controller were purchased as a set, the number has been preconfigured for you.

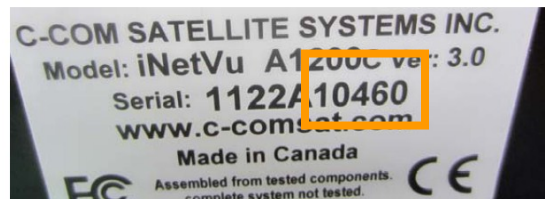


Fig. 48: iNetVu® Platform Identification Tag

5 – Platform Version Number

The user must select the platform version type to ensure the correct configuration parameters and settings are referenced when operating the system. The platform version when selected will differentiate the sensor and other hardware configuration on New Generation platforms which may affect the operation.

7.6.4.10. C3

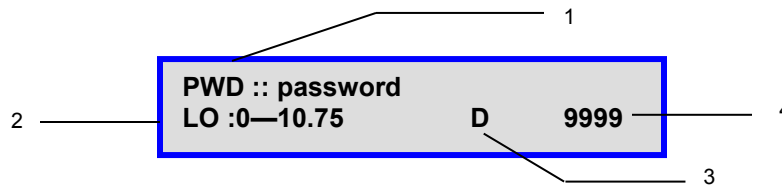


Fig. 49: Controller C3 Configuration

1- Current LCD and Web Interface Password

The user may change this password by using the “↓” and “↑” buttons on the front panel of the 7000 Series controller and the “→” and “←” buttons to navigate through the character fields. This password must be remembered in order for the user to re-enter the LCD screen configuration interface, or the web interface.

2- LO – (LNB)

Configurable to allow satellite accusation when frequency changes, values range from 10.75, 9.75, 10.00, 10.60 and 11.30.

The default value should be set to **10.75**, the user is not required to change this value unless necessary, otherwise select the carrier from the table or enter one if not listed.

3- 22 KHz Tone (Enable/Disable)

This feature allows users to enable/disable the 22 KHz tone for supporting LNB's.

E – Enabled

D – Disabled

4- DISABLE STOW

The system can be configured to disable the STOW by changing the ID.

8755 – Disables the STOW

8955 – Enables the STOW

7.6.4.11. SG

This menu will allow the user to configure the subnet mask IP address and the Gateway IP address of the iNetVu® 7000 Series Controller.

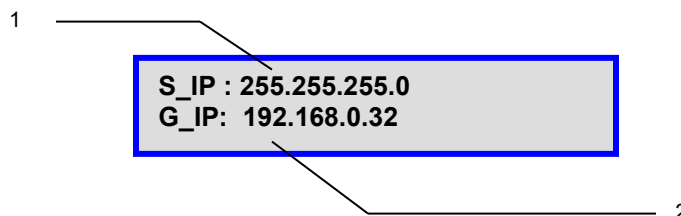


Fig. 50: “GW” (Gateway) Configuration

1 – S_IP (iNetVu® 7000 Series Controller's Subnet Mask IP Address – Default is (255.255.255.0))

2 – Gateway IP Address (Default: 192.168.0.32) this can be changed to support the network you are on.

7.6.4.12. IP

This menu will allow the user to configure the controller IP address, as well as the Modem IP address.

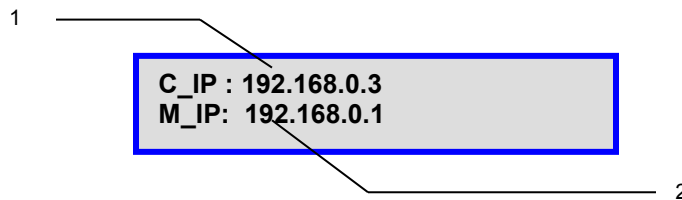


Fig. 51: "IP" Configuration

1 – iNetVu® 7000 Series Controller's IP Address

2 – Modem IP Address

7.6.4.13. SR

This menu will allow the user to configure the controller to the service used (select modem type) for 2-way satellite communication.

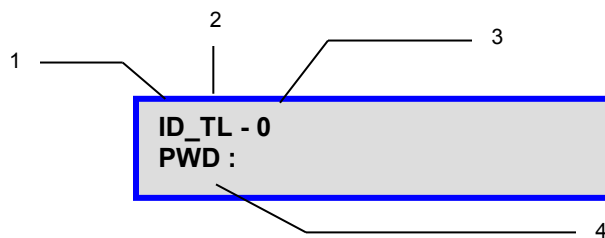


Fig. 52: "SR" (Service) Configuration

1 – Two-Way Mobile Service Selection

Before communication is established with the modem, the user must define the service in use. The iNetVu® 7000 Series Controller supports several services, including:

ID – iDirect Service
IS – iPSTAR Service
VA – ViaSat Service
VA – TW – Viasat Tooway Ka Service
V_SBS2 – Viasat SurfBeam2

CT – Comtech Service
RD – Radyne Service
SF – Surfbeam Service
GL – Gilat Service
TY – Tachyon Service
ST – STM Service
PD – Paradise Service
HN – **Hughes** Service
HN_95 – Hughes Services HN9500 Modem
HN_KA – Hughes Ka Service
ET – Romantis/Eastar Service

NA - Stand Alone service - Used to locate and lock onto a manually configured satellite using the DVB receiver unit inside of the controller independent of the modem. The manual configuration requires:

- Orbital Slot of Satellite
- Receive Polarization
- DVB Type
- L-Band or Ku-Band Rx Frequency (kHz)
- Symbol Rate (ksps)
- FEC Code Rate

2 – Modem Communication Interface

TL - Telnet Interface
CM - Console Port Interface
TP – TCP Interface
HT - HTTP Interface
SN – SNMP Interface
UD – UDP Interface
NA - No modem interface applicable, this option is generally selected with the stand-alone service. Locking and peaking onto satellite is based on the DVB Signal and not on the modem SNR value.

3 – Modem Delay Time

This allows users to delay Controller communication to allow slower modems to catch up. The default setting is 0 – 1s user has option for a 10s delay.

4 – Modem Password/CD-KEY

If necessary, the user must enter the modem password into this area for communication to be properly established. The default password is “P@55w0rd!” which is based on most iDirect modem requirements. If no password is required, this area should be left blank.

CD – Key must be entered instead of the password if iPSTAR Service is selected.

7.6.5. TST

E&A&P	DPY	DPYQ	DPY_C
CP	A_ACP	M_ACP	S_ACP

Fig. 53: *Test Menu*

E&A&P	Will allow for Demo Testing on all axes (elevation, azimuth, and polarization) for a user specified angle range.
DPY	Deploys the antenna to a user specified azimuth, elevation, and polarization position.
DPY_C	Will read the compass heading at a user specified elevation, azimuth, and polarization target point.
DPYQ	Deploys the antenna to a user specified azimuth, elevation, and polarization position without moving EL to 30° first, and without the extra steps that exist in DPY.
CP	Tests the compass' heading and accuracy by rotating the antenna at 90° intervals and comparing the compass readings with the actual antenna's movement.
A_ACP	Performs an automatic ACP test for Hughes service.
M_ACP	Performs a manual ACP test for Hughes service.
S_ACP	This operation will stop the ACP test from continuing.

7.6.5.1. E&A&P

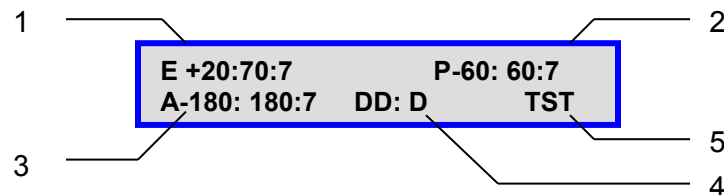


Fig. 54: Test/Demo EL,AZ, PL Configuration

1 – Elevation Range

Allows the user to set the start and stop angle of the elevation axis, as well as set the specific speed for elevation movement. (E +20:70:7 –implies from angle 20 to 70 at speed 7)

2 – Polarization Range

Allows the user to set the start and stop angle of the polarization axis, as well as set the specific speed for polarization movement. (P -60:60:7 –implies from angle -60 to 60 at speed 7)

3 – Azimuth Range

Allows the user to set the start and stop angle of the azimuth axis, as well as set the specific speed for azimuth movement. (A -180:180:7 –implies from angle -180 to 180 at speed 7)

4 – Axis Selection and looping option

The first two characters refer to the axis selection (i.e. **DD**: D).

DD	Disable Test for all axes
EL	Perform test on the Elevation axis only
AZ	Perform test on the Azimuth axis only
PL	Perform test on the Polarization axis only
AA	Perform tests on all the axes.

The third character refers to the looping intervals between tests (i.e. DD: **D**).

D	Disables looping, test will only be performed once.
1	Infinitely loops with 3-seconds interval between tests.
2	Infinitely loops with 6-seconds interval between tests.
3	Infinitely loops with 9-seconds interval between tests.
4	Infinitely loops with 12-seconds interval between tests.
5	Infinitely loops with 15-seconds interval between tests.
6	Infinitely loops with 18-seconds interval between tests.
7	Infinitely loops with 21-seconds interval between tests.
8	Infinitely loops with 24-seconds interval between tests.
9	Infinitely loops with 27-seconds interval between tests.

5 – Test Selection

Initiates the test on the specified axes according to the specified ranges, and speeds.

7.6.5.2. DPY

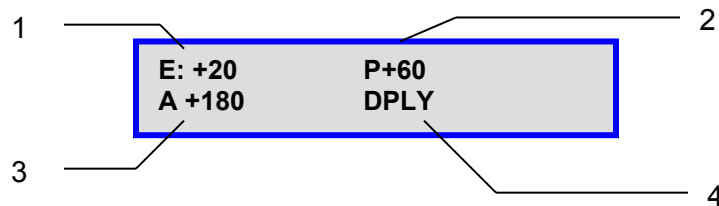


Fig. 55: *Deploy Configuration*

1 – Elevation Movement

User-defined elevation angle of deploy

2 – Polarization Movement

User-defined polarization angle of deploy

3 – Azimuth Movement

User-defined azimuth angle of deploy

4 – Deploy

Automatically moves antenna to the manually entered Elevation, Azimuth and Polarization angles.

7.6.5.3. DPYQ

Note: See DPY for parameter functions and meanings as they are identical. DPYQ deploys to the set angles excluding the fine tuning and pre-condition of EL to 30° as a first step.


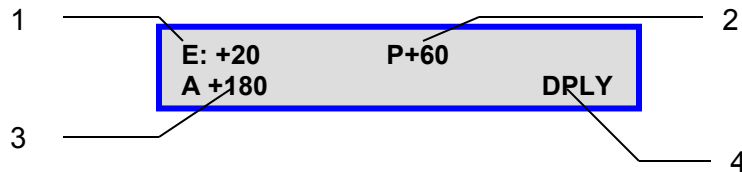


Fig. 56: Quick Deploy Configuration

7.6.5.4. DPY_C

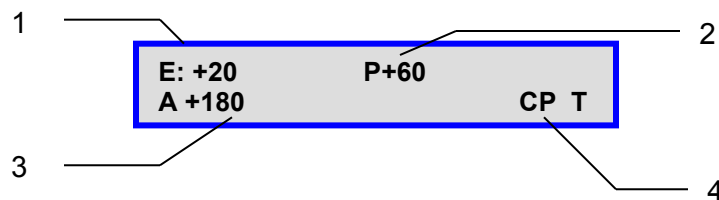

1 – Elevation Movement

User-defined target elevation angle offset for compass reading

2 – Polarization Movement


User-defined target polarization angle for compass reading

3 – Azimuth Movement

User-defined target azimuth angle for compass reading


4 – Check Compass at specified target point.

Tests the compass' heading and accuracy at the user defined Elevation, Polarization, and Azimuth angles, by rotating the antenna at 90° intervals and comparing the compass readings with the actual antenna's movement. This function is mainly used for testing purposes. Ensure proper orientation (front of vehicle is point north). Popup (see below) displayed in Software application.

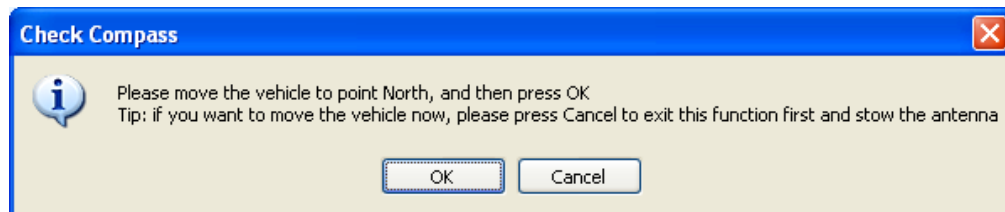

Antenna will move to the target Elevation, Polarization, and Azimuth for reading the compass heading such that the user can determine if the compass reading is accurate at that point.

7.6.5.5. CP

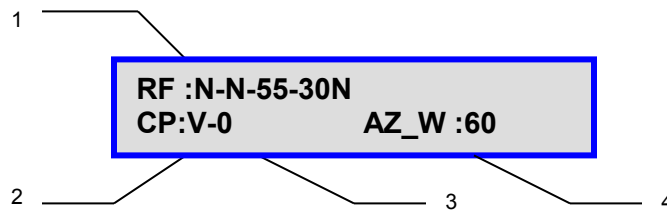

1 – RF Search Mode Status (values displayed but not used for CP tests/calibrations)

N RF Mode is disabled; **Y** will be displayed when enabled.

N RF override mode is disabled; **O** will be displayed when enabled.

RF Threshold (55) Value will be displayed here, this value is configurable.

RF/DVB signal value (30N) – If in RF search mode this will represent RF signal value, if in DVB Mode it will display DVB carrier signal. The letter '**N**' next to the RF Value indicates the LNB is not being powered properly. The letter "**L**" next to the value indicates a DVB signal LOCK.

2 – Compass Status

V – Valid

O – Override

F - Failed

3 – Compass Heading

Compass Heading after Compass has been read.

Approximate Headings:	North	354°
	East	87°
	South	176°
	West	265°

Compass Accuracy Readings

Tests the compass' heading and accuracy by rotating the antenna at 90° intervals and comparing the compass readings with the actual antenna's movement.

- Antenna will center itself; move to the proper Elevation for reading the compass, then read the compass heading.
- Antenna will rotate 90° to each of the following positions and read the compass at each: 0°, 90°, 180°, -90°, and 0°.
- iNetVu® Mobile Software will compare the compass heading values read at each position, and determine if they differ by approximately 90°.
- The Compass Check will display a message regarding the accuracy of the compass with a "PASS" or "FAIL".

4 - AZ Search Window Status (value displayed but not used)

The Search Window is the area of the sky which the iNetVu® Mobile System will search for the desired Satellite. It uses a rectangular window and searches for the Satellite using smaller concentric windows until the desired Satellite is found.

7.6.5.6. **A_ACP**

Initiates an automatic cross-pol test.

7.6.5.7. **M_ACP**

Initiates a Manual cross-pol test.

7.6.5.8. **S_ACP**

Stops the cross-pol testing instantly.

7.6.6. **INFO**

Displays information regarding the iNetVu® 7000 Series Controller's firmware and software versions installed, the Mobile Platform it is configured to, and also any Error Codes detected.

CC1	CC2	DVB_D	DVB_P
MOD	SYS1		ERR

Fig. 57: "INFO" (Information) Display

CC1	Contains information pertaining to the iNetVu® 7000 Controller hardware version, Controller ID, firmware version, boot loader version, Signal
CC2	Threshold, MAC address and configuration ID.
DVB_D	Contains information pertaining to the type of DVB Module in use.
DVB_P	Contains information pertaining to the DVB lock status, as well as the real-time DVB data such as type, modulation, frequency, code rate, and symbol rate.
MOD	Contains information pertaining to the modem ID, serial number, and version.
SYS1	Contains information pertaining to the Platform Type, Serial Number.
ERR	Contains information pertaining to the error code if an error occurs.

7.6.6.1. CC1

This branch menu displays the controller ID (serial number), Hardware Version, Firmware, and Boot loader Version

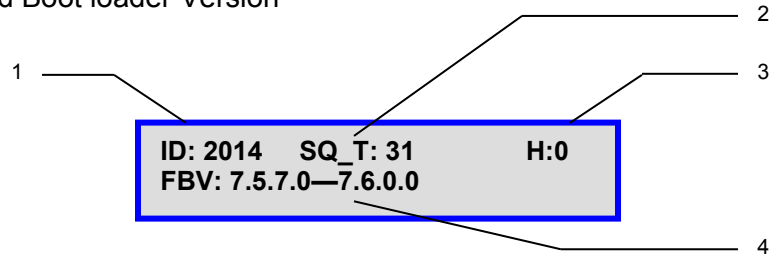


Fig. 58: "CC1" (Controller Info 1) Display

1 – Controller ID Number

The iNetVu® Controller Serial Number is located on the base of the controller. The ID displays the last 4 or 5 digits of the Serial Number.

2 – Signal Quality Threshold

Minimum SNR Value required for the iNetVu® 7000 Series Controller to validate signal.

3 – 7000 Series Controller Board Hardware Type Version

4 – 7000 Series Controller Firmware and Boot loader version

The firmware version is to the left of the dash (i.e. **7.5.7.0** - 7.6.0.0), and the boot loader version is to the right of the dash (i.e. 7.5.7.0 - **7.6.0.0**).

7.6.6.2. CC2

This branch menu displays the controller MAC address and Configuration ID.

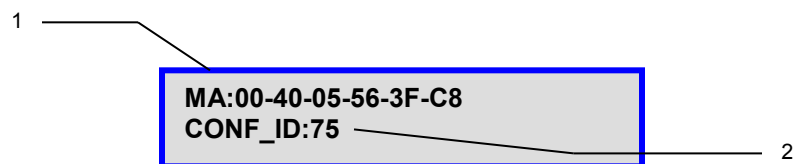


Fig. 59: "CC2" (Controller Info) Display

1 – iNetVu® 7000 Series Controller MAC address

2 – iNetVu® 7000 Series Controller Configuration ID (for internal use).

7.6.6.3. DVB_D

This branch menu displays the controller DVB Module Type and ID.

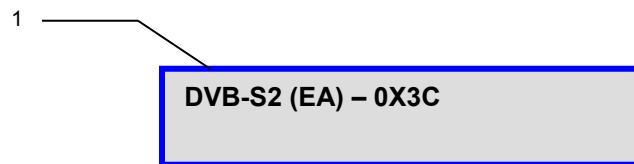


Fig. 60: "DVB" (DVB Module) Display

1 – The DVB Module (Tuner) and ID currently embedded into the iNetVu® 7000 Series Controller.

7.6.6.4. DVB_P

This menu displays the real time DVB module information. If there is no lock on DVB, it will simply indicate "No Lock", otherwise it will display real time DVB information such as DVB type, modulation, code rate (if applicable), symbol rate, and frequency.

7.6.6.5. MOD

This branch menu displays the VSAT Modems ID, Serial Number, and software version number if proper controller/modem communication is established.

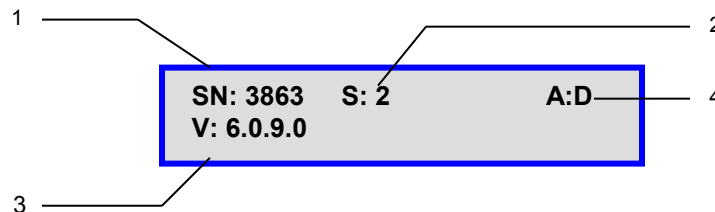


Fig. 61: "MOD" (Modem) Display

1 – VSAT Modem Serial number


2 – Modem Status

- 1 - Modem Initializing Status
- 2 - Modem Normal Status
- 16 - ACP in progress

3 – Satellite Modem's Model and Firmware Version

4 – Auto ACP Status (Hughes modems only)

7.6.6.6. **SYS1**

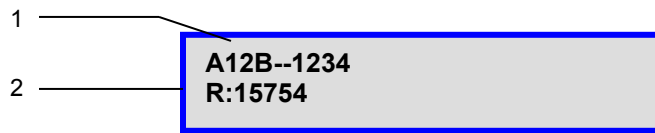

1 – Indicates platform type and serial number.

2 – Data recording information(C-COM internal use)

7.6.6.7. **ERR**

This branch menu displays the error code if an error occurs. The top line represents the latest error; the bottom line will represent any previous errors.



Fig. 62: “ERR” (ERROR) Display


1 – iNetVu® Error code display

8. iNetVu® 7000 Series Software


The iNetVu® Mobile Software plays an integral role in connecting you and iNetVu® Mobile System. The new addition of the iNetVu Setup Wizard will guide first time users and users that are already familiar with the software application to configure the system upon first launch. This new feature allows the user to configure the system upon launching the application with guided information and tips. The iNetVu software has the ability to communicate with the satellite modem and iNetVu controller automatically finding and locking onto a satellite; stowing the antenna when use of system is completed. The user has the option to search for satellite using the following methods, DVB search; RF search and Beacon receiver with the highest precision. Existing features such as the ability to configure and save 5 satellites with 5 different Beacon settings. The user can also monitor real-time system parameters such as Signal Strength, GPS Coordinates, motor currents, as well as allowing the user the capability of manually moving the antenna and performing any maintenance tests and calibration tasks. The user has a choice of languages, currently English, Simplified Chinese & Traditional Chinese, Russian, Spanish and newly added Swedish to select from on the fly. Application windows can be resized on your screen or run in full screen mode given the user the optimized viewing.

8.1. Setup Wizard

The Setup Wizard has been implemented to aid first time users in configuring their system after the software has been installed. A Pop-up window will show at first launch allowing the user to use the Setup Wizard (select Yes) or to bypass it (select No) and use it at a later time. Selecting "Cancel" will exit the Setup Wizard. This window will show every time the **iNetVuMobile7000** software is executed, select "Do not show this message again" to allow software to go straight to the Controls Window when the software is launched. The Wizard can be launched at any time as it will be added as a menu option. See appendix for complete instructional steps on using the Setup Wizard.

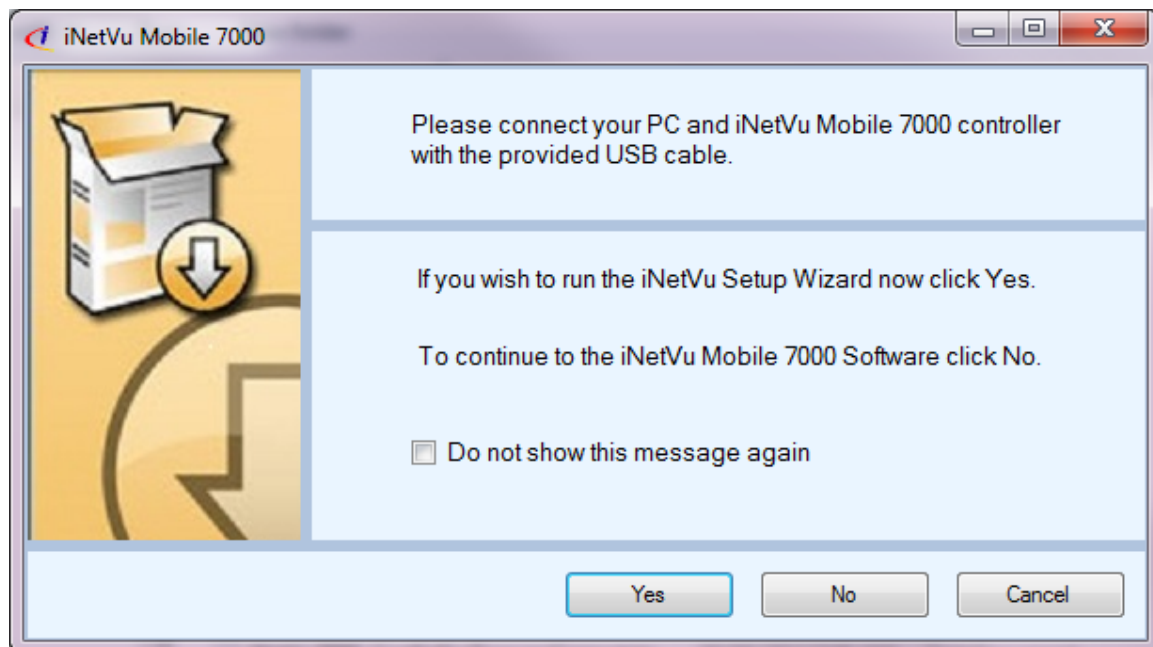

The Wizard will check Firmware and Software versions if “Yes” is selected to validate the versions are the same and prompt the user to update the Firmware if they are different.

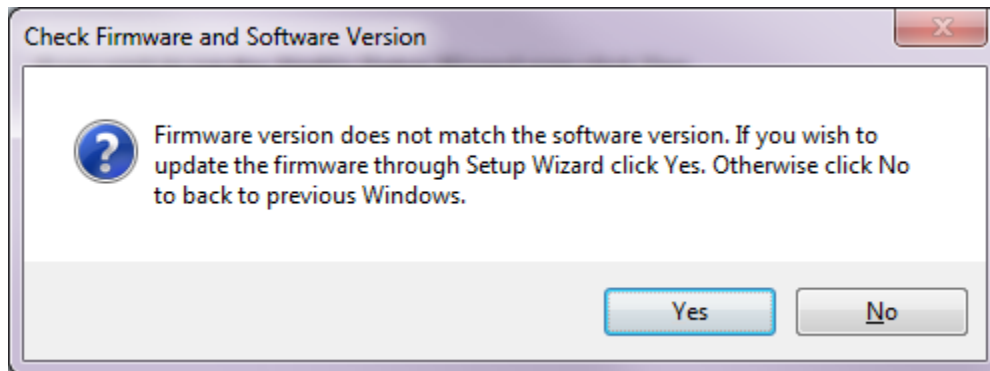

The wizard will automatically resume after the Firmware update has completed, follow onscreen prompts. The wizard will not continue and go back to the previous window if “No” is selected.

8.2. Navigating Menus

To navigate the iNetVu® Mobile Software, **right-click** the iNetVu® swirl icon located in the System Tray.

There are 7 options available:

- Controls
- Maintenance
- Configuration
- About
- Setup Wizard
- Language
- Exit

8.2.1. iNetVu Controls

The Controls menu allows users to monitor system parameters and manually move the antenna, as well as conduct automatic processes and functions.



Improper use of iNetVu Controls menu can render the iNetVu® Mobile System inoperable and may be in violation of FCC regulations. The user can halt any operation at any time by clicking STOP button located in the Automatic Controls or on the Controller front panel.

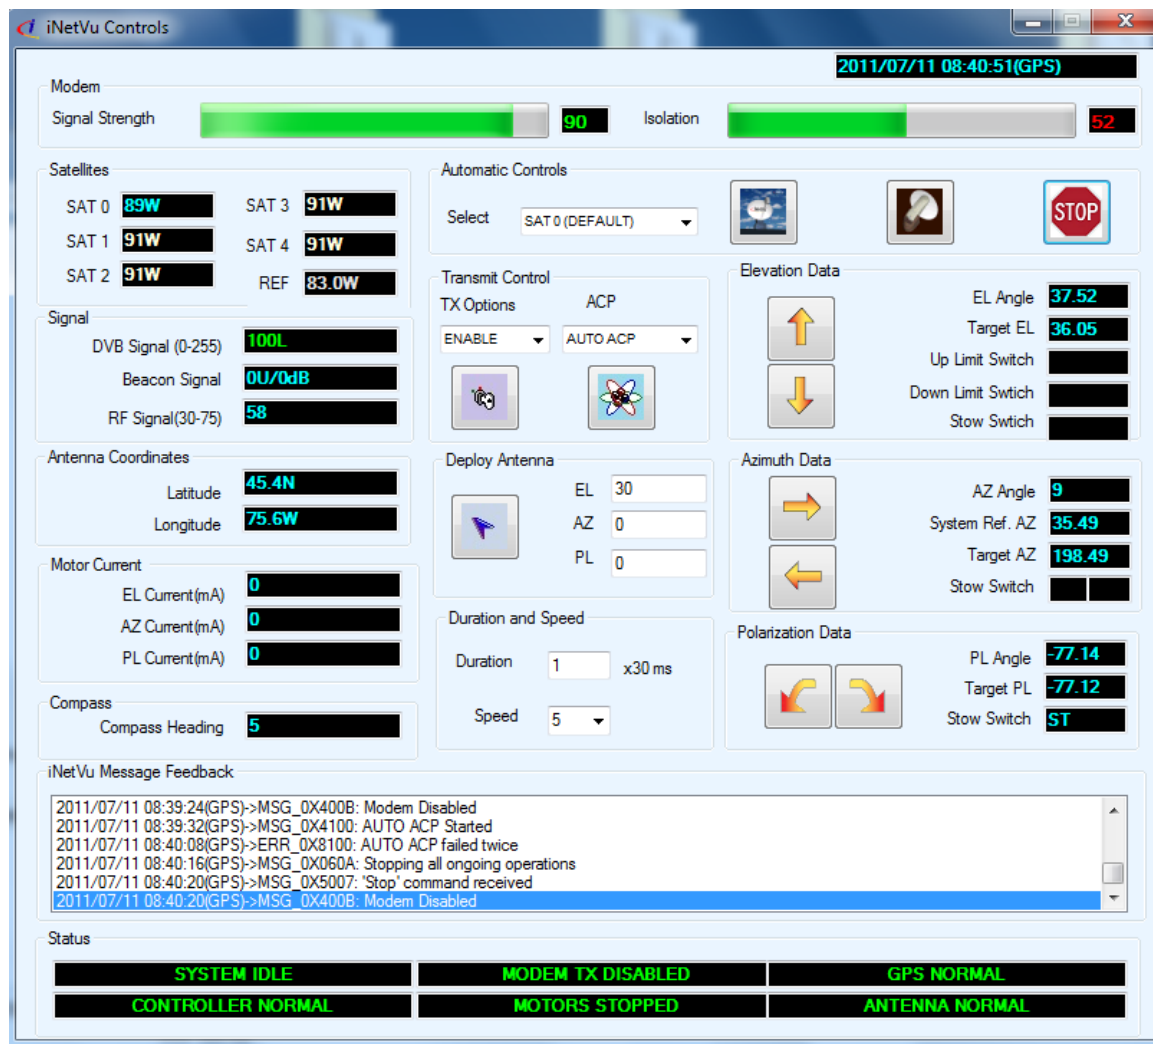


Fig. 63: Controls Window

Signal Strength

A real-time Signal Quality Factor (SQF). A value obtained from the Satellite Modem when locked onto a signal. Using a red/yellow/green color-coated system, it denotes the strength of the received signal from the current satellite.

Should the Signal Strength be lower than 29 when locked on satellite, click **Find Satellite** again to re-acquire the signal.



Fig. 64: Signal Strength Display

Isolation Value

Denotes isolation to the current satellite transponder. This value is not an indication of signal strength when transmitting a signal.

The Isolation Value will correspond to the transmit quality of an HNS system. Otherwise, this field is not applicable.



Fig. 65: Isolation Value Display

Date/Time

Current date and time as received from the GPS Antenna. Should the GPS experience any problems, the alternate source is your PC internal date and time.




Fig. 66: Date/Time Display

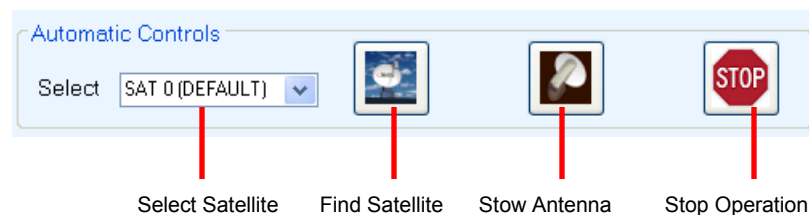

Automatic Control

Fig. 67: Automatic Control Buttons

**Select Satellite**

Choice of 5 Satellites that user can select from by simply clicking on the drop down arrow. Satellites 0 to 4 can be preconfigured and saved to allow user to search for desired satellite. Sat 0 is default satellite and will be the one searched on if no other is selected from the drop down list.

**Find Satellite**

Automatically finds and locks onto the satellite signal by communicating with the Satellite Modem and using the GPS coordinates, the compass heading, and internal parameters of the Satellite Modem. Typically, it takes approximately 3-5 minutes to find satellite. If the Antenna is already pointed on the satellite, clicking **Find Satellite** will re-peak the Antenna onto the signal.

Search routine will ignore GPS and RF status until after compass heading has been read to reduce search time. If GPS and RF conditions not met after 60 seconds the search will fail and a message will be displayed.

**Stow Antenna**

Re-centers the antenna and lowers it into the stowed position.

Note: The stow command for the Fly-Away(s) moves the Platform to a home position.

**Stop Operation**

Halts all motor movements and disrupts all communication between iNetVu® Mobile System components.

Orbital Slot Location of Configured Satellites

The target and Reference satellites section displays the satellite longitude for each configured satellite. If no satellites are configured, the default is SAT0.



Angle and Limit Switch Indicators

Displays real-time angles and Limit Switch status


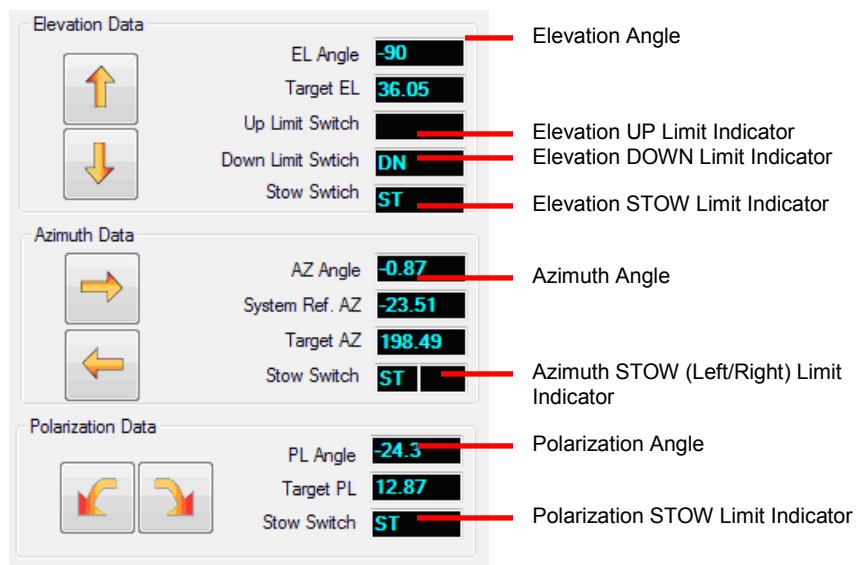


Fig. 68: Angle and Limit Switch Indicators

- When the Elevation STOW Limit Indicator is ON, the Elevation Angle will change to “-90”, to denote that the iNetVu® Mobile Platform is now stowed. It will remain “-90” until the indicator turns OFF.
- For iNetVu® 1200/1500/1800 KU Mobile Platforms, the Polarization Stow Indicator will ALWAYS be ON.
- 981 and 1201 Ku systems will stow the Polarizer on the same side that the PL target angle was last positioned at. 981 will stow at ± 50 degrees from the center. 1201 will stow at ± 90 from the center.
- The ACFLY-1200 (Airline Checkable) will display L for AZ Left limit, R for AZ Right limit and ST for AZ Stow.
- The 981 and 1201 KU Drive-away Platforms will display “AW” at the $\pm 180^\circ \pm 5$ degree limits.

- A YELLOW colour “STF” will appear if a Limit Switch has been disabled in the Maintenance Menu (Ka-75V, Ka-98H, Ka-98G and Ka-98V Ka platforms).
- LHCP or RHCP will display in the PL Angle field for 3rd axis polarization to indicate right hand or left polarizer position (Ka-98G third axis).
- If the Polarization is disabled (for circular signal frequency bands such as Ka-Band or X-Band) the Polarization Stow Switch must be closed and may display “DDD”.

Manual Movement

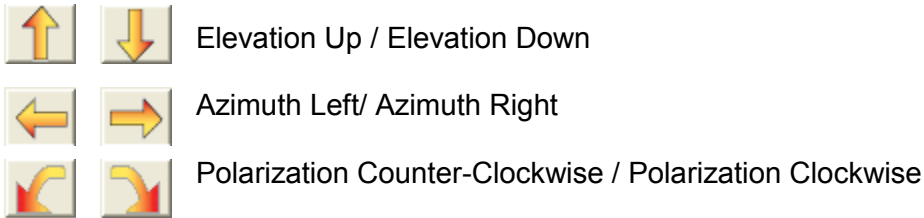

Using the Duration and Speed parameters, the Manual Movement Buttons allow you to move the antenna in six (6) directions. For the correct point of reference for the directional movements, you must be facing the Mobile Platform's Reflector.



Fig. 69: Orientation Reference for Azimuth and Polarization

**Enable/Disable Transmitter**

Automatically Enables or Disables the Transmission process. Background will turn grey when transmitter is disabled and green when the transmitter is enabled.

**Enable/Disable ACP**

Enables or Disables the ACP (Automatic Cross-Pol Testing), and Manual Cross-Pol Testing.




Fig. 70: ACP Option Selection

To Enable ACP, select “AUTO” or “MANUAL” from the ACP drop down list and click on the ‘Enable/Disable ACP’ Button to initiate.

To Stop ACP testing, select “STOP” from the ACP drop down list, and click on the Enable/Disable ACP Button to initiate.

**Deploy Antenna**

Automatically moves antenna to the manually entered Elevation, Azimuth and Polarization angles.

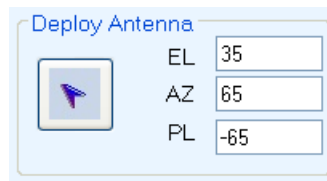


Fig. 71: Deploy Antenna Input Values

**Quick Deploy**

Automatically moves antenna to the manually entered Elevation, Azimuth and Polarization angles without first moving to 30° on Elevation. This process moves to the set angles without the extra angle tuning that occurs with the Deploy Antenna button.


Duration

Length of time of Manual Movement using increments of 30ms

Speed

Motor Speed of Manual Movement

3 = Slowest, 9 = Highest

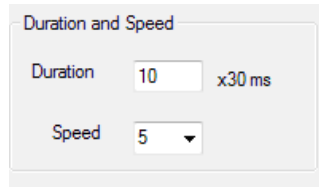

Duration and Speed

Duration: 10 x30 ms

Speed: 5

Fig. 72: Duration and Speed Input for Manual Movements

DVB Signal (0-255)

DVB Signal received from the DVB Tuner. A “U” next to the value indicates an “unlocked” status. An “L” next to the DVB value indicates locked signal.

Beacon Signal (0-100)

If the optional beacon receiver is used, the Beacon Signal will appear in this area along with the power density received from the satellite. This will only appear when a lock status occurs which is indicated by an “L” next to the beacon signal value.

RF Signal (30-120)

Displays the real time RF Signal throughout the acquisition process. A value of 30 that is flashing Red and or Yellow indicates the LNB is not being powered appropriately, or there is an issue with the coax cable connection. Some Ka services will display 70 if threshold is overridden (i.e. Tooway & SurfBeam2).

RF Threshold (30-75)

Used in RF mode search for determining proper satellite frequency. This can be configured and viewed on the Maintenance screen.

Antenna Latitude/Longitude

GPS Coordinates acquired from the GPS Antenna or manually overridden values.

EL Motor Current


Current drawn for Elevation Motor (in Milliamps mA)

AZ Motor Current

Current drawn for Azimuth Motor (in Milliamps mA)

PL Motor Current

Current drawn for Polarization Motor (in Milliamps mA)

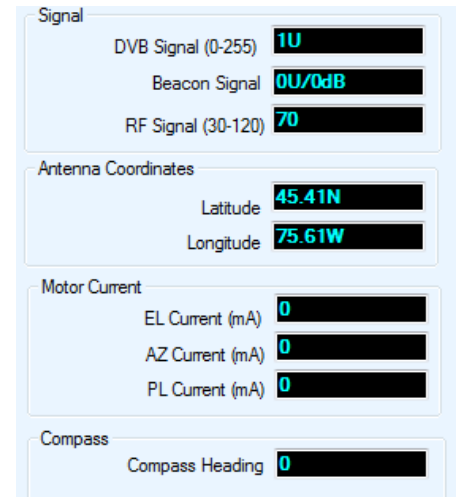

Signal

DVB Signal (0-255) 1U

Beacon Signal 00/0dB

RF Signal (30-120) 70

Antenna Coordinates

Latitude 45.41N

Longitude 75.61W

Motor Current


EL Current (mA) 0

AZ Current (mA) 0

PL Current (mA) 0

Compass

Compass Heading 0

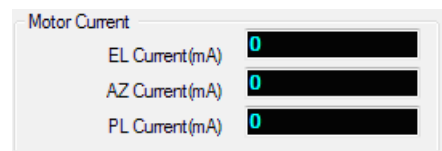

Motor Current

EL Current(mA) 0

AZ Current(mA) 0

PL Current(mA) 0

Target Satellite parameters

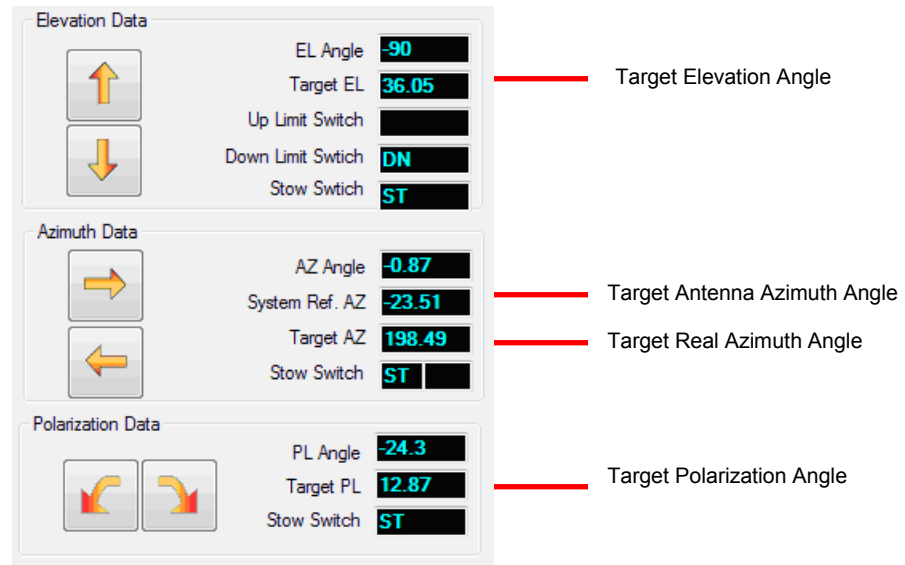


Fig. 73: Satellite Target Angles

Target Elevation (Target EL)

Calculated Elevation Angle that the Antenna must point in order to locate the desired Satellite.

Target Real Azimuth (Target AZ)

Calculated Azimuth Angle that the Antenna must point in order to locate the desired Satellite in reference to True North.

Target Antenna Azimuth (System Ref. AZ)

Calculated Azimuth Angle that the Antenna must point in order to locate the desired Satellite in reference to the Mobile Platform's center position.

Target Polarization (Target PL)

Calculated Polarization Angle that the Antenna must be in order to find the desired Satellite.

Compass Heading

Orientation of the Mobile Platform.

This value is only read during the Find Satellite, Check Compass, and Calibrate Compass processes.

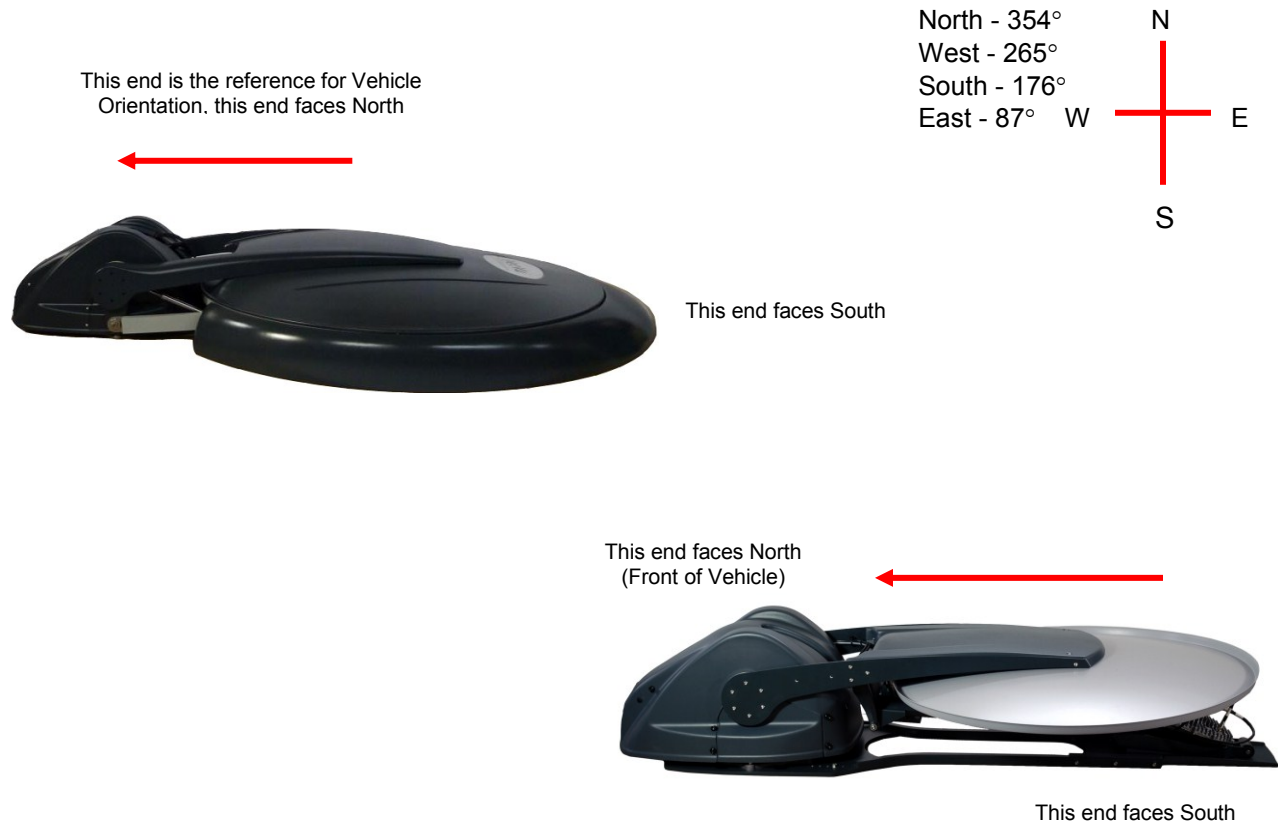


Fig. 74: Compass Orientation and Approximate Values

Message Panel

Displays real-time status updates, system messages, and error codes.

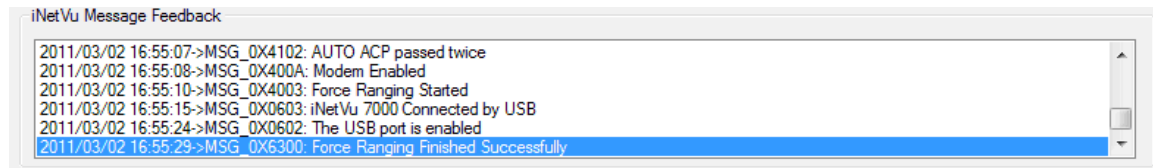


Fig. 75: *Message Panel*

Status Panel

The Status Panel describes system operations that are either imminent, taking place, or the current status of that component. The Status Panel is located at the bottom of the Basic Controls and Advanced Controls menus, and has a set of four and six message blocks, respectively.

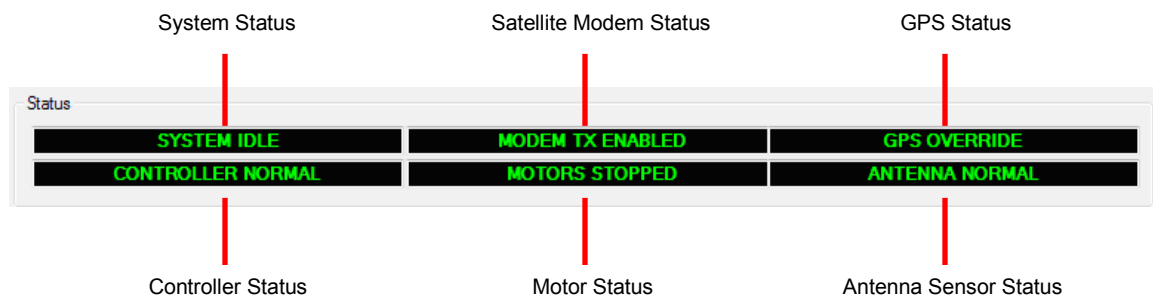


Fig. 76: *Advanced Controls - Status Panel*

The indicators notify the user of any actions taking place with a combination of color-coded messages.

- Solid **"GREEN"** messages indicate a stable and normal condition for that component.
- Flashing or solid **"LIGHT BLUE"** messages indicate a change in status occurring that the user should be aware of.
- Flashing **"RED"** and **"YELLOW"** messages indicates a problem with that component.

Should the entire Status Panel flash **"RED"** and or **"YELLOW"**, a communication failure between the PC and the iNetVu® Controller has occurred. Ensure that the Controller is powered, and that all USB drivers and cables (USB, LAN or Serial) are installed properly.

System Status

Displays current system environment

- **System Idle**
No operations are currently being performed.
- **ACP Testing**
ACP Testing is being performed.

- **Skew Adjusting**
Polarization adjustment to adjust the polarization axis for any vehicle inclination. The Azimuth Axis will rotate 90° on both sides of the peaked azimuth angle, then return to the satellite position, and adjust the polarization axes to compensate for any recognized mount inclination.
- **Manual Operation**
Manually controlled movement via Controls menu has been detected.
- **Mount Testing**
System test or demo being performed via System Test and Demo menu.
- **Peaking on Satellite**
System makes minor adjustments in positioning in order to receive optimal Signal Strength.
- **AZ Calibration**
Azimuth Calibration is being performed.
- **PL Calibration**
Polarization Calibration is being performed.
- **CP Calibration**
Compass Calibration is being performed.
- **Positioning**
An automatic movement command has been initiated (i.e. Find Satellite or Deploy Antenna) and the antenna is moving into the designated position.
- **Searching Satellite**
Antenna is performing a search pattern to locate the satellite.
- **Stowing Antenna**
Antenna is being stowed.
- **Unknown Status**

Satellite Modem Communication Status

Indicates the Transmitter status and displays any issues in communication with the Satellite Modem

- **Modem TX Enabled**
Indicates that the transmitter has been enabled.
- **Modem TX Disabled**
Indicates that the transmitter has not been enabled.
- **No Modem Communication**
The controller is trying to establish communication with the modem and or No power is applied to the modem.

GPS Status

Displays condition of the GPS signal

- **GPS Normal**
GPS signal is being received from the GPS Antenna.
- **GPS Failed**
GPS signal is not being received from the GPS Antenna.
- **GPS Override**
GPS coordinates have been manually overridden from the Maintenance menu.

Controller Status

Displays communication status between the PC and the iNetVu® Controller

- **Controller Normal**
Indicates normal communication status between the Controller and the PC
- **Controller Failed**
A failure in communication between the Controller and the PC has been detected.

Motor Status

Displays the movement of the 3-axis motors: Elevation, Azimuth, and Polarization

- **EL Moving UP / DN**
Elevation Motor is moving in the respective direction
(UP = Up, DN = Down)
- **AZ Moving Left / Right**
Azimuth Motor is moving in the respective direction
- **PL Moving CCW / CW**
Polarization Motor is moving in the respective direction
(CCW = Counter Clock-Wise, CW = Clock-Wise)
- **Motor Unknown**
Motor Status cannot be detected.

Antenna Status

Displays any relevant information regarding the Limit Switches, Potentiometers and/or Inclinometers.

- **Antenna Normal**
Limit Switches are ON/OFF in the correct relation to the Elevation, Azimuth and Polarization Angles.
- **Sensor Error**
This status is an indication of problem with cabling or hardware and/or controller setup. Stop and troubleshoot before proceeding.
- **Antenna Unknown**
Mobile Platform cannot be found. Ensure that the iNetVu® Controller is functioning and that all cables are connected should this indicator appear.


8.2.2. Maintenance

The Maintenance menu allows users to configure the communication between the controller and platform type, as well as various system parameters for optimal performance. Separate tabs have been added to isolate the 3 axis as well as GPS and Compass for easier configuration.

The Maintenance menu allows users to conduct maintenance tests/processes, override parameters, and troubleshoot.

Note: It is recommended to power cycle the controller after firmware upgrades or configuration changes have been saved. Recycling Controller power will confirm and validate settings to ensure correct values are propagated and displayed on all screens, this is important especially for Ka platforms.

Click **SAVE ALL** when any modifications are made, and before power recycling the controller to ensure data will be saved on controller side.

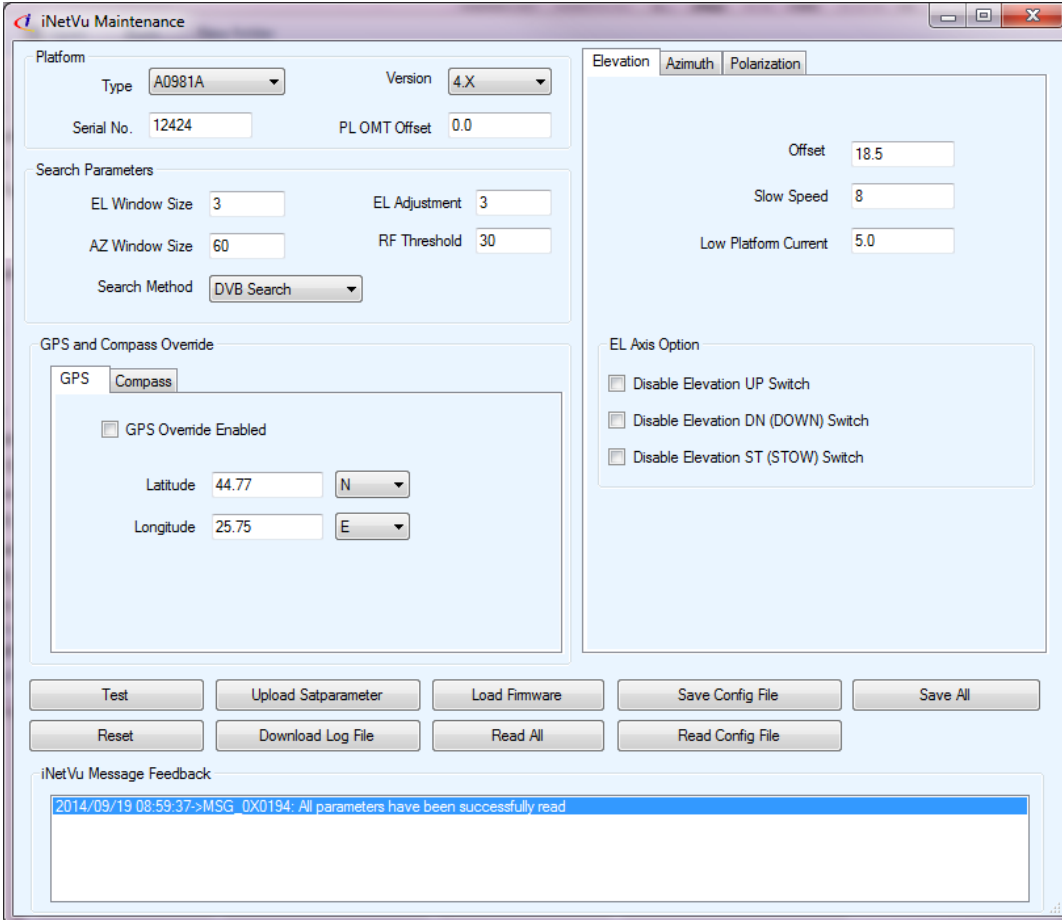

The screenshot displays the iNetVu Maintenance window, which is organized into several functional sections. At the top left, the 'Platform' section includes dropdown menus for 'Type' (set to A0981A) and 'Version' (set to 4.X), along with text input fields for 'Serial No.' (12424) and 'PL OMT Offset' (0.0). Below this is the 'Search Parameters' section, featuring input fields for 'EL Window Size' (3), 'EL Adjustment' (3), 'AZ Window Size' (60), and 'RF Threshold' (30), with a 'Search Method' dropdown set to 'DVB Search'. The 'GPS and Compass Override' section contains two tabs: 'GPS' and 'Compass'. The 'GPS' tab is active, showing a checkbox for 'GPS Override Enabled' and input fields for 'Latitude' (44.77) and 'Longitude' (25.75), each with a directional dropdown (N and E respectively). To the right, the 'Elevation' tab is selected, showing input fields for 'Offset' (18.5), 'Slow Speed' (8), and 'Low Platform Current' (5.0). Below these is the 'EL Axis Option' section with three checkboxes: 'Disable Elevation UP Switch', 'Disable Elevation DN (DOWN) Switch', and 'Disable Elevation ST (STOW) Switch'. At the bottom of the window is a row of buttons: 'Test', 'Upload Satparameter', 'Load Firmware', 'Save Config File', 'Save All', 'Reset', 'Download Log File', 'Read All', and 'Read Config File'. The very bottom features an 'iNetVu Message Feedback' area with a text box containing the message: '2014/09/19 08:59:37->MSG_0X0194: All parameters have been successfully read'.

Fig. 77: iNetVu® 7000 Maintenance Window

8.2.2.1. Platform Parameters



The screenshot shows a 'Platform' configuration window with the following fields:

- Type:** A dropdown menu currently showing 'A0981A'.
- Version:** A dropdown menu currently showing '1.X'.
- Serial No.:** A text input field containing '9999'.
- PLOMT Offset:** A text input field containing '0.0'.

Fig. 78: Maintenance Platform Parameters

Type

The user is capable of configuring the platform in use.

- A0750A** - iNetVu® A750A (.75m) Mobile Platform (Ku Band)
- A0755A** - iNetVu® A0755A - New Gen Drive-Away (Ka Band circular)
- A0980A** - iNetVu® A980A (.98m) Mobile Platform (Ku Band)
- A0981A** - iNetVu® A981A (.98m) New Gen Drive-Away Platform (Ku Band)
- A0985A** - iNetVu® .98m New Gen Drive-Away (2 Axis Ka Band circular)
 - **Ka-98G** (Skyware Global Feed boom)
 - **Ka-98H** (HNS Feed boom)
 - **Ka-98V** (Viasat Feed boom)
- A0985B** - iNetVu® .98m New Gen Drive-Away (3 Axis Ka Band circular)
 - **Ka-98G** (Skyware Global Feed boom)
- A1200B/C** - iNetVu® A1200B/C (1.2m) Mobile Platform (Ku Band)
- A1200P** - iNetVu® A1200P (1.2m) Flyaway Platform (Ku Band)
- A1200Q** - iNetVu® A1200Q (1.2m) Flyaway Platform (Ku Band)
- A1201A** - iNetVu® A1201A (1.2m) New Gen Drive-Away Platform (Ku Band)
- A1210A** - iNetVu® A1210A Airline Checkable Carbon Fibre Reflector (Ku Band)
- A0120A** - iNetVu® A0120A – 1.2 Fixed Motorized (Ku Band)
- A0121A** - iNetVu® A0121A – 1.2 New Gen Fixed Motorized (Ku Band)
- A0125A** - iNetVu® A0125A – 1.2 New Gen Fixed Motorized (Ka Band)
- A1500A** - iNetVu® A1500A Mobile Platform (Ku Band)
- A1500B/E** - iNetVu® A1500B Mobile Platform (Standard C Band Linear/INSAT)
- A1500C** - iNetVu® A1500C Mobile Platform (C Band Circular)
- A1800A** - iNetVu® A1800A Mobile Platform (Ku Band)
- A1800B/E** - iNetVu® A1800B Mobile Platform (C Band Standard Linear/INSAT)
- A1800C** - iNetVu® A1800C Mobile Platform (C Band Circular)
- A0180A** - iNetVu® A0180A - 1.8 Fixed Motorized (Ku Band)
- A0180B/E** - iNetVu® A0180B/E - 1.8 Fixed Motorized (Standard C Linear/INSAT)
- A0180C** - iNetVu® A0180C - 1.8 Fixed Motorized (C Band Circular)
- A0180D** - iNetVu® A0180D - 1.8 Fixed Motorized (X Band Circular)
- A1801A** - iNetVu® A1801A - 1.8 Drive-Away (Ku Band)
- A1801B/E** - iNetVu® A1801B - 1.8 Drive-Away (C Band Standard Linear/INSAT)
- A1801C** - iNetVu® A1801C - 1.8 Drive-Away (C Band Circular)
- A1810A** - iNetVu® A1810A - 1.8 Flyaway (Ku Band)
- A1810B/E** - iNetVu® A1810B/E - 1.8 Flyaway (C Band Standard Linear/INSAT)
- A1810C** - iNetVu® A1810C - 1.8 Flyaway (C Band Circular)

Platform Serial Number

The user will be required to enter the last four or five-digits of the platform serial number located next to the connector plate on the iNetVu® Mobile Platform.



Fig. 79: Platform Identification

Platform Hardware Version

This field identifies hardware changes in the New Generation platform types.

PL (Skew) Offset for OMT

This field allows the user to place a fixed offset for the target polarization angle. This value could make up for any noticeable mechanical offsets in the polarization assembly of the iNetVu platform between -5° to $+5^\circ$.

e.g. 1) Calculated Target Polarization Angle = 10°

TX_O = $+3^\circ$

The iNetVu system will position @ 7° when pointing

e.g. 2) Calculated Target Polarization Angle = 10°

TX_O = -3°

The iNetVu system will position @ 13° when pointing

8.2.2.2. Search Parameters

The iNetVu controller supports DVB-S and DVBS2ACM carriers. The recommended method of satellite search is DVB using DVB-S/S2, followed by DVB reference satellite search with RF search being the last option of choice. If using RF search, a **valid RF frequency** must be entered and is highly recommended; this can be the service frequency or any other valid RF frequency from a known carrier (preferably taken from Modem parameters). If no valid frequency is known, than 10MHz increments may be added to the lower range value until satellite acquisition. The tuner range frequency must be in the range of 950 MHz – 2150MHz.

The screenshot shows a 'Search Parameters' window with the following settings:

- EL Window Size: 3
- EL Adjustment: 3
- AZ Window Size: 60
- RF Threshold: 30
- Search Method: RF Search (selected from a dropdown menu)
- RF Override: ☒

Fig. 80: Maintenance – Search Parameters

EL Window / AZ Window

The Search Window is the area of the sky which the iNetVu® Mobile System will search for the desired Satellite. It uses a rectangular window and searches for the Satellite using smaller concentric windows until the desired Satellite is found. The Search Window range may be manually changed from the default settings which iNetVu® uses to find the desired satellite.

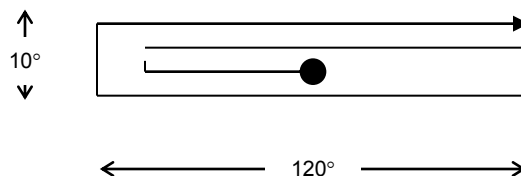


Fig. 81: Satellite Search Window

The default Azimuth (Horizontal) range is 60° on each side of the Target Point and the default Elevation (Vertical) range is 3° on each side of the Target Point.

Increasing the size of the Search Window will increase the ability to find the desired Satellite, although increasing the Search Window will lengthen the search time.

Both search windows will be automatically expanded (AZ will increase to 90 and EL will be set to 5) if satellite signal is not found with the default search window settings.

Caution: system may overshoot by 10° (on AZ Window) from the set window limits.

EL Adjustment

Parameter used to determine the small incremental adjustments required for a more accurate satellite search. Decreasing this value will add accuracy to the Search Window, but will increase the search time. The elevation angle will adjust by the specified number of degrees from the calculated angle while searching on an inclined surface.

Search Method

DVB or RF search are selectable from the drop down window. DVB will search directly on DVB-S1 or DVB-S2 carrier and lock on it. DVB is the option of choice to use when searching for satellite. RF option will allow the user to base satellite searching and peaking strictly on RF instead of DVB. This method of searching could be used when the user is having a hard time finding the transponder data for a specific satellite, or if no transponder data exists. The controller will then peak on the modem signal when the satellite is found. RF search should be used as a last resort after DVB and or DVB with reference satellite.

RF Threshold

Used by the iNetVu® Mobile Software to begin a signal optimization process for peaking on a Satellite signal after initially locating it. This field should only be used if the RF threshold is to be overridden. Ka Band systems with single TRIA cable will have the RF threshold set to 75 by default (service dependent), this allows the RF Signal to be in operation range (RF Signal==70 on iNetVu Controls window) thus allowing the search process to begin. The RF Threshold can also be manually set to any value ranging from 40 to 60 which will display the true value of RF Signal on the iNetVu Controls window. Setting the RF Threshold to 30 will put the search into a step-through-search moving the AZ axis in small incremental steps, this method increases the search time.




Search Parameters

EL Window Size	3	EL Adjustment	3
AZ Window Size	60	RF Threshold	30
Search Method	RF Search		
<input checked="" type="checkbox"/> RF Override			

Fig. 82: Maintenance – RF Search Mode with RF Override

8.2.2.3. GPS and Compass Override

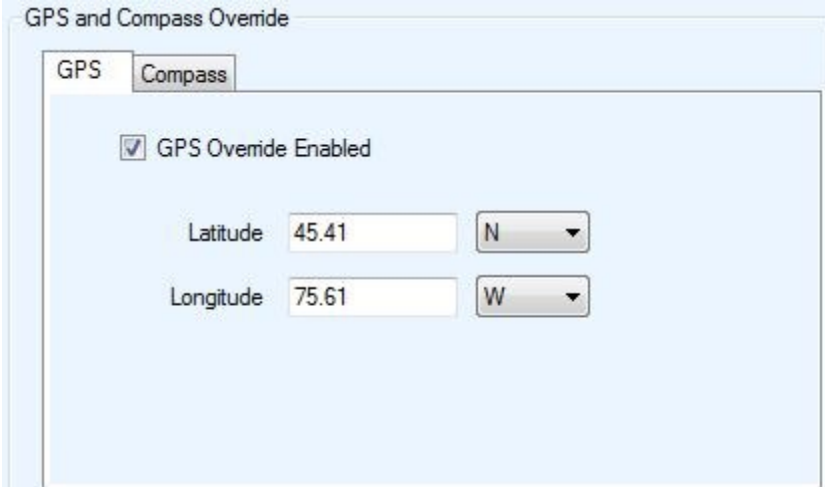

The screenshot shows a software window titled "GPS and Compass Override". It has two tabs: "GPS" and "Compass". The "GPS" tab is active. Inside the window, there is a checkbox labeled "GPS Override Enabled" which is checked. Below the checkbox, there are two rows of input fields. The first row is for "Latitude" with the value "45.41" and a dropdown menu showing "N". The second row is for "Longitude" with the value "75.61" and a dropdown menu showing "W".

Fig. 83: Maintenance – GPS Parameters

GPS Override Checkbox

Enables the GPS coordinates to be manually overridden. This should only be enabled in the event that the GPS Antenna is malfunctioning and the user has a reliable, alternate source for coordinates. If this box is checked, the GPS coordinates should be manually entered in the 'GPS Latitude', and the 'GPS Longitude' fields described.

****Note:** If you have overridden the GPS coordinates, they will have to be updated if the Mobile Platform has moved to a new location since the overridden values will no longer be accurate.

Warning: Overriding the GPS prevents the movement protection feature from working properly, and will not stop the antenna if vehicle drives off, as neither speed nor GPS relocation can be detected. Moving vehicle speed must reach min 5km/h plus Elevation angle change of 2 degrees or more with GPS coordinates change in order for the movement protection feature to trigger.

GPS Latitude

This field represents the Latitudinal GPS coordinates of the iNetVu® system.

GPS Longitude

This field represents the Longitudinal GPS coordinates of the iNetVu® system.

The screenshot shows a software window titled "GPS and Compass Override". It has two tabs: "GPS" and "Compass", with the "Compass" tab selected. Inside the "Compass" tab, there are three input fields: "Compass Reading Elevation Angle" with the value "30", "Direction" with a dropdown menu showing "0", and "Compass Offset" with the value "0". Below these fields are three checkboxes: "Disable Auto Calibrate Compass Offset", "Override Compass", and "Full Search", all of which are currently unchecked. At the bottom of the dialog are three buttons: "Restore CP", "Calibrate Compass", and "Check Compass".

Fig. 84: Maintenance – Compass Parameters

Compass Reading Elevation Angle

Number of degrees that the Antenna requires to be elevated to ensure that the compass is level and is able to acquire an accurate compass reading.

Direction

The direction the front of the Mobile Platform is rotated in reference to True North. In order to override the compass, the user must know where true north is located to enter the direction.

Compass Offset

It's the required adjustment to reorient the compass heading to the actual magnetic North by taking into consideration the metal surrounding around the compass location on the Antenna platform. This value is calculated automatically by the iNetVu software once the system gets automatically pointed to the right satellite. User can manually override this value if required or as directed by C-COM support team.

Disable Auto Calibrate Compass Offset

If this option is unchecked the following will take place. Auto Calibration on compass occurs when the angle difference of 20 degrees or more is detected between AZ angle and System AZ Ref when the system finishes the satellite search routine and locks on signal. A compass offset value is then automatically entered and is used the next time a Find Satellite command is triggered. When this option is checked, it will NOT Auto Calibrate the compass offset.



Tips and Recommendations

Compass Issues?

If you are in an area where there is magnetic interference or the compass readings are incorrect, it is recommended to select Full Search which will also override the compass.

❖ Full Search == Override Compass

Selecting **Full Search option** will auto select **Override Compass** feature. See **Full Search** option for more details.

Override Compass Checkbox

The Compass is pre-calibrated by a professional installer at the time of system installation or come pre-calibrated from the compass manufacturer.

A number of factors can contribute to the iNetVu® compass to produce an incorrect reading such as being parked in close proximity to a large metallic object. Should the compass heading be inaccurate by more than 20 degrees, you may need to re-calibrate or Restore it (Mount Dependent), or select “Override Compass” option. Ensure that you are using a reliable alternate source to acquire the correct direction if such device is to be used, otherwise overriding compass will suffice for incorrect compass reading.

After enabling Override, you may enter the vehicle's direction as indicated on your alternate compass. Keep in mind that the base of the iNetVu® Mobile Platform is oriented to the front of your vehicle (back of reflector and front of vehicle face the same direction) refer to orientation figures in this document. When taking the direction using the alternate compass, take the direction of your reading while facing the front of the vehicle, and use this orientation for the **Vehicle Direction** field.

Full Search

Performs a full 360° Azimuth search for the desired Satellite. This process may take up to 30 minutes to find and lock onto Satellite. Selecting **Full Search** will auto select **Override Compass** and set the AZ Window to 180 or any other value (60 and above) depending on the Platform type. This value can be overridden to a more desirable range. **Override Compass** can be selected without selecting **Full Search** but this does not hold true for the vice-versa.

Restricting a section of the Antenna search

Sometimes certain limitations are presented and the user must restrict or confine the search to a certain circumference area. This can be accomplished by the following:

- I. Select **Full Search** and **Send All**.
- II. **Full Search** selection will trigger **Override Compass** to be selected.
- III. AZ window will default to 180 but this value can be adjusted.
- IV. Select the virtual **Direction** that you would like in order to set the search starting point (AZ Ref on Controls screen). See Appendix for Direction to AZ Ref point.


The screenshot shows a software interface with two main sections. The top section, titled "Search Parameters", contains four input fields: "EL Window Size" set to 3, "EL Adjustment" set to 3, "AZ Window Size" set to 60, and "RF Threshold" set to 30. Below these is a "Search Method" dropdown menu currently set to "DVB Search". The bottom section, titled "GPS and Compass Override", has two tabs: "GPS" and "Compass". The "Compass" tab is active, showing a "Compass Reading Elevation Angle" set to 32, a "Direction" dropdown set to 0, and a "Compass Offset" set to 0. There are three checkboxes: "Disable Auto Calibrate Compass Offset" (unchecked), "Override Compass" (checked), and "Full Search" (checked). At the bottom of the "Compass" tab are three buttons: "Restore CP", "Calibrate Compass", and "Check Compass".

Fig. 85: *Compass Full Search Configuration Parameters*




Fig. 86: *Compass Orientation and Approximate Values*

Using the image below as guidance example provided for reference.

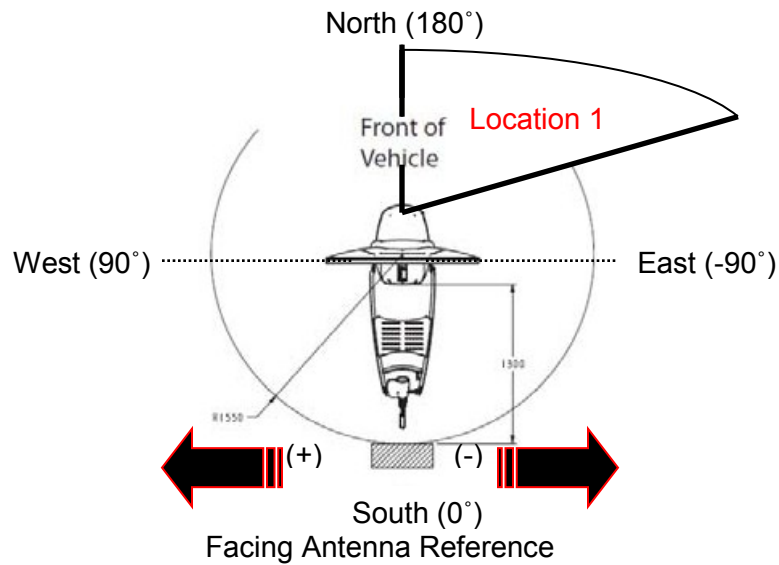


Example 1. There is an object at location 1 and we want to avoid this area.


- Select direction to be NW (315°) which will set System AZ Ref to 45° this will be your window starting point.**
- Set AZ Window Size to 170, if 45 is the starting point or center of the search window. The antenna will add 170 to 45 = 215 ° (Antenna will only rotate to a max ±180 on either side) and subtract 170 from 45 = -125**
- The total area that will be searched is shown below.**

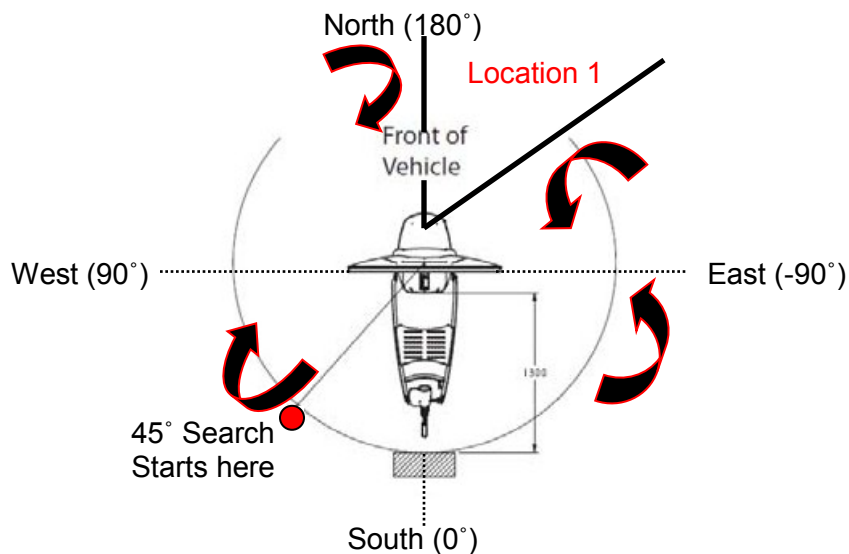

Note: See Appendix for Direction and System Ref. AZ table.

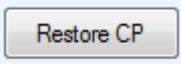Restore CP**Restore Compass**


Restores the compass to its factory calibrated state.

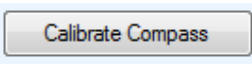Calibrate Compass**Calibrate Compass**

Automatically calibrates compass

Note: The New Generation Platforms (these include and not limited to 755A (Ka-75V), 981A, 985A (Ka-98H, Ka-98G, Ka-98V) and 1201A) are equipped with newer versions of the compasses which are factory calibrated and do not require Calibration. Calibration in the field should be performed by C-COM support authorization only.

- i. The mount and or mobile platform vehicle must be pointed North (vehicle front windshield). The software will present a pop-up to confirm this orientation prior to proceeding with the calibration. Refer to Fig.86 for orientation.

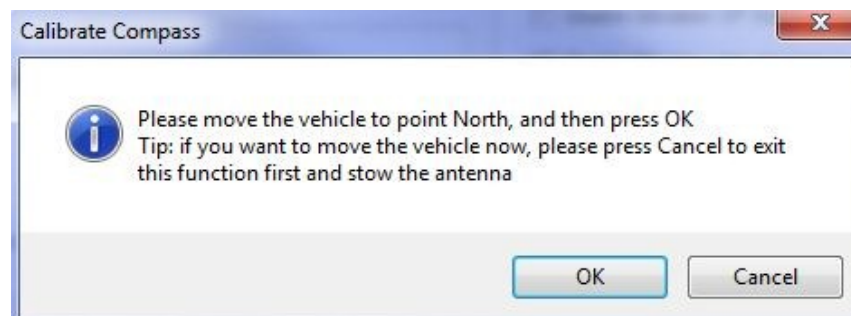


- ii. Ensure that there are no metallic objects that could interfere with the Compass, and that the Mobile Platform is on level surroundings.
- iii. Orient the Mobile Platform as depicted in any of the orientation figures within this manual. It is recommended that you use an external compass to be as accurate with the orientation as possible.
- iv. The Antenna will now rotate in 90° intervals and attempt to calibrate the compass.
- v. A message prompt will appear to notify you whether the Compass Calibration has been completed successfully or not.

Check Compass**Check CP**

Tests the compass' heading and accuracy by rotating the antenna at 90° intervals and comparing the compass readings with the actual antenna's movement.

- i. The mount and or Mobile Platform Vehicle must be pointed North (Vehicle front windshield). The software will have a pop-up to confirm this orientation prior to proceeding with the calibration. Refer to Fig.85 for orientation.

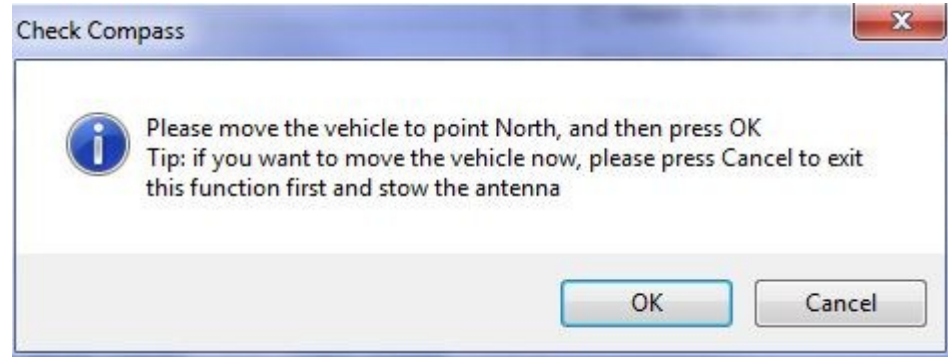

- ii. Antenna will center itself; move to the proper Elevation for reading the compass, then read the compass heading.
- iii. Antenna will rotate 90° to each of the following positions and read the compass at each: 0°, 90°, 180°, -90°, 0°
- iv. iNetVu® Mobile Software will compare the compass heading values read at each position, and determine if they differ by approximately 90°.
- v. The Compass Check will display a message regarding the accuracy of the compass.

8.2.2.4. Elevation Parameters

The Elevation menu allows for the configuration of the elevation axis. Options include the elevation offset, as well as the axis limit functionality, slow speed setting and current limits for slow speeds.

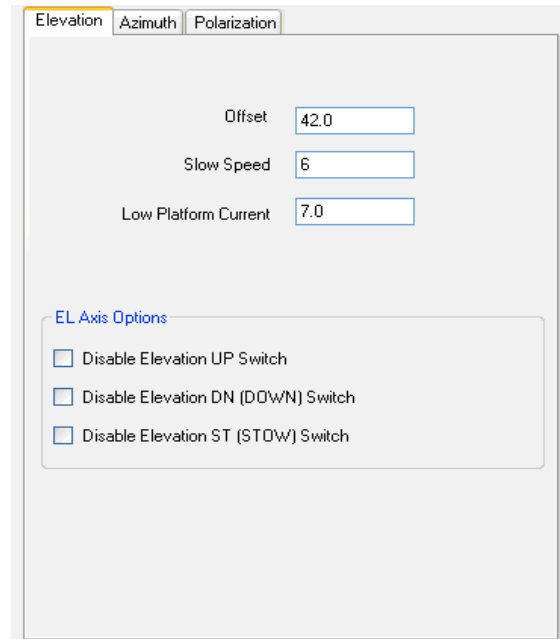
The image shows a software window titled 'Elevation Parameters'. It has three tabs: 'Elevation' (selected), 'Azimuth', and 'Polarization'. Under the 'Elevation' tab, there are three input fields: 'Offset' with the value '42.0', 'Slow Speed' with the value '6', and 'Low Platform Current' with the value '7.0'. Below these fields is a section titled 'EL Axis Options' which contains three checkboxes, all of which are unchecked: 'Disable Elevation UP Switch', 'Disable Elevation DN (DOWN) Switch', and 'Disable Elevation ST (STOW) Switch'.

Fig. 87: Maintenance - Elevation Parameters

The inclinometer used to read the elevation angle will compensate for an incline up to +/- 15°. For example if a user is on a 10° slope and the system is searching along the azimuth, if the elevation reading changes due to a horizontal incline, the elevation will adjust to maintain the correct elevation angle while searching along the azimuth Offset.

The Elevation Offset is specific to each type of platform. It is the number of degrees at which the iNetVu® Mobile Software will offset the reading from the Inclinometer in order to produce an accurate (+/- 2°) Elevation Angle.

Slow Speed

The iNetVu® software basis the default elevation motor slow speed on the platform size and type. See Appendix 1 for details. The user may change this value, however changing such value could result in difficulty accessing satellite acquisition.

Low Platform Current

Low Platform Current (L_P_C) is a software controlled current protection for the Mobile Platform's elevation motors. For Motor Speeds that are not listed (Speed 1, 2, 4, 5, 7, 8), the Current Limit for those speeds is calculated using a percentage of the Current Limit

@ speed 6 and 9. See Appendix 1 for the default current limits for all iNetVu® Mobile Platforms.

- Current Limit 8 – 90% of Current Limit 9
- Current Limit 7 – 80% of Current Limit 9
- Current Limit 5 – 90% of Current Limit 6
- Current Limit 4 – 80% of Current Limit 6

Limit Switches (Elevation UP, Elevation DN, Elevation ST)

Allows the enabling and disabling of the UP, DOWN, and STOW limits.

A check mark in the box implies the limit has been DISABLED. By default the boxes are left unchecked. Please be advised that disabling any of these limits should be done under the direct supervision of a C-COM technical support representative.

8.2.2.5. Azimuth Parameters

The Azimuth menu allows for the configuration of the azimuth axis. Options include the setting of the Zero, and the axis limit functionality, the slow speed setting, and Platform current limits slow speeds. AZ calibration button will be grayed out on certain platform types as this process may not be applicable.

The screenshot shows a software interface for configuring azimuth parameters. At the top, there are three tabs: 'Elevation', 'Azimuth' (which is highlighted with an orange border), and 'Polarization'. Below the tabs, there are three input fields: 'Zero' with the value '282.8', 'Slow Speed' with the value '9', and 'Low Platform Current' with the value '1.7'. Below these fields is a section titled 'AZ Axis Options' in blue text. Inside this section is a checkbox labeled 'Disable Azimuth ST (STOW) Switch', which is currently unchecked. At the bottom right of the window is a button labeled 'Calibrate AZ'.

Fig. 88: Maintenance - Azimuth Parameters

Zero

Azimuth Zero is an A/D converted value from the potentiometer calculated upon azimuth calibration which physically determines where the iNetVu® Mobile Software places Azimuth Angle 0°. In the new Generation systems, the potentiometer is replaced with an Encoder. The Azimuth Zero may vary approximately +15% from the default values on the potentiometer (see Appendix 1). The user may edit these values through this menu; however this is not recommended and any changes may result in failure to recognize the correct 0 angle.

Slow Speed

The iNetVu® software basis the default azimuth motor slow speed on the platform size and type. See Appendix 1 for details. The user may change this value, however changing such value may result in difficulty with satellite acquisition.

Low Platform Current

The Current Limit for the speeds is calculated using a percentage of the Current Limit @ speed 6 and 9 (current limit 6 @ speed 6 is default). See Appendix 1 for the default current limits for all iNetVu® Mobile Platforms.

- Current Limit 8 – 90% of Current Limit 9
- Current Limit 7 – 80% of Current Limit 9
- Current Limit 5 – 90% of Current Limit 6
- Current Limit 4 – 80% of Current Limit 6

Azimuth Limit Switch ST (STOW)

Allows for enabling and disabling the ST (STOW) limit.

A check mark in the box implies the limit has been DISABLED. By default the boxes are left unchecked. Please be advised that disabling any of these limits should be done under the direct supervision of a C-COM Satellite Systems Inc. technical support representative.

Calibrate AZ

Calibrate AZ

Performs automated Azimuth Calibration process. Not applicable on New Generation platforms i.e. Ka-75V (A0755A), Ka-98H/G/V (A0985A) ACFLY-1200 (A1210A) etc...

- i. Antenna will move CW to a set point.
- ii. Antenna will move back in the opposite direction to locate Stow switch.
- iii. Antenna will attempt to locate the cut-off edges of the Azimuth Stow Switch and center itself.
- iv. Azimuth zero position is calculated and the Zero is set at the zeroed A/D value.

8.2.2.6. Polarization Parameters

The Polarization menu allows for the configuration of the polarization axis. Options include the setting of (PL) Zero, skew adjustment and stow limit functionality, polarization offset, slow speed, and current limits for slow speeds.

The screenshot shows a software interface for configuring polarization parameters. It features three tabs at the top: 'Elevation', 'Azimuth', and 'Polarization'. The 'Polarization' tab is selected. The main area contains four labeled input fields: 'Zero' with the value 90.0, 'Slow Speed' with the value 2, 'Offset' with the value 0.0, and 'Low Platform Current' with the value 0.3. Below these fields is a section titled 'PL Axis Options' which contains a single checkbox labeled 'Enable Skew Adjustment' that is currently unchecked. At the bottom right of the window is a button labeled 'Calibrate PL'.

Fig. 89: Maintenance - Polarization Parameters

Zero

PL Zero is an A/D converted value from the Potentiometer and or a calculated value acquired from the Inclinator Tilt Sensor which exists on all New Generation platforms and newer versions of the Legacy platforms. The Tilt Sensor is replacing the Potentiometer which physically determines where the iNetVu® Mobile Software places Polarization Angle 0. The Zero value may vary approximately +/-15% from the default values for all platforms using potentiometers (see Appendix 1). The Tilt Sensor provides better accuracy than the Potentiometer. The PL Zero is calculated along with PL offset during the Polarization Calibration process on platforms with Tilt Sensors and entering a calibrated value in the Zero field. The Tilt Sensor must be levelled prior to calibration to ensure the calculated PL Zero value that gets populated in the Zero field is accurate. The Tilt Sensor calibration process is not valid on the following platform types with 2 axis (Ka-75V, Ka-98H, 98G and Ka-98V) and button will be grayed out.

The user may manually calibrate and edit these values through this window; however any changes may result in failure to recognize the correct 0 location. See Appendix 1 for Potentiometer and Tilt Sensor Zero default values.

Slow Speed

The iNetVu® software bases the default polarization motor slow speed on the platform size and type. See Appendix 1 for details. The user may change this value, however doing so could result in difficulty for satellite acquisition.

Polarization Offset


By default this polarization-offset value is set to 0°. If there happens to be a requirement for a polarization offset, the user may manually enter this value in this area. This area is also updated automatically if the skew adjustment procedure recognizes an incline which will adjust the target polarization angle.

Low Platform Current

Low Platform Current is a software controlled current protection for the Mobile Platform's polarization motors. See Appendix 1 for the default current limits for all iNetVu® Mobile Platforms.

Skew Adjustment (Enable Skew Adjustment)

The Skew Adjustment will rotate the antenna on the azimuth axis 90° on each side of the peaked signal and then re-position on signal with an adjustment to the polarization for any inclined surface. This box must be checked if the user wishes to enable this feature. If left unchecked, the system will not do the skew adjustment.

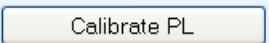A rectangular button with a light blue border and a light gray background, containing the text "Calibrate PL".


Calibrate PL

Performs automated Polarization Calibration process. Platforms with Tilt Sensors must ensure the Sensor is levelled prior to running the PL Zero point calibration. Calculates and populates zero value for PL offset.


- i. Antenna will completely rotate counter-clockwise to the physical limit and temporarily record the A/D value from the Potentiometer.
- ii. Antenna will completely rotate clockwise to the physical limit and temporarily record the A/D value from the Potentiometer.
- iii. Based on the A/D values of the two (2) physical limits and the maximum range of motion for the Mobile Platform, the PL Stow switch location is calculated.
- iv. Antenna will center itself and attempt to locate the cut-off edges of the Polarization Stow Switch.
- v. After detecting at which angles the ST Switch turns OFF, the Polarization zero position is calculated and the PL Zero is set at the zeroed A/D value.

8.2.2.7. Maintenance Menu Buttons


The following buttons are available in the maintenance menu for multiple purposes including, ease of use, troubleshooting, accessing data files and more.

**Demo / Test**

Opens System Test and Demo menu screen

**Reset**


Restarts the controller

**Upload SatParameter**

Loads all the Satellite Transponder information located in the "iNetVu7000_SatParam" text file, into the 7000 Series Controller. The user may modify the table with any DVB transponders that he/she would like saved in the 7000 Series Controller, and click on this button to upload the changes to the controller.


**Download Log File**

Downloads the log data from the 7000 Series Controller onto the user's PC. The user may select how much of the log file to upload from the Controller section of this maintenance menu. The maximum data a user may upload is 12 hours.

**Load Firmware**

Loads the iNetVu_Box.s19 firmware file into iNetVu® Controller from the iNetVu program folder. The update process is displayed on screen and will notify the user when the process is complete. The controller will be unavailable during this time.

Note: If loading firmware or Satellite Parameter table via USB interface connection with HN_KA modem type selected and the Application is open when controller is first put in Firmware load mode; Application will close without any warning and user must re-launch the Application to click on the Load Firmware button. The Application will NOT close once Firmware updating has finished. It is recommended to close the application prior to invoking Firmware update mode when using HN_KA modem. Application will also close if USB communication is lost.

**Read All**

Reads ALL parameters from the iNetVu® Controller's EPROM memory and sets the values into the iNetVu® Mobile Software

A rectangular button with a light blue border and a light gray background, containing the text "Save Config File".***Save Config File**

Allows the user to save all configuration parameters of the iNetVu Controller Configuration into a txt file located in the iNetVu Mobile 7000 application folder.

A rectangular button with a light blue border and a light gray background, containing the text "Read Config File".***Read Config File**

Will populate the maintenance and Configuration screens with the configurable parameters in the saved iNetVu7000_Config.txt file located in the application folder. The user then has the option of sending and saving this data to the controller using the Send All, and Write EPROM buttons.

A rectangular button with a light blue border and a light gray background, containing the text "Save All".***Save All**

Saves ALL parameters to the controller's memory.

*** Indicates Menu buttons also exist on the Configuration screen.**

Note: All the buttons will be grayed out once the system accepts a command and is operational, except for the command button that is currently active. Only one operation is permitted at any given time

8.2.3. Configuration

The Configuration menu allows users to configure the communication medium between the Satellite Modem and iNetVu® Mobile Software, iNetVu® Controller and iNetVu® Mobile Software, as well as various System parameters for optimal performance. Users have the ability to configure and save 5 Satellites (0-4) with their orbital slot and 5 Beacon frequency settings. In order to accommodate the 5 configurable satellites and 5 beacon frequencies a save priority had to be implemented and must be followed when saving. If choosing from the 5 pre-configured all the fields should propagate with the saved values when toggling between the 5 satellites. Follow this order when saving:

1. Select Satellite No. and click Send All
2. Enter Longitude, hemisphere, Transponder No (and all DVB settings) click Send All

The screenshot shows the iNetVu Configuration window with the following sections and settings:

- Satellite Configuration**
 - Target Satellite: Reference Satellite (optional)
 - Satellite Parameters:
 - Satellite No.: 3
 - Longitude: 99.0 W
 - Offset: 90.0
 - LNB Power: 18V
 - Beam ID: BM=0
 - DVB Settings:
 - Transponder No.: TR5_V
 - DVB Type: DVB-S2A
 - Frequency(KHz): 1343000
 - Symbol Rate(Ksps): 50000
 - FEC Rate: AUTO
- Modem and Beacon Receiver**
 - Modem Configuration: BR300L (Optional)
 - Type: iDirect
 - Interface: TELNET
 - Modem Delay: 0
 - IP Address: 192.168.100.1
 - Password: P@55w0rd!
- Controller Configuration**
 - TCP/IP Settings:
 - IP Address: 192.168.100.2
 - Subnet Mask: 255.255.255.0
 - Default Gateway: 192.168.0.1
 - Site Name:
 - ☐ Enable DHCP
 - COM Port Interface:
 - Interface: DEBUG
 - Baud Rate(bps): 19200
 - Inclined Orbit Configuration:
 - Re-Peaking Time: DIS
 - Max ES/NO: 255
 - Feature:
 - ☒ Transmit DC Enable
 - ☐ Motion Protection
 - ☐ Enable iDirect Broadcast
 - ☒ Automatic Tx Disable
 - Beep: D
 - ☐ Unattended Operation
 - Log Data and Controller ID:
 - Controller ID: 7873
 - Log Data: 1H
 - LNB:
 - LNB_LO: 10.6
 - LNB 22KHz Tone: ☐
 - PC Application:
 - ACU IP Address: 192.168.0.2
 - COM Port: COM2

Buttons at the bottom: ☐ Configure File, Save Config File, Read Config File, Save All.

Status bar: 2014/09/19 12:31:46(GPS)->ERR_0X8801: Network/UART Reset

Fig. 90: iNetVu® 7000 Configuration Window

8.2.3.1. Target Satellite Parameters

Fig. 91: Maintenance – Satellite Parameters

Satellite No.

5 different satellite parameters are configurable allowing users to configure and save for easy access. Priority order must be followed when saving, Satellite no first and all other parameters afterwards. If “Configure File” is enabled (selected) Satellite and DVB parameters can be saved all at once.

Longitude

Orbital slot / Longitude of the desired Satellite. The **Find Satellite** command will use this value when attempting to find and lock onto a satellite signal.

(Offset) Sat Pol Offset

Denotes Transmit Polarity and may be altered to accommodate any offset ranged -180° to +180° generally in North America and most areas around the world.
Not applicable on 2 axis platforms such as Ka-75V (A0755A) and Ka-98h/G/V (A0985)

981/1201/1200/1500/1800/

1.2 Flyaway

– Horizontal Receive (Sat Pol Offset = 0) with feed/OMT position standing up, Vertical Receive (Sat Pol Offset = 90) with feed/OMT position flat.

980/740 Platforms

– Sat Pol Offset = 0 considering OMT is adjusted manually. (See Platform Setup and Maintenance Manual for instructions on how to adjust the OMT based on polarity)

Only RX Polarity is referenced for the Pol Offset field allowing both Cross-Pol and Co-Pol to work with setting the Pol Offset to 90 or 0 depending on the Receive Polarity required. **Rx = V = 90 (feed/OMT position flat) and Rx = H = 0 (feed/OMT position standing up)** for Cross-Pol and Co-Pol.

Use the following as reference for Sat pol Offset:

Receive is vertical and Transmit is vertical – VV = 90
Receive is horizontal and Transmit is horizontal – HH = 0

e.g. 1) Receive is Vertical and Transmit is Horizontal (VH) - The offset entered should be 90, thus VH = 90.

e.g. 2) Receive is Horizontal and Transmit is Vertical (HV) – The offset entered should be 0, thus HV = 0.

Depending on the service along with the Longitude selected this will automatically be filled and will not be configurable; Eutelsat Satellites polarization angle will update to the correct offset value depending on desired Skew angle. User must enter 0 or 90 depending on Vertical(Y) or Horizontal(X) polarization reference in the Offset field and click on the SEND ALL.

e.g. 1) Longitude Satellite = 4.0 E
Manual Offset value entered = 90
Calculated Offset value = 93.5

e.g. 2) Longitude Satellite = 4.0 E
Manual Offset value entered = 0
Calculated Offset value = 3.5

Refer to Eutelsat Polarization Skew Angle Satellite(s) document for more information.

LNB Power (V)

In cases where the LNB requires more power than the modem can provide, or if the user would like to power the LNB from the controller, or if the user would like to find satellite without the use of a modem, this option allows for power from the controller to be supplied to the LNB through the RX IN cable from the controller to the platform itself.

DIS – will disable this option, and provide power to the LNB straight from the modem. In this case, a splitter must be used for the RF connection as depicted in the figure below.

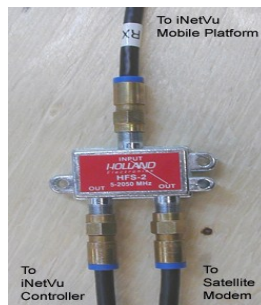


Fig. 92: RF Cable Setup for DIS selection

7000 Series Controller Power Output Range Option Capabilities: 13, 14, 18, 19 V @ 500mA (max)

If the user chooses to power the LNB from the controller, he/she should verify the power/voltage range requirements of the LNB in use, and configure the iNetVu® 7000 Series Controller according to those power/voltage requirements.

Beam ID. (IDirect Ku modem)

Allows Multiple Ku Beam switching using a single modem.

TR No. (Transponder Number)

There are Six (6) Transponder values in the 7000 Series Controller for each satellite.

Transponder 0-2 (TR0_H – TR2_H) are horizontal receive
Transponder 3-5 (TR3_V – TR5_V) are vertical receive.

The user may override the default values saved in the controller with his/her transponder information (frequency, symbol rate, FEC rate)

DVB Type

This drop down menu allows for the configuration of the DVB carrier to search for. There are currently two options DVB-S1 and DVB-S2 ACM.

Frequency (KHz), Code Rate, Symbol Rate (Ksps)

The frequencies listed are in Ku-band.

The user may select from the six (6) available transponders saved in the 7000 Series Controller, which are specific to each satellite, or he/she may also enter valid transponder data manually.
DVB will base satellite acquisition on three satellite transponder parameters, them being:

Frequency 1 (KHz)

Ku-Band Receive Frequency

Symbol Rate 1 (Ksps)

Symbol Rate of receive signal

Code Rate (DVBS1 Requirement)

FEC Rate of receive signal

8.2.3.2. Reference Satellite Parameters

The reference satellite option is useful when the user cannot find a DVB transponder on the desired target satellite. The user may select a reference satellite with a known DVB Transponder. The iNetVu® System will lock onto the reference satellite, and then pivot from that point to the desired target satellite, and peak on the modem signal. Does not work if search method selected is RF Search.

Fig. 93: Maintenance – Reference Satellite Parameters

Enable Ref Sat

If this checkbox is selected, the Reference Satellite Option becomes active. The MAX ES/NO field will be disabled and the value will be set to the default 255. If this box is not selected, all the information in this Reference Satellite Section becomes irrelevant.

Longitude

This field represents the Orbital slot / Longitude of the Reference Satellite. The **Find Satellite** command will use this satellite as a pivot point to lock onto the target satellite.

Note: Once Ref Sat is enabled and the Longitude is set, the functions of the remaining parameters and DVB settings will be identical to that of the Target satellite, See section 8.2.3.1 for more details.

8.2.3.3. Modem Parameters

Configurable parameters will differ depending on the type of modem service selected under the type field.

Fig. 94: Configuration – Modem Parameters

Type

The user must select the service in use from this drop down menu for proper modem to controller connectivity.

Interface

The user may select the interface used for modem to controller communication establishment. There are currently 6 options:

- HTTP – Hyper Text Transfer Protocol
- TELNET – Telnet Interface
- COM – Console Port Interface
- SNMP – Simple Network Managed Protocol
- UDP – User Datagram Protocol
- NA – Used for standalone systems where only DVB or Beacon is used to lock onto a satellite without the use of a modem.

Modem Delay

The user may increase the delay time when polling for modem signal by adjusting this number. Increasing this number, will increase the time to find and lock on to satellite as it slows down controller activity and allows slower modems to catch up.

IP Address

This area is reserved for the modem IP address.

Freq (MHz) and Symb (s)

These two fields represent the required Frequency and Symbol Rate of the VSAT modem. This is usually applied to **Hughes Net service only**. Other services such as iDirect do not require the modem frequency to find satellite.

Rx-Pol

Receive Polarization set in the satellite modem, Hughes Net service only.

Tx-Pol

Transmit Polarization set in the satellite modem, Hughes Net service only.

DVB-Type

The DVB-S type of the modem on Hughes Ku (HX Modems) is required to be set to allow the modem to stay online after the TX enable command has been sent from the controller. If the DVB-S type on the modem is not set to the same as the controller (default used is DVBS2-ACM) the communication will be lost after modem goes online.

Hemisphere

Hemisphere the modem is operating in, For instance, North American operating modems would be set to "W", representing western hemisphere. This parameter is mainly used for Hughes Net service.

Note: For Hughes Net service the Modem Frequency, Symbol Rate, Receive and Transmit Polarization must match those set in the Satellite Modem.

Target ID (Com Tech Only)

Allows modem ID to be set on the same channel as the controller thus enabling modem to communicate with controller and visa-versa.

Demodulator/Carrier (RADYNE MDX Modem Only)

--- Demodulator Number (1--4)

--- Remote Number on selected demodulator (1--8)

Password/CD-KEY


Some modems require a password to access their interface. For modems that do not require a password, this field is irrelevant to the communication status between the modem and the controller and will not affect the communication establishment. For modems that have a blank password, this field should be left blank. The CD-KEY is used for the iPSTAR service ONLY.

Beam ID

This option is only available with the HN_KA modem service. Beam ID will be provided by the NOC or service provider once user provides location.

Service Type

User has the option to choose between 7 service types, YAHSAT, Avanti (4 tables) and North America (2 tables). Once the service type is chosen, the user must click on the **Update Beam Table** button to apply the correct Beam Table for the selected Service type.

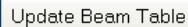A rectangular button with a light blue border and the text "Update Beam Table" in a sans-serif font.

This must be done before the correct Beam ID is entered otherwise it will not see it in the table.

Update Beam Table

This button will switch to the selected Service Type table and use the saved Beam data. DVB Settings will be automatically be filled with the correct values associated with the selected Beam ID. The Update Beam Table button is only required to be applied once as long as you continue to use same Service Type. This option is only available with the HN_KA modem service and must be applied before correct Beam ID values appear in drop-down.

Auto-select Beam Color

This option is only available with the Tooway modem service. Select the Auto-select Beam Color to have the system automatically lock on the Beam Color by referring to the Tooway configuration file (iNetVu7000_ConfigForTooway.txt) and GPS location.


Auto RF Mode

Available with Tooway modem service. Selecting this option will automatically insert the search settings for the Tooway (consumer) modem.

Update Look-Up Table

Updates controller with new table information. This feature also allows Auto Beam searching using GPS location coordinates to lock on Beam color. The user must update the table at least once from the application before this feature is usable from the controller front panel by using a single FIND SAT button. See Appendix 5. Or Tooway Quick Start for more details.

8.2.3.4. Beacon receiver

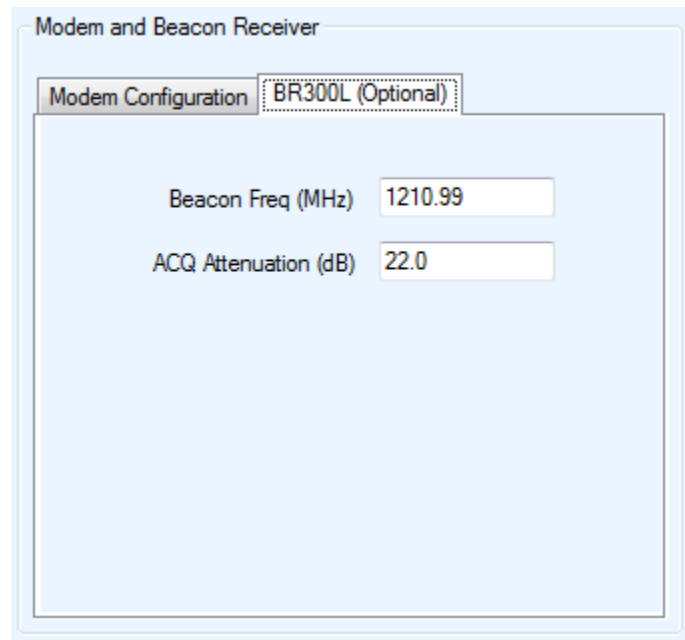

The screenshot shows a software window titled "Modem and Beacon Receiver". It contains two tabs: "Modem Configuration" and "BR300L (Optional)". The "BR300L (Optional)" tab is active. Within this tab, there are two configuration fields: "Beacon Freq (MHz)" set to "1210.99" and "ACQ Attenuation (dB)" set to "22.0".

Fig. 95: Configuration - Beacon Receiver parameters

Beacon Freq (MHz)

This field represents the frequency that the Optional Beacon Receiver is programmed for. The user may change this frequency to whatever Beacon is required for the target satellite. 5 configurable Beacon frequency maybe configured with 5 configurable Satellites. If the iNetVu® Beacon Receiver is not used, this field can be ignored.

ACQ Attenuation (dB)

The 7000 Series controller software interfaces give the user flexibility to set the power level of the signal when searching using the beacon receiver. This field is only related to the optional iNetVu Beacon Receiver.

8.2.3.5. Controller Parameters

This sub-section contains data concerning the relevant IP addresses of the iNetVu® Series 7000 Controller.

The screenshot displays the 'Controller Configuration' web interface. It is divided into three main sections: 'TCP/IP Settings', 'COM Port Interface', and 'Feature'.
- **TCP/IP Settings:** Includes input fields for 'IP Address' (192.168.100.2), 'Subnet Mask' (255.255.255.0), 'Default Gateway' (192.168.0.1), and 'Site Name'. There is also an 'Enable DHCP' checkbox.
- **COM Port Interface:** Includes a dropdown for 'Interface' (set to DEBUG), a dropdown for 'Baud Rate(bps)' (set to 19200), a dropdown for 'Re-Peaking Time' (set to DIS), and a 'Max ES/NO' input field (set to 255).
- **Feature:** Includes checkboxes for 'Transmit DC Enable' (checked), 'Motion Protection', 'Enable iDirect Broadcast', and 'Automatic Tx Disable' (checked). It also has a 'Beep' dropdown (set to D) and an 'Unattended Operation' checkbox.

Fig. 96: Maintenance – Controller Parameters

IP Address

The IP address assigned to the iNetVu® 7000 Series Controller.

Subnet Mask

The Subnet Mask IP Address used by the iNetVu® 7000 Series Controller for PC and modem connectivity.

Default Gateway

The Gateway IP address used by the iNetVu® 7000 Series Controller.

Site Name

Site Name in the controller that consists of combination of letters and numbers up to 30 characters. Site Name will be displayed in the browser tab when using the web interface.

DHCP

The iNetVu® 7000 Series Controller could obtain a dynamic IP address from a DHCP Server (i.e. router, modem, etc.) if this option is enabled.

Interface (Com Port Configuration)

This drop down menu allows the user to define the functionality of the serial interface on the iNetVu® 7000 Series Controller. The following are the Interface options to select from:

- **DEBUG** - Used for internal debugging purposes.
- **MODEM** - Used as a communication medium if the specified modem supports serial interface communication. To communicate with a Modem via Console, "MODEM" must be selected from the COM drop down menu, and the proper baud rate of the modem must be entered as well from the BAUD drop down menu.
- **GPS_Out** - Used for GPS output data gathering.
- **BEACON** - Used to establish communication with the iNetVu BR300L Beacon Receiver.
- **GLONASS** - Used for External Glonass GPS option.
- **PC** - Used for COM serial port communication between the PC and Controller.

BAUD (bps)

The user may define the bit rate of the serial communication interface.

Inclined Orbit (Re-peak Time)

Enabling this option will allow the system to maintain signal with an inclined orbital satellite. The user may select the time difference between each re-peak on the inclined orbital satellite without disabling the transmitter and maximizing on the signal strength. This feature has been modified to support Ka platforms' that shift off signal due to shifting ground and or environment conditions. The inclined mode routine will exit its operation once the Stop button is depressed leaving the configuration selection enabled.

DIS: Disabled

- 1: Re-peak every 10 minutes
- 2: Re-peak every 30 minutes
- 3: Re-peak every 1 hours
- 4: Re-peak every 2 hours
- 5: Re-peak every 3 hours
- 6: Re-peak every 4 hours
- 7: Re-peak every 6 hours
- 8: Re-peak every 8 hours
- 9: Re-peak every 12 hours

Max ES/NO

The Satellite peaking routine will stop at the set value of the SNR signal thus reducing the peaking time after reaching the highest set value. Modifying and or misconfiguring this parameter may inhibit satellite searching sequence and stop the peaking before reaching the highest possible signal. Only change this value if the highest Maximum ES/NO value is known to the user otherwise leave at default value of 255 to ensure

peaking is performed at the highest signal. This field is grayed out when Reference Satellite is enabled and default value set to 255.

Transmit DC Enable (iDirect only)

Allows user to disable the DC power supplied by the modem to the BUC after TX enable is sent to modem. This allows power to be supplied by an external power source and hence bypassing the modem. Transmit DC Enable is checked by default and by unchecking it would disable DC supply from modem and allow the user to control DC power supply to the BUC.

Enable iDirect Broadcast (iDirect only)

The 7000 Series Controllers can be configured to broadcast with iDirect service. This allows iDirect users with broadcast configured modems, to lock onto a DVB carrier, and enable the transmitter in the iDirect modem automatically after peaking through the 7000 Series Controller.

Motion Protection

The iNetVu® Mobile Platform will automatically stow the antenna should it experience extreme motion, such as severe shaking caused by harsh weather conditions. Box selected implies Motion Protection is enabled.

Movement Protection (not a selectable option)

The movement protection option is always enabled and is embedded into the controller. System will stow automatically when vehicle begins to drive off. The movement protection feature will not function properly if the GPS is overridden because movement protection relies on change of GPS speed (min 5 km/h) plus a change of 2 degrees or more on Elevation. Overriding GPS will omit this feature and antenna stowing due to movement will not occur.

Disable ACP (Hughes Ku Only)

This checkbox allows the user to enable or disable the ACP process for the HNS supported modems. If this box is selected, the modem will not perform ACP and will try to enable the transmitter automatically after peaking. If this box is NOT selected, the controller will attempt to perform an ACP after peaking on satellite and before enabling the transmitter.

Automatic TX Disable

If this checkbox is selected, the controller will automatically disable the transmitter if a reset is done to the modem during transmission and communication between the controller and modem is re-established.

BEEP


This checkbox is used to either enable or disable the beeping noise when navigating the LCD interface on the iNetVu® 7000 Series Controller. Selected option implies beeping sound is enabled unless D (disabled) is selected.

- D** – Beep Disabled, the sound will be completely removed.
- L** – Beep Enabled, a beeping sound will occur every 2 seconds.
- M** – Beep Enabled, a beeping sound will occur every 1 seconds.
- H** – Beep Enabled, a beeping sound will occur every 500 milliseconds.

Unattended Operation

This drop down menu represents the Unattended Operation Functionality. The user may disable (deselect), or enable (select) and set the unattended operation to 5, 10, or 15 minutes. If the dish is stowed due to motion or movement (GPS location change combined with speed of 5 km or more) the system will automatically re-acquire satellite depending on the user's entered delay time after a motion stow. Initial stow wait time is 30 seconds, then the selected times become valid from the second stow onwards. For example, if the user selects 5M from the drop down menu, and the system stows due to motion or movement while operational, Five (5) minutes plus 30 seconds after automatically stowing, the system will try to re-acquire the satellite signal. System will NOT re-acquire satellite if system was stowed due to movement detection.

8.2.3.6. Log Data and Controller ID

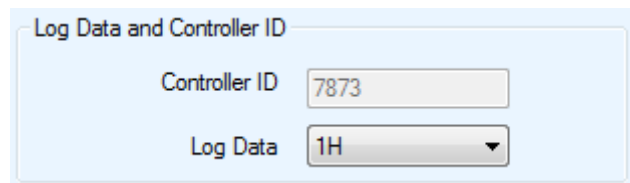

The screenshot shows a light blue rectangular box with a thin border. Inside the box, at the top left, is the text 'Log Data and Controller ID'. Below this text, there are two controls. The first is a text input field labeled 'Controller ID' containing the number '7873'. The second is a dropdown menu labeled 'Log Data' with '1H' selected and a downward arrow icon.

Fig. 97: Controller ID (serial Number), Log data and LNB_LO section

Controller ID (also referred to as the serial number (SN))

This ID field is the Controller ID number located on the bottom portion of the controller. The ID is the last four digits or five on the newer models of the controller serial number.
***Newer models have 5 digit serial numbers.**

Log Data

The user may choose to upload either 1 hour, 2 hours, or ALL (maximum of 12 hours) of the recorded data log information from the controller to the PC.

8.2.3.7. LNB LO & 22KHz Tone

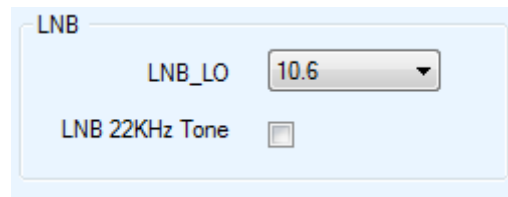


Fig. 98: LNB_LO and Tone section

LNB_LO

This drop down menu allows the user to change the LNB frequency settings to relink back onto satellite signal. The Normal operation setting is 10.75 and the controller default setting will reflect this; users should use the default setting at all times with carriers from table list or a carrier can be manually entered. If required to change LNB LO, then DVB frequency will also change as per the following equation: $\text{DVB tuner} = \text{IF frequency} + (10.75 - \text{LO})$, where LO = the selected LO from the menu, IF Frequency is the selected/entered Frequency from menu (or Satparam database table).

0 – 10.75

1 – 9.75

2 – 10.00

5 – 10.60

4 – 11.30

Note: Values 0-4 represent controller side value settings.

LNB 22 KHz Tone

The 22 KHz tone can be disabled or enabled for supporting modems that allow for acquisition with LNBs that switch frequency ranges by adjusting the 22 KHz tone. This option is disabled by default.

8.2.3.8. PC Application

This sub-section contains options regarding the relevant IP address connection to the iNetVu® Series 7000 Controller. This section allows user to enter IP address of the desired controller that they wish to connect to over the network.

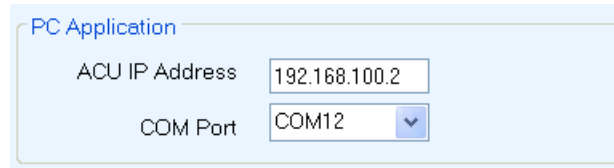


Fig. 99: PC Application Parameters





ACU (Antenna Control Unit) IP Address

User can enter IP address of networked controller and connect to it over the Network.

Com Port

Used in conjunction with the serial port interface (Interface parameter under COM Port Configuration section) communication between the controller and pc.

8.2.3.9. Configuration Menu Buttons

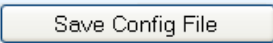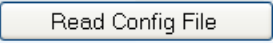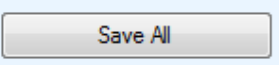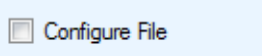	Save Config File * Refer to section 8.1.2.7 for button description and function
	Read CONF * Refer to section 8.1.2.7 for button description and function
	Save All * Refer to section 8.1.2.7 for button description and function
	Configure File When this option is unchecked (disabled), data will be read from Controller. When this option is checked (enabled) multiple changes will be saved immediately without acting on the parameter priority.

* indicates buttons also exist on the Maintenance screen

8.2.3.10. Maintenance Test

Used for system tests, trouble-shooting, and for demonstrating the iNetVu® Mobile System. This feature is accessible from the Maintenance Window **Test** button.

The screenshot shows the iNetVu Test window with the following sections:

- Elevation Data:**
 - EL Angle: 95.65
 - Up Limit Switch: [Switch]
 - Down Limit Switch: [Switch]
 - Stow Switch: [Switch]
- Azimuth Data:**
 - AZ Angle: 0
 - Stow Switch: [Switch]
- Polarization Data:**
 - PL Angle: LHCP
 - Stow Switch: [Switch]
- Motor Current:**
 - EL Current (mA): 0
 - AZ Current (mA): 0
 - PL Current (mA): 0
- Compass:**
 - Compass Heading: 0
- Platform Test:**
 - Start Angles: Elevation 20.0, Azimuth -15.0, Polarization -30.0
 - End Angles: Elevation 50.0, Azimuth 15.0, Polarization 30.0
 - Speed: 7
 - Loop: ☐ Loop interval 1 X3 S(1-9)
 - Buttons: Test EL/AZ/PL, Test Compass, Stop Test, Test Elevation, Test Azimuth, Test Polarization
- Modem Test:**
 - Command: [Text Field]
 - Send: [Button]
- iNetVu Message Feedback:** [Text Area]
- Status:**
 - SYSTEM IDLE
 - CTL NORMAL
 - MDM INIT
 - MTR UNKNOWN
 - ANT NORMAL

Fig. 100: Demo and Test Window

Start/Demo Angles

Initial values for the test/demo sequence

End/Demo Angles

End values for the test/demo sequence

Speed

Speed of the motor during the test/demo sequence (4 – lowest, 9 – highest)

Loop the Test/Demo

Enables an infinite loop of the test/demo sequence

Loop Interval

Time between test/demo sequences

Test EL/AZ/PL

Test EL/AZ/PL

Moves and rotates to the values set in the Start Angle and End/Demo Angle fields

Test Compass

Test Compass

Positions Antenna to the set Elevation angle and updates compass heading by moving to the set End Angle values entered by the user on all three axis.

Stop Test

Stop Test

Halts all test/demo sequences

Test Elevation

Test Elevation

Moves dish to the values set in the Start Angle and End/Demo Angle fields

Test Azimuth

Test Azimuth

Moves dish to the values set in the Start Angle and End/Demo Angle fields

Test Polarizaion

Test Polarization

Rotates dish to the values set in the Start Angle and End/Demo Angle fields

Modem Test (Command)

The user may enter certain modem commands, and click send. The 7000 Series Controller will then read the response from the modem in the text area below the command line. Currently the commands supported are for iDirect service:

- laninfo
- tx power
- tx freq
- tx symrate
- tx cw
- rx power
- rx freq
- rx symrate
- latlon

8.2.4. About

Displays information to the user about various sub-system components, as well as contact information for support and feedback.

The screenshot shows the 'iNetVu About' window with the following information:

Software		Controller	
Version	7.5.7Beta 1	Firmware	7.5.7.1
Build ID	1/7/2014 4:12:28 PM	Serial Number	12958
		Revision	2
		Interface	USB
		Bootloader	7.5.3.0
		DVB tuner	S2(EA)_0X3C
		MAC	00-50-C2-8E-B2-4A
Modem		Satellite	
Service	Tooway	Longitude	9.0E
Type	UT_7	Polarity	
Firmware	UT_1.1.1.0.18		
Serial Number	282911120917		
Interface	HTTP		
Platform			
Type	A0985A		
Serial Number	12229		

Tel: 1-877-463-8886
<http://www.c-comsat.com>
 Copyright © 2008, All Rights Reserved
 C-COM Satellite Systems Inc.

Fig. 101: About Window

Software

- **Version**
iNetVu® Mobile Software version

- **Build ID**
Date of software release

Controller

- **Firmware**
iNetVu® Controller's firmware version.

For compatibility purposes, Controllers are pre-configured with the appropriate firmware for the accompanied software version.

- **Serial No/ ID**
iNetVu® Controller Serial Number ID.
This field is supported for iNetVu® Controller Firmware 4.2 and higher.

- **Interface**

This field represents the means of communication between the iNetVu® software, and the 7000 Controller.

- **Boot Loader**

Bootloader version loaded in the 7000 Series Controller

- **Revision**

Indicates the revision number of the current Controller Hardware version

- **DVB Tuner**

Displays if a DVB Tuner is detected

- **MAC Address**

Displays controllers MAC Address

Platform


- **Type**

Mobile Platform type

- **Serial Number(S/N)***

Mobile Platform serial number

* S/N may have 4 or 5 digits (newer controllers)

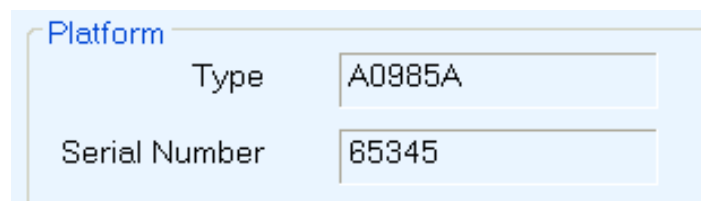

The screenshot shows a light blue rectangular box with a thin border. Inside the box, the word "Platform" is written in blue text at the top left. Below it, there are two rows of labels and input fields. The first row has the label "Type" in black text, followed by a text input field containing the value "A0985A". The second row has the label "Serial Number" in black text, followed by a text input field containing the value "65345".

Platform	
Type	A0985A
Serial Number	65345

Fig. 102: Platform Type and Serial Number

Modem

- **Service**

Type of service modem corresponds to

- **Type**

Type of modem currently communicating with the controller

- **Firmware**

Satellite Modem's firmware version.

- **Serial Number**
Satellite Modem's Hardware ID or Serial Number
- **Interface**
Modem Interface to the iNetVu® 7000 Series Controller.

8.2.5. Language

The multilingual feature allows the toggling between Four (6) languages and updates in real-time the selected language. Currently the available languages are English, Chinese (Simplified and Traditional), Spanish, Russian and Swedish with more to come.

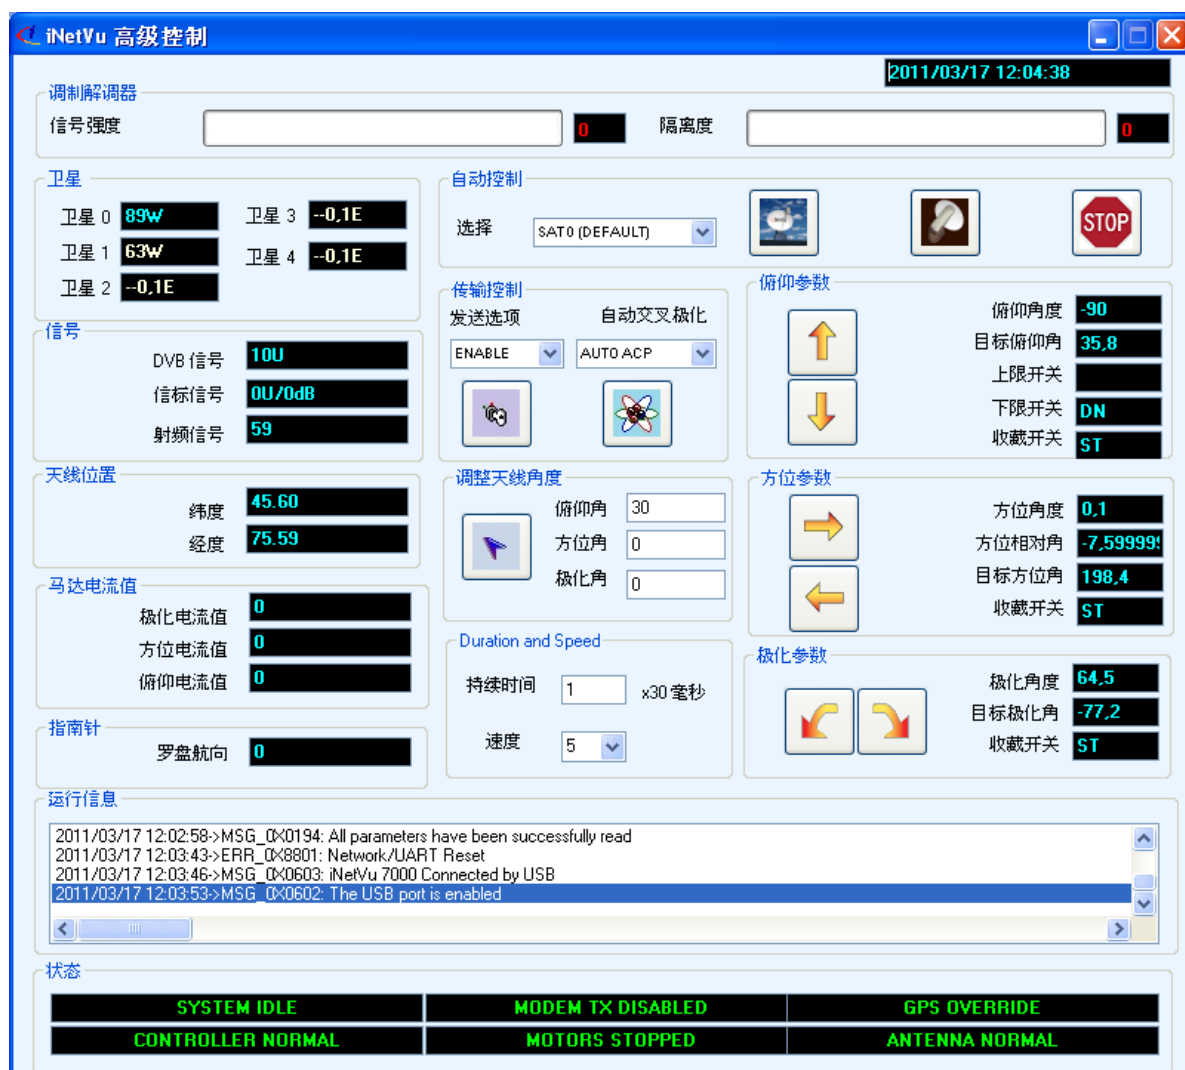


Fig. 103: iNetVu Controls Window in Chinese

8.2.6. Exit

Close the running IMS 7000 Application.

9. iNetVu® 7000 Series Controller Web Interface

Another method of communicating remotely with the 7000 Controller is through the web interface. It has the ability to communicate with the Satellite Modem, automatically find and lock onto a satellite and stow the antenna when completed. The user can also monitor real-time system parameters such as Signal Strength, GPS Coordinates, motor currents, as well as allowing the user the capability of manually moving the antenna and performing any maintenance tests and calibration tasks. Controller Firmware upgrade and reset (power cycle) is now possible without touching controller front panel (via the web interface (must be running minimum bootloader 7.5.3.0+ version for reset feature). The site name of the controller will appear in the browser tab if one is entered.

The **Web Interface** is similar to the 7000 Software, the difference being that it is accessed through a web browser by entering the controllers IP (i.e. 192.168.0.2) address in the URL address bar once a network connection has been established between the controller and the PC. Note some function(s) may not be available in Web interface i.e. Download Log File.

9.1. Navigating Menus

To view the web interface, type in the IP address of the 7000 Series Controller in the web browser.

There are 5 options available:

- Login (default password: "password")
- Controls
- Configurations
- System Test
- About

The screenshot displays the iNetVu Login web interface. On the left, a blue sidebar contains a vertical list of menu items: LOGIN, CONTROLS, CONFIGURATION, SYSTEM TEST, and ABOUT. The main content area is white and features a login form titled "iNetVu Login". The form includes a "USER" dropdown menu currently showing "ADMIN", a "PWD" text input field, and three buttons: "LOGIN", "CANCEL", and "LOGOFF". Below these buttons, there are two links: "CHANGE PWD" and "RESET PWD".

To reset the password, click on **“RESET PWD”**, and enter “123456789” for the reset ID. These options are available once the controller is in upload mode:

- Login
- Firmware Update
- Sat Table Update
- Reset Controller

The image shows the 'iNetVu Login' window. On the left is a blue sidebar with links: LOGIN, FIRMWARE UPDATE, SAT TABLE UPDATE, and RESET CONTROLLER. The main window has a title bar 'iNetVu Login'. Inside, there is a 'USER' dropdown menu set to 'ADMIN', a 'PWD' text input field, and three buttons: 'LOGIN', 'CANCEL', and 'LOGOFF'. Below these are two links: 'CHANGE PWD' and 'RESET PWD'.

Fig. 104: Web Interface – Upload Login Window

There are 2 ways to get the controller in the upload status; first method is from the controller front panel, the second is from within the web GUI by clicking on the FW_U button. Updating the Firmware or the SatParam Table or Resetting the Controller; all of these can be accomplished by clicking the FW_U from the CONFIGURATION screen.

The image shows the 'iNetVu Configuration' window. On the left is a blue sidebar with links: LOGIN, CONTROLS, CONFIGURATION, SYSTEM TEST, and ABOUT. The main window has a title bar 'iNetVu Configuration'. It contains several sections: 'Satellite & Search Mode', 'Satellite(REF)', 'Platform & GPS', 'Modem', 'Controller', 'Azimuth', 'Elevation', 'Polarization', and 'Command'. The 'FW_U' button in the 'Command' section is highlighted with a red box. Other buttons in the 'Command' section include 'RESE', 'WRITE', 'READ', and 'SEND'. A 'SEND OK!' button is at the bottom right.

Fig. 105: Web Interface – Firmware Update Button

9.2. Controls

Similar to the iNetVu® 7000 Software Controls Menu, the Web Interface Controls Screen allows the user to monitor system operations, and perform automatic as well as manual system functions. The main difference between the web interface and iNetVu Application is that the Compass Calibration (CP CAL), Compass Test (CP TEST), Azimuth Calibration (AZ CAL), and Polarization Calibration (PL CAL) are all in the iNetVu Controls web page, rather than the Maintenance menu.

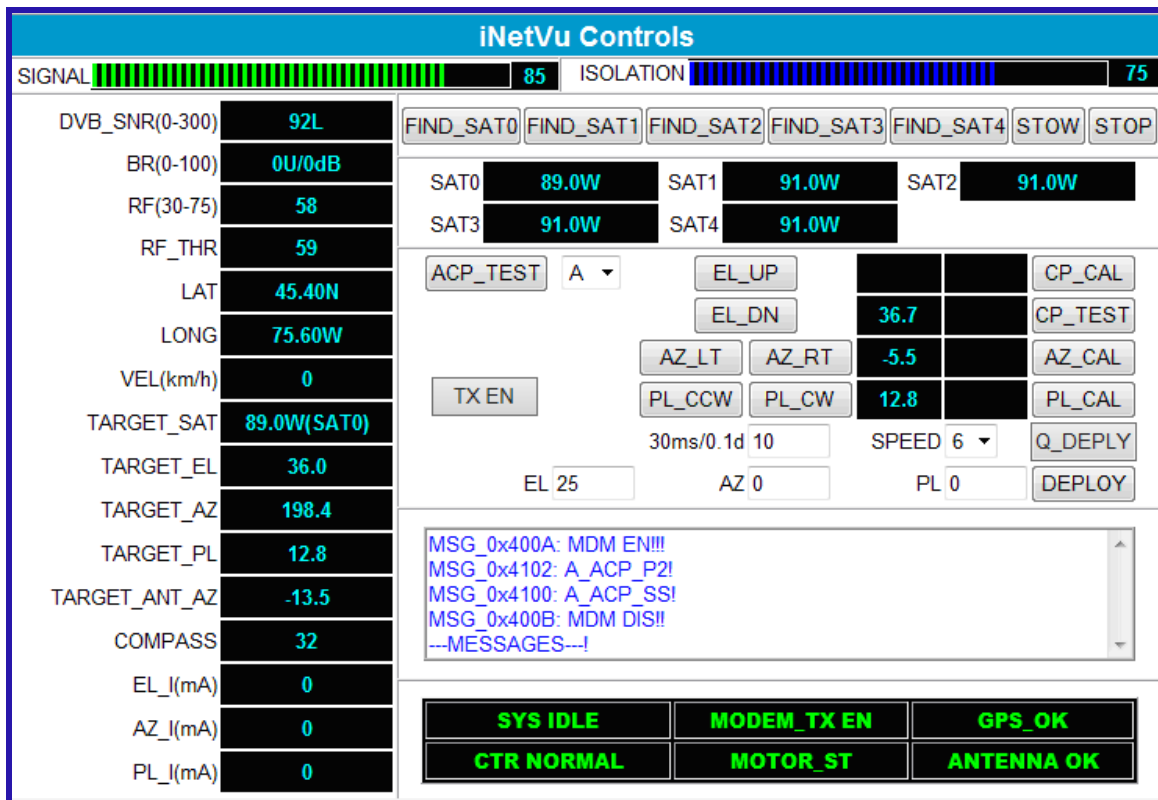


Fig. 106: Web Interface - Controls Screen

9.3. Configuration

The Configuration menu allows users to configure the communication medium between the Satellite Modem and iNetVu® 7000 Series Web Interface, iNetVu® Controller and iNetVu® Web Interface, as well as various System parameters for optimal performance. A new button (RESET) has been added which allows the user to reset the controller from within the Configuration window.

The Configuration menu allows users to set the Satellite's name and orbital slot, and override parameters as well as putting the controller in updating mode.

The 7000 Series Controller Web Interface is similar to the iNetVu® Software Configuration Menu (See Software Configuration Menu Section for More Details)

Click **SEND** if any modifications are made.

iNetVu Configuration

Satellite & Search Mode

TARGET: 3 LONG: 99.0 W OFF: 90.0 ID: 0-9999 0 FULL_SR: CP: 0 AZ_W: 60
 TR: TR5_V DVB: S2A LNB: 18V CP_OV: CP: 0 BR_FR: 1213.99
 FR(K): 1360000 SB(K): 30000 CR: AUTO RF_S: RF_O: RF_THR: 75 BR_DB: 0.0

Satellite(REF)

EN: LONG: 83.0 W OFF: 90.0 TP: A1201A Ver: SN: 12424
 TR: TR0_H DVB: S1 LNB: 18V T_O: 0.0
 FR(K): 1410000 SB(K): 30000 CR: 7/8 GPS_OV: LAT: 44.77 N LONG: 25.75 E

Modem

ID: 0 INF: TCP RX: V TX: H CIP: 192.168.100.2 COM: DEBUG M_PT: DHCP
 FR(M): 1219.5 BM: 1-99 DN: 1 CN: 1 SUB: 255.255.255.0 SPD: 19200 TX_D: ACP_D:
 IP: 192.168.100.1 SB: 35000000 H W GW: 192.168.0.1 ES: 255 UN: DIS BC: BEEP
 PWD/CD_KEY: P@55w0rd! INC: DIS LO: 10.6 22K

Controller

Azimuth

ZERO: 282.8 SLOW: 9 ST_D: OFF: 17.0 SLOW: 8 UP_D: DN_D:
 LPC: 5.0 SR_W: 3 SR_A: 3 CP_R: 30
 CP_OF: 0

Elevation

Polarization

ZERO: 90.0 SLOW: 2 ST_D: SK_E: RESET FW_U WRITE READ CONG_F:
 LPC: 0.3 OFF: 0.0

Command

Fig. 107: 7000 Web Interface - Configuration Window

9.4. System Test

This screen is mainly used for Demos, testing certain components of the system, and for sending certain modem commands that have been integrated with the iNetVu® 7000 Series Controller.

The 7000 Series Controller Web Interface System Test web page is similar to the iNetVu® Software Test Screen

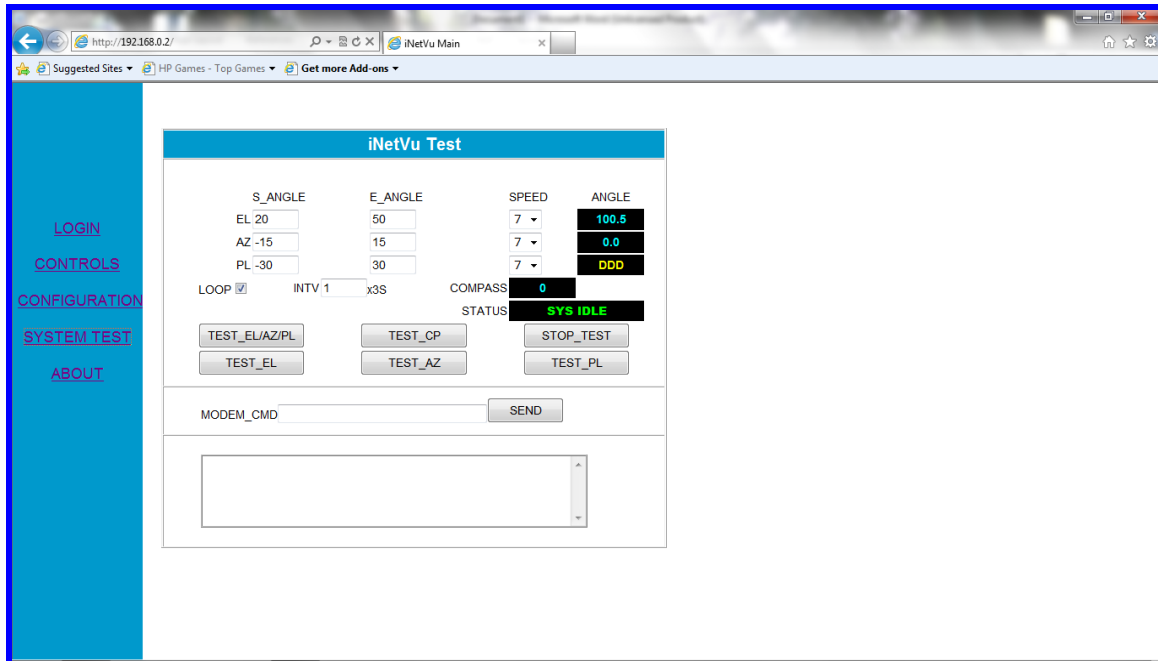


Fig. 108: Web Interface - Test Window

9.5. About

The “iNetVu About” web page, displays information to the user about various sub-system components, as well as contact information for support and feedback.

iNetVu About	
Controller	Modem
SN 8467	SR HN
FW 7.5.1.8	TY DW7000
BL 7.2.7.0	FW 5.8.0.82
REV 0	INF HTTP
DVB S2(EA)_3C	SN 3718533
MAC 00-50-C2-8E-B9-66	
Platform	Satellite
TY A98A	LONG 89.0W(SAT0)
SN 10061	
	http://www.c-comsat.com C-COM Satellite Systems Inc.

Fig. 109: Web Interface - About Screen

9.6. Firmware/Satellite Table Update

To access the firmware update, and satellite table update screen, perform the following steps:

1. Login to web interface and click on the FW_U button in the Configuration screen.
2. Refresh/restart the WEB interface.
3. After refreshing the WEB interface the controller is now in the upload mode and this is evident from the menu options that are now displayed in the left pane.

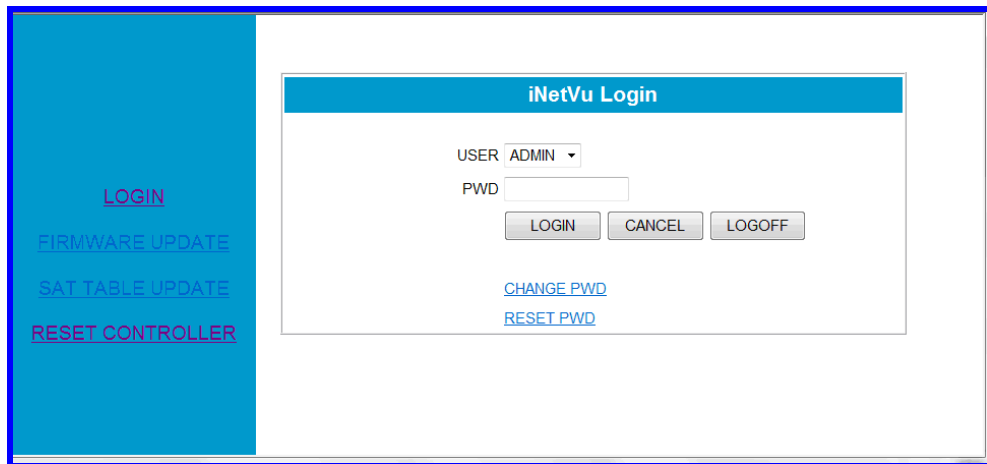


Fig. 110: Firmware/Satellite Param Table update screen

4. Login by entering password. You will receive a "Login Successfully!" display.
5. The options are now enabled and you may proceed and select the preferred task.
6. This can also be accomplished from the front panel. After establishing a proper network connection between the controller and the PC, press the "reset" button on the 7000 Series Controller, and hold the "↑" and "↓" buttons on the front panel at the same time until you read "Firmware/Sat update" on the LCD screen.
7. Open up a web browser, and type the 7000 Series Controller IP address into the URL address field. Type in "password" in the Password field.

9.6.1. Firmware Update

To update the controller firmware click on the “FIRMWARE UPDATE” link on the left panel. The following screen should appear:

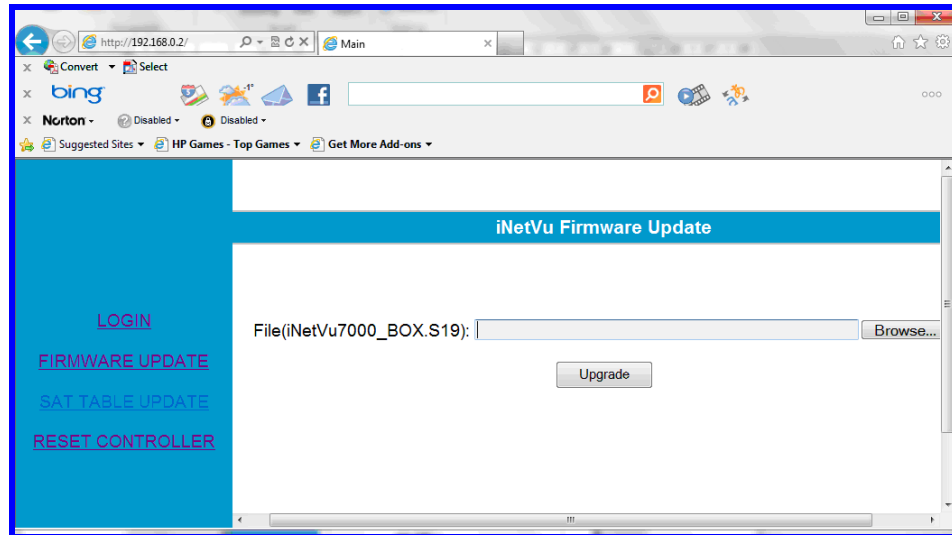


Fig. 111: *Firmware Update Window*

To update the firmware via web page:

1. Browse to firmware (.s19) file and select it.
2. Click on the “Upgrade” button.
3. The status bar will appear, and the Controller firmware should be updated within a minute.

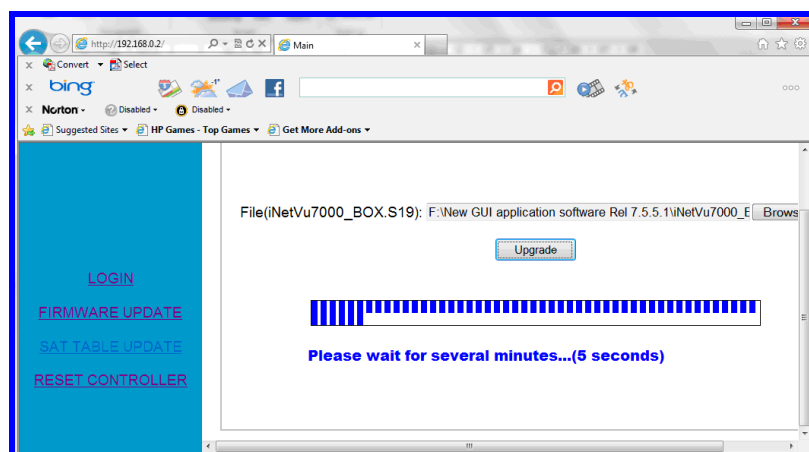


Fig. 112: *Firmware Update – Progress bar*

9.6.2. Satellite Table Update

In order to update the table containing the satellite transponder data, the iNetVu7000_SatParam.txt file must be manually changed. For example,

If a user wishes to add a transponder to satellite 91W, he/she would locate satellite 91W in the table, and replace one of the transponders with the new transponder data. Save the file once the changes have been made.

To upload the changed table to the controller:

1. Select “Sat Table Update” from the left panel of the web page after putting Controller in upload mode (Follow previous steps in section 9.6).

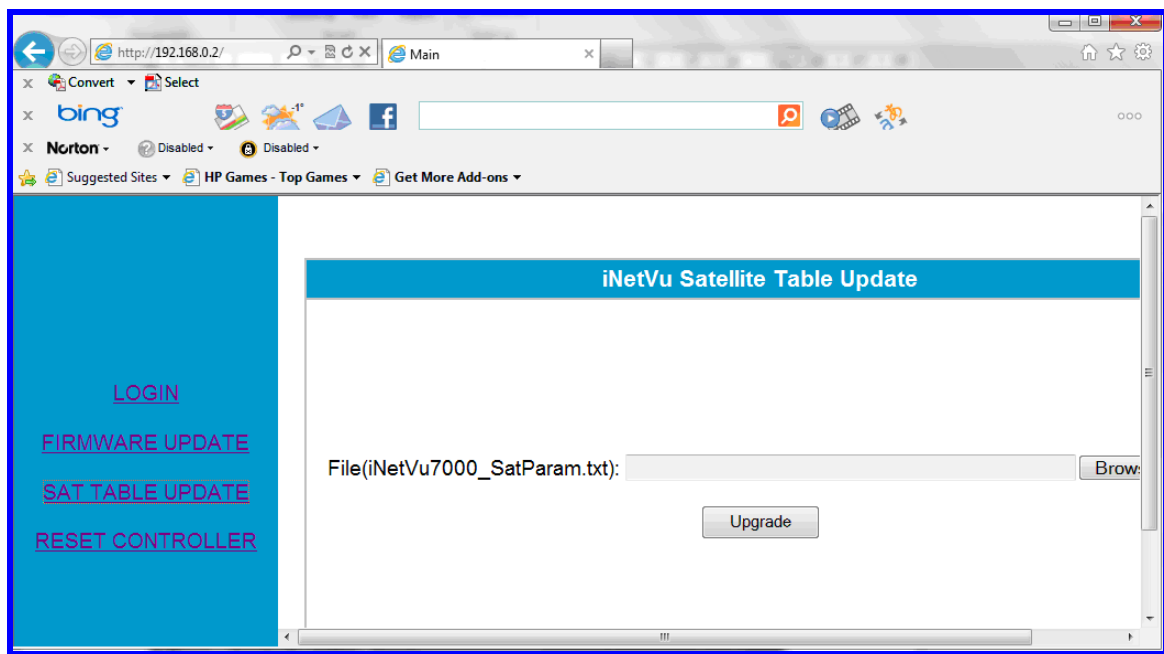


Fig. 113: Satellite Parameter Table Update

2. Browse for the modified “iNetVu7000_SatParam.txt”, and click on the “Upgrade” button. The controller should be updated within a few seconds.

***Note:** Any of the upgrade processes can be cancelled by clicking the **RESET CONTROLLER** link (forces the controller to power cycle) before starting the procedure. Controller must be loaded with Bootloader 7.5.3.0+ for this option to be available.

***Note:** The Firmware and SatParam table can also be updated using the latest IMS running on a pc/laptop and connected via USB or Serial RS232 cable connection. Recommended methods are USB or Network (LAN Connection).

10. Controller Connectivity

In order to interface directly with the iNetVu® 7000 Series Controller, a Network Interface and a Web Interface are available.

The Network/Web Interface allows the user to operate the automatic functions such as Finding Satellite, Stowing the Antenna, and Stopping Operations, as well as monitoring System Status, real-time Motor Currents, and Signal Strength.

In order to access the **Network Interface**, simply install the iNetVu® 7000 Software on your PC and place your PC on the same network as the 7000 Series Controller.

In order to access the **Web Interface**, place your PC on the same network as the 7000 Series Controller, and simply type in the IP address of the 7000 Controller into your web browser.

iNetVu® 7000 Network Configurations:

Default IP Address:	192.168.0.2
Default Subnet Mask:	255.255.255.0
Default Gateway IP:	192.168.0.1

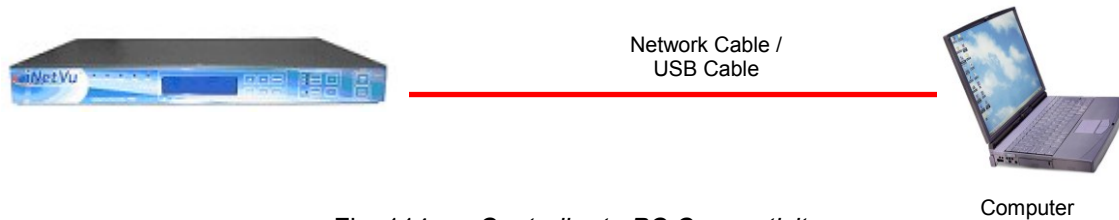


Fig. 114: *Controller to PC Connectivity*

Computer

Set IP to the same subnet as the iNetVu 7000 Controller and the Gateway as the iNetVu 7000 Controller.

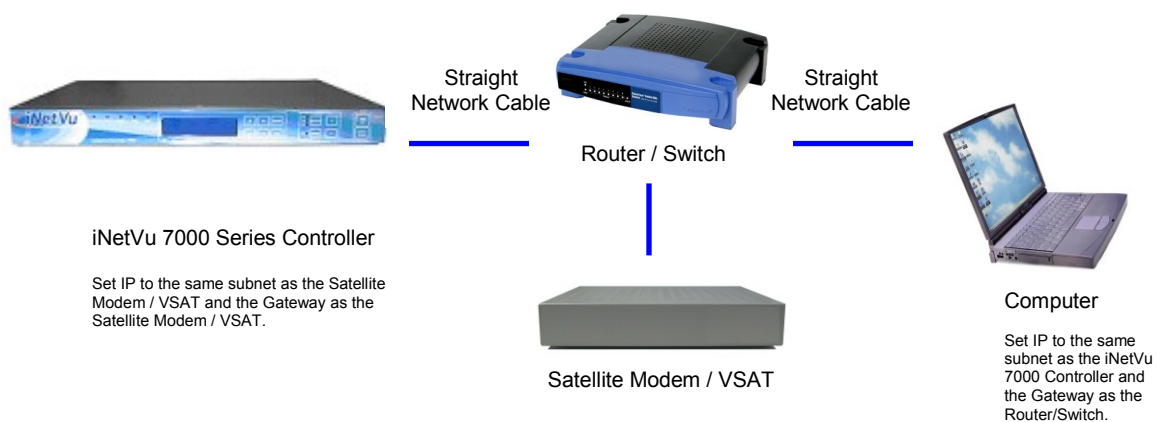


Fig. 115: *Controller to PC and Modem Connectivity via Network Interface*

iNetVu 7000 Series Controller

Set IP to the same subnet as the Satellite Modem / VSAT and the Gateway as the Satellite Modem / VSAT.

Satellite Modem / VSAT

Computer

Set IP to the same subnet as the iNetVu 7000 Controller and the Gateway as the Router/Switch.

10.1. Network Configuration Example

Direct Connection to PC:

***See Appendix for router configuration**

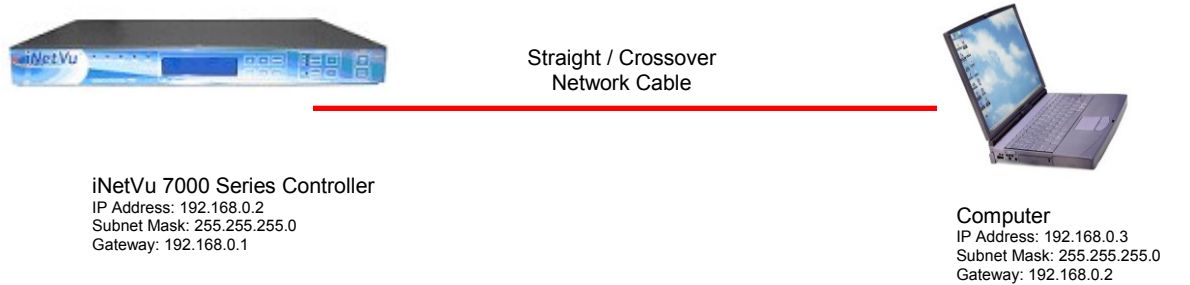


Fig. 116: *IP Setup for Controller to PC Connectivity*

Direct Connection to Satellite Modem/VSAT:

Satellite Modem / VSAT – Fixed IP Address

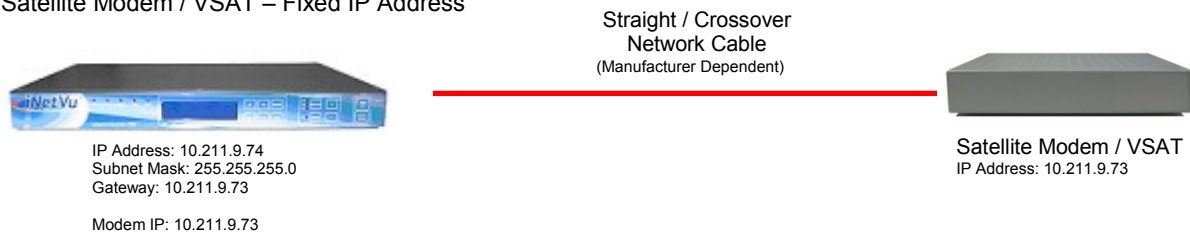


Fig. 117: *Controller to Modem Network Setup*

****** Once the IP Address is assigned to the iNetVu® 7000 Controller by the Satellite Modem / VSAT, you may check the LCD Menu to view the assigned IP Address.

Connection via Router/Switch:

Satellite Modem / VSAT – Fixed IP Address



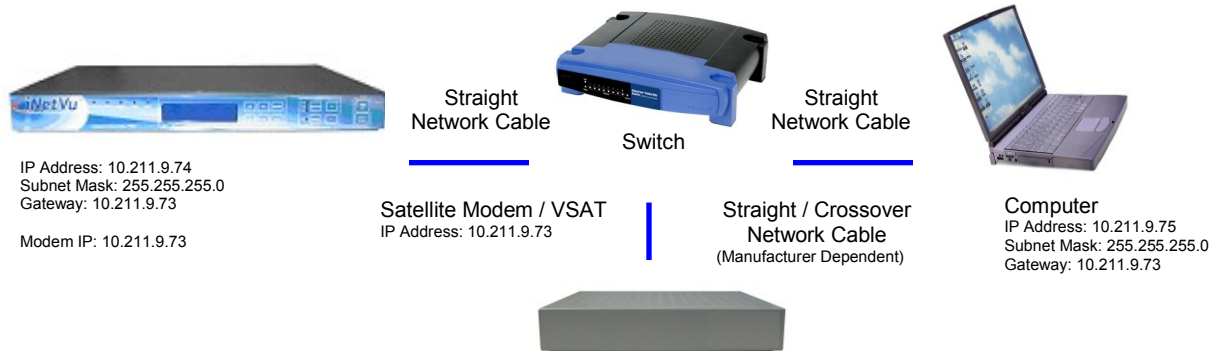


Fig. 118: *Controller to Modem and PC network setup*


10.2. How to Set Network Configurations on your PC

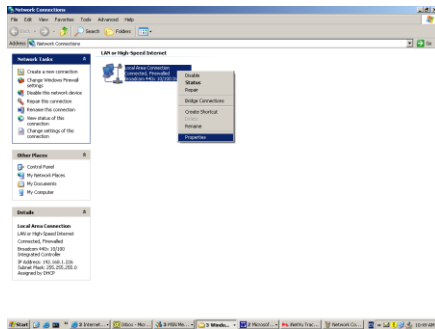

1. Open **Network Connections**, right-click your network card, and select **Properties**.

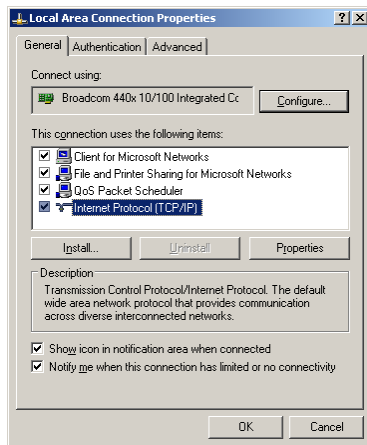

2. Select **Internet Protocol (TCP/IP)** and click **Properties**.

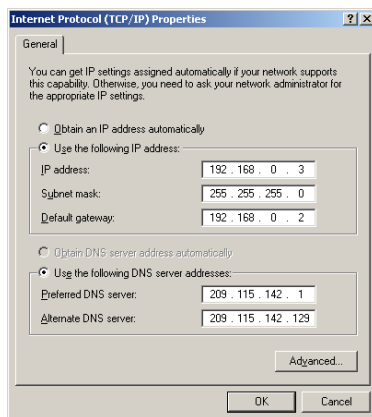

3. Direct Network Connection:

Set your PC to the same subnet as the iNetVu® 7000 Series Controller, and the Default Gateway to the iNetVu® 7000 Series Controller.

The screenshot depicts this configuration.

Network Connection via Router/Switch:

Dependent on Network Configuration (See previous section)

11. Integrations and Compatibility Features

11.1. GLONASS Navigation System

The GLONASS Navigation System is now fully compatible with the 7000 series controller using the NAVIS Receiver Module, P/N: NV08C-EVK-CSM. To date this is the only module that has been successfully tested and thus only this device (P/N: NV08C-EVK-CSM) will be supported. This option can be selected in the IMS 7000 software or within the controller using the keypad functions. This option currently supports an external GLONASS receiver which is attached to controller via serial port interface. The 7000C and 7024C controllers have NV08C- CSM chip onboard and use the GLONASS/GPS Antenna that is shipped with these units.

11.2. Uplogix Remote Management

The iNetVu Controller has been fully integrated with Uplogix Remote Management appliances. This feature allows for out-of-band and in-band remote access to the iNetVu Antenna Systems with capability to remotely monitor parameters on the iNetVu controller and issue commands to enable, reconfigure, retarget and stow the antenna(s). This functionality allows the operators to remotely manage and control the iNetVu antenna, as if they were onsite. Refer to the Uplogix Feature Guide for operational/setup information.

12. APPENDICES

12.1. Appendix 1: Default Limits and Configuration Data Tables

Compass Reading Elevation

	PLATFORM TYPES					
	A1800A /B/C/E	A1500A/ B/C/E	A1200	A0980	A0740	A0660
COMPASS READING ELEVATION	32	37	32	35	25	25

	PLATFORM TYPES					
	A1810A /B/C/E	A1801A /B/C/E	A0180A	A1210A	A1201A	A1200Q
COMPASS READING ELEVATION	32	32	32	32	32	32

	PLATFORM TYPES					
	A0985A	A0985B	A0981A	A0755A	A0121	A0125A
COMPASS READING ELEVATION	24	24	24	24	NA	NA

Table 1: Compass Reading Elevation Default Values

Elevation Offset

	PLATFORM TYPES				
	A1800A/ B/C/E	A1200B/ A1500A/ B/C/E	A0980	A0740	A0660
EL OFFSET	45.00	42.00	31.00	31.00	35.00

	PLATFORM TYPES				
	A1210A	A1201A	1200Q	A0121A	A0125A
EL OFFSET	60.5	17	11	15.5	15.5

	A0985A	A0985B	A0981A	A0755A		
EL OFFSET	18.5	18.5	18.5	20.5		

Table 2: Default Elevation Offsets. All values are $\pm 2^\circ$ after Target Calibration.

AZ Potentiometer/Encoder

	PLATFORM TYPES				
	A1800A/B /C/E	A1200B/ A1500A/ B/C/E	A0980	A0740	A0660
AZ ZERO	280.7808	282.88	342.17	342.17	342.17
	PLATFORM TYPES				
	A1210A	A1201A	A1200Q	A0981A	A0755A
AZ ZERO	278	282.8	210.9	282.8	282.8
	A0985A/B	A0121A	A0125A		
AZ ZERO	282.8	282.8	282.8		

*Table 3: Azimuth Potentiometer Default Values***PL Potentiometer**

	PLATFORM TYPES						
	A1800A/C	A1800B/E	A1200	A0980	A0740	A0660	A1500A/ B/C/E
PL ZERO	205.4144	159.2832	197.22	131.79	131.79	131.79	212.4

Table 4: Polarization Potentiometer Default Values

**** Note**:** The A980A and A1200A Revision 3.0 Platforms as well as all New Gen platforms, have replaced the PL Potentiometer with a PL Inclinator (Tilt Sensor); 755A and 985A do not have movement on the PL axis thus the above table is not valid for these units, See Table 5 for Tilt Sensor default values.

PL Inclinator (Tilt Sensor)

	PLATFORM TYPES						
	A1201	A1200	A0120A	A0985A/B	A0981A	A0980A	A0755A
PL ZERO	90.0	90.0	90.0	90.0	90.0	90.0	90.0
	PLATFORM TYPES						
	A0121A	A0125A	A1200Q	A1210A			
PL ZERO	90.0	90.0	90.0	90.0			

Table 5: Polarization Inclinator Default Values

Default Platform Speeds and Limits

	PLATFORM TYPES				
	A1800A/ B/C/E	A1200B/ C/A1500 A/B/C/E	A0980	A0740	A0660
EL SLOW	6	6	4	4	4
EL CURRENT6	7.00A	7.00	7.00	7.00	7.00
EL CURRENT9	12.00A	12.00	12.00	12.00	12.00
AZ SLOW	6	6	4	4	4
AZ CURRENT6	7.00	7.00	7.00	7.00	7.00
AZ CURRENT9	10.00	10.00	10.00	10.00	10.00
PL SLOW	6	4	7	7	7
PL CURRENT6	1.5	1.5	1.5	1.5	1.5
PL CURRENT9	2.0	2.0	2.0	2.0	2.0


	PLATFORM TYPES						
	A1810A B/C/E	A1801A B/C/E	A1210A	A1201A Ver.2.0	1201A Ver.3.0	A0985A /A0755A	A0981A
EL SLOW	NA	NA	6	8	3	3	3
EL CURRENT6	NA	NA	2.0A	3.5A	7.5A	7.0A	7.0A
EL CURRENT9	NA	NA	2.5A	5.0A	10.0A	10.0A	10.0A
AZ SLOW	NA	NA	6	9	3	9	9
AZ CURRENT6	NA	NA	1.0A	1.8A	5.0A	5.0A	5.0A
AZ CURRENT9	NA	NA	1.5A	2.0A	7.5A	7.0A	7.0A
PL SLOW	NA	NA	4	2	2	NA	2
PL CURRENT6	NA	NA	0.7A	0.3A	0.3A	NA	0.3A
PL CURRENT9	NA	NA	1.0A	0.5A	0.5A	NA	0.5A

	PLATFORM TYPES				
	A0121A	A0125A	A0985B	1200Q	
EL SLOW	5	5	3	4	
EL CURRENT6	4.5A	4.5A	7.0A	3.5A	
EL CURRENT9	4.5A	4.5A	10.0A	4.5A	
AZ SLOW	3.0	3.0	5	2	
AZ CURRENT6	1.5A	1.5A	1.7A	1.7A	
AZ CURRENT9	1.5A	1.5A	2.0A	2.5A	
PL SLOW	6	6	NA	2	
PL CURRENT6	0.8	0.8	NA	.3A	
PL CURRENT9	0.8	0.8	NA	.5A	

Table 6: Default values for speed and current limits

12.2. Appendix 2: Compass Direction and System Ref. AZ Table

Direction	System Ref. AZ	Search Window Starting Angle
North (N) = 0	0	0
North West (NW) = 45	-45	-45
East (E) = 90	-90	-90
South East (SE) = 135	-135	-135
South (S) = 180	-180	-180
South West (SW) = 225	135	135
West (W) = 270	90	90
North West (NW) = 315	45	45

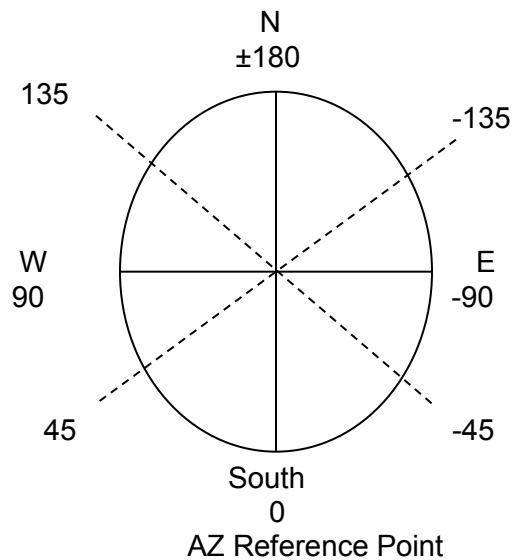

Note: Antenna reference point is 0° which means the reflector is pointing south with reference to the back facing North. The search window reference starting point will be the System Ref. AZ value, use above table and diagram to figure out which way the Antenna must be pointed (System Ref. AZ starting point) in order to set the AZ Window Size if an area is required to be excluded or blocked off from the search.

12.3. Appendix 3: LCD Table Summary


Menu	Field	Explanation
MONITOR		
MAIN	E (Angle)	Elevation Angle and Limit Indicators
	A (Angle)	Azimuth Angle and Stow Limit Indicator
	P (Angle)	P (Angle) – Polarization Angle and Stow Limit Indicator
	GPS and CMPS	GPS Status Flag and Compass Status Flag (OO, OV, VO, FF)
	ST	System Status (II, ST, PK, etc.)
	RF/DVB (Value)	RF/DVB (U/L) – Receive RF/DVB Signal Value and Lock/Unlock Status
	M (SNR) D/E	Modem Signal and Transmitter Status
	Beacon Signal	Beacon Signal value, and locked or unlocked status of BR300L Receiver(optional)
EL	E (Angle)	Real Time Elevation Angle and Status
	I/S	Real Time Current being drawn from the elevation motor @ the set speed
	S (Value)	Elevation search window limit
	Ad (Value)	Advanced Search Elevation Gap
	C (Value)	Elevation angle at which the compass reading is taken
	O (Value)	Elevation Offset used to obtain an accurate elevation reading
AZ	A (Angle)	Real Time Azimuth Angle and Status
	I/S	Real Time Current drawn from the Azimuth motor @ the set speed
	W (Value)	Azimuth search window limit
	Z	AZ Zero AZ Axis
PL	P (Angle)	Real Time Polarization Angle and Status
	I/S	Real Time Current drawn from the Polarization motor @ the set speed
	O (Value)	Polarization offset
	Z	PL Zero PL axis
GP	GPS (Status)	GPS Status (i.e. Normal, Overridden, or Failure)
	LAT and LONG	Latitudinal and Longitudinal GPS Coordinates
	V (Value)	GPS Velocity – indication of moving vehicle
	H (Value)	GPS Heading
SM	RF Search Mode	RF mode status disabled or enabled (N or Y) – first field
	RF Override	RF override status disabled or enabled (N or O) – second field
	RF Threshold	RF Threshold value
	RF/DVB (status)	RF or DVB value with LNB and Signal (N or L)
	CP (Status)	Compass Status (i.e. Normal, Overridden, or Failure)
	CP (Value)	Compass Heading taken after compass has been checked
	AZ_W	Azimuth search window
S1	Sat No	Target Satellite (Sat0 to Sat 4)
	Sat Long + Hems.	Target Satellite Locations Longitudinal Value and Hemisphere
	E (EL)	Target Antenna Elevation Value for Satellite acquisition
	A (AZ)	Target Antenna Azimuth Value for Satellite acquisition with reference to True North
	P (PL)	Target Antenna Polarization Value for Satellite acquisition
	TP NUMBER	T0-T2 (Horizontal Receive) and T3-T5 (Vertical Receive) DVB Transponders
	FREQUENCY	Satellite Transponder Frequency that DVB searches
	SYMBOL RATE	Satellite Transponder Symbol Rate that DVB searches
	CODE RATE	Satellite Transponder FEC (Code) Rate that DVB searches
	LNB Power	LNB Power supplied to the LNB when searching for target satellite
S2 (Optional)	Ref. Sat Long + Hems.	Reference Satellite Status, Locations Longitudinal Value and Hemisphere
	E (EL)	Target Antenna Elevation Value for Satellite acquisition
	A (AZ)	Target Antenna Azimuth Value for Satellite acquisition with reference to True North
	P (PL)	Target Antenna Polarization Value for Satellite acquisition

	TP NUMBER	T0-T2 (Horizontal Receive) and T3-T5 (Vertical Receive) DVB Transponders
	FREQUENCY	Satellite Transponder Frequency that DVB searches for ref. Satellite
	SYMBOL RATE	Satellite Transponder Symbol Rate that DVB searches for ref. Satellite
	CODE RATE	Satellite Transponder FEC (Code) Rate that DVB searches for ref. Satellite
	LNB_P	LNB Power supplied to the LNB when searching for reference Satellite
MB	Modem (Status)	Status of communication between controller and modem (i.e. initializing, normal, etc.)
	A (ACP Status)	Real Time ACP Status from the NOC
	BR (Freq : status))	Status and Frequency of the Beacon Receiver
IP	C_IP (Address)	Controller IP Address
	M_IP (Address)	Modem IP Address
GW	S_IP (Address)	Controller Subnet IP Address
	G_IP (Address)	Controller Gateway IP Address
OPERATION		
S0/BLU/BM	Find Sat 0	Automatically Find and Lock on to configured satellite 0 or Blue Beam or Beam ID
S1/ORG	Find Sat 1	Automatically Find and Lock on to configured satellite 1 or Orange Beam
S2/PRP	Find Sat 2	Automatically Find and Lock on to configured satellite 2 or Purple Beam
S3/GRN	Find Sat 3	Automatically Find and Lock on to configured satellite 3 or Green Beam
S4	Find Sat 4	Automatically Find and Lock on to configured satellite 4, S4 returns system back to auto mode when using front panel with Tooway modem.
TE	Enable Tx	Enable the Transmitter
TD	Disable Tx	Disable the Transmitter
AZC	Calibrate AZ	Calibrate the Azimuth Axis
PLC	Calibrate PL	Calibrate the Polarization Axis
CPC	Calibrate CP	Calibrate the Compass
CR	Restore Compass	Automatically Restores Compass to Factory Calibrated state
CONF1		
S1	Sat Number	Satellite number selected for configuration (0-4)
	Sat Longitude	Target Satellite Locations Longitudinal Value and Hemisphere
	S11/S2A	DVB Carrier Type for target satellite
	O (Offset)	Target Satellite Offset
	TP Number	Transponder Number in Controller (T0-T2) Horizontal Receive (T3-T5) Vertical Receive
	FREQUENCY	Satellite Transponder Frequency that DVB searches
	SYMBOL RATE	Satellite Transponder Symbol Rate that DVB searches
	CODE RATE	Satellite Transponder FEC (Code) Rate that DVB searches
	LNB Power	LNB Power supplied to the LNB when searching for target satellite
SM1	RF Status	RF Search Mode Status, Threshold override status and RF Threshold value
	CP	Compass Status (i.e. Normal, Overridden, or Failure)
	CP Heading	Compass Angle reading
	AZ_W	Azimuth Search Window Limit for satellite acquisition
SM2	Modem ID	Modem Beam ID number
	BR Frequency	Beacon Receiver programmable frequency/Initial Acquisition Gain.
CONF2		
S2	Sat Longitude	Reference Satellite Locations Longitudinal Value, and Enable/Disable option
	O (Offset)	Reference Satellite Offset
	TP Number	Transponder Number in Controller (T0-T2) Horizontal Receive (T3-T5) Vertical Receive
	FREQUENCY	Satellite Transponder Frequency that DVB searches
	S11/S2A	DVB Carrier Type for reference satellite (
	SYMBOL RATE	Satellite Transponder Symbol Rate that DVB searches
	CODE RATE	Satellite Transponder FEC (Code) Rate that DVB searches
	LNB Power	LNB Power supplied to the LNB when searching for reference satellite
MB	MOD FREQ	Frequency modem is configured for (HNS ONLY) (MHz)
	MOD sym. Rate	Symbol Rate modem is configured for (HNS ONLY) Sps
	Rx/Tx Polarity	Modem configured receive and transmit polarity respectively.
	Hem.	Hemisphere of operation
	T (N/Y)	Auto Disable Tx when modem is reset while system is online (N=keep modem status)
	ACP DIS (Y/N)	Y = Disable ACP N = Enable ACP
	22 KHz (E/D)	E = Enable/ D= Disable 22 KHz Tone for HNS Modem
EL	O (Value)	Elevation Offset for proper elevation angle readings
	W (Value)	Elevation Window Limit for satellite searching
	A (Value)	A (Value) – Elevation Adjustment Gap for inclined surfaces

	L (UDS)	Up, Down, and Stow Limits enabling (E) or disabling (D) on the Elevation Axis
	C (EL Value)	Compass Reading Elevation Angle
	S (Value)	Slow Speed Settings for Elevation Angle Operation
	I (Limits)	Current Limits on EL Axis @ Speed 9 and @ Speed 6
AZ	Z (Value)	AZ Pot Zero for converting A/D value for physical determination of AZ zero angle
	Stow Limit	Stow Limit Enabling (E) or Disabling (D)
	CP_O (Value)	Compass Offset
	S (Value)	Slow Speed Setting for Azimuth Axis.
PL	I (Limits)	Current Limits on AZ Axis @ Speed 9 and @ Speed 6
	Z (Value)	PL Pot Zero for converting A/D value for physical determination of PL zero angle
	Skew/Stow Limit	Skew Adjustment and Stow Limit Enabling (E) or Disabling (D)
	O (Offset)	Polarization Offset
GP	S (Value)	Slow Speed Setting for Polarization Axis.
	I (Limits)	Current Limits on PL Axis @ Speed 9 and @ Speed 6
	G (Mode)	GPS Setting (Override, Normal)
	GPS Long	GPS Longitudinal Value
C1	GPS Lat	GPS Latitudinal Value
	BC	TX Broadcast Enable/Disable
	ES_NO	Maximum ES/NO value that will stop peaking process once reached
	DH (DHCP)	Enables or Disables DHCP in the controller
C2	UN (Time)	Unattended Operation
	MP	Enables or Disables Motion Protection
	IN	Inclined Satellite Enable (# -> time between re-peak)
	BP	Beep upon Movement of Cursor via LCD
C3	C (Console Use)	Console Interface Configuration (modem, Beacon Receiver, dBUG, GPS, Glonass, PC) and Baud Rate
	Platform Type	Platform Type, Version and Serial Number Configuration
	TX_O	Polarization offset adjustment upon positioning due to mechanical misalignment of mount
	PASSWORD	Web Interface, and LCD Configuration Screen Access Password
SG	LO	
	22KHz Tone	Enable or Disable 22KHz tone
	S_IP (Address)	7000 Controller Subnet IP Address
	G_IP (Address)	7000 Controller Gateway IP Address
IP	C_IP (Address)	Controller IP Address
	M_IP (Address)	Modem IP Address
SR	Service	Service In Use (iDirect, Hughes, Etc.)
	Interface	Modem Communication Interface (i.e. Telnet, HTTP, Console, etc.)
	Password/CD-KEY	Modem Password/CD-KEY if necessary
TEST		
E&A&P	E (Range)	Range and speed of start angle to end angle of elevation movement
	P (Range)	Range and speed of start angle to end angle of polarization movement
	A (Range)	Range and speed of start angle to end angle of azimuth movement
	Axis Selection	Selection for Axis to be tested, and test looping option setting
CP	TST	Initiates the testing on the specified axis and range.
	CP	Performs a Check Compass Operation
DPY	E (Angle)	The target elevation angle for antenna deployment
	P (Angle)	The target polarization angle for antenna deployment
	A (Angle)	The target azimuth angle for antenna deployment
	DPLY	Initiates the deploy command to the specified antenna deployment angles
DPYQ	E (Angle)	The target elevation angle for antenna Quick deployment
	P (Angle)	The target polarization angle for antenna Quick deployment
	A (Angle)	The target azimuth angle for antenna deployment
	DPLY	Initiates the Quick deploy command to the specified antenna deployment angles
DPY_C	E (Angle)	The target elevation angle for antenna deployment and compass reading
	P (Angle)	The target polarization angle for antenna deployment and compass reading
	A (Angle)	The target azimuth angle for antenna deployment and compass reading
	DPLY	DPLY – initiates a compass reading at the specified antenna deployment angles
A_ACP	A_ACP	Initiates an Automatic Cross Pol Test
M_ACP	M_ACP	Initiates a Manual Cross Pol Test

S_ACP	S_ACP	Stops any Cross Pol testing in progress
INFO		
CC1	ID (Value)	States the Controller ID
	HW (Value)	States the Controller Board Hardware Type
	SQ_T (Value)	Signal Quality Threshold for proper Controller SNR Reading
	FBV (FW – BL)	States the Firmware and Boot loader version respectively
CC2	MA (Address)	States the Controller MAC Address
	CONF_ID(Value)	States the Controller Configuration ID (for internal use)
DVB_D	DVB	States the DVB Mode in Use
DVB_P	DVB	DVB Status information
MOD	SN (Value)	States the modem Serial Number
	S (Status)	States the status of the modem
	V (Version)	States the Modem Firmware Version
SYS1	Platform Type	Platform Type and Serial Number
ERR	Error (Code)	Displays error codes if applicable

12.4. Appendix 4: Router Configuration Example

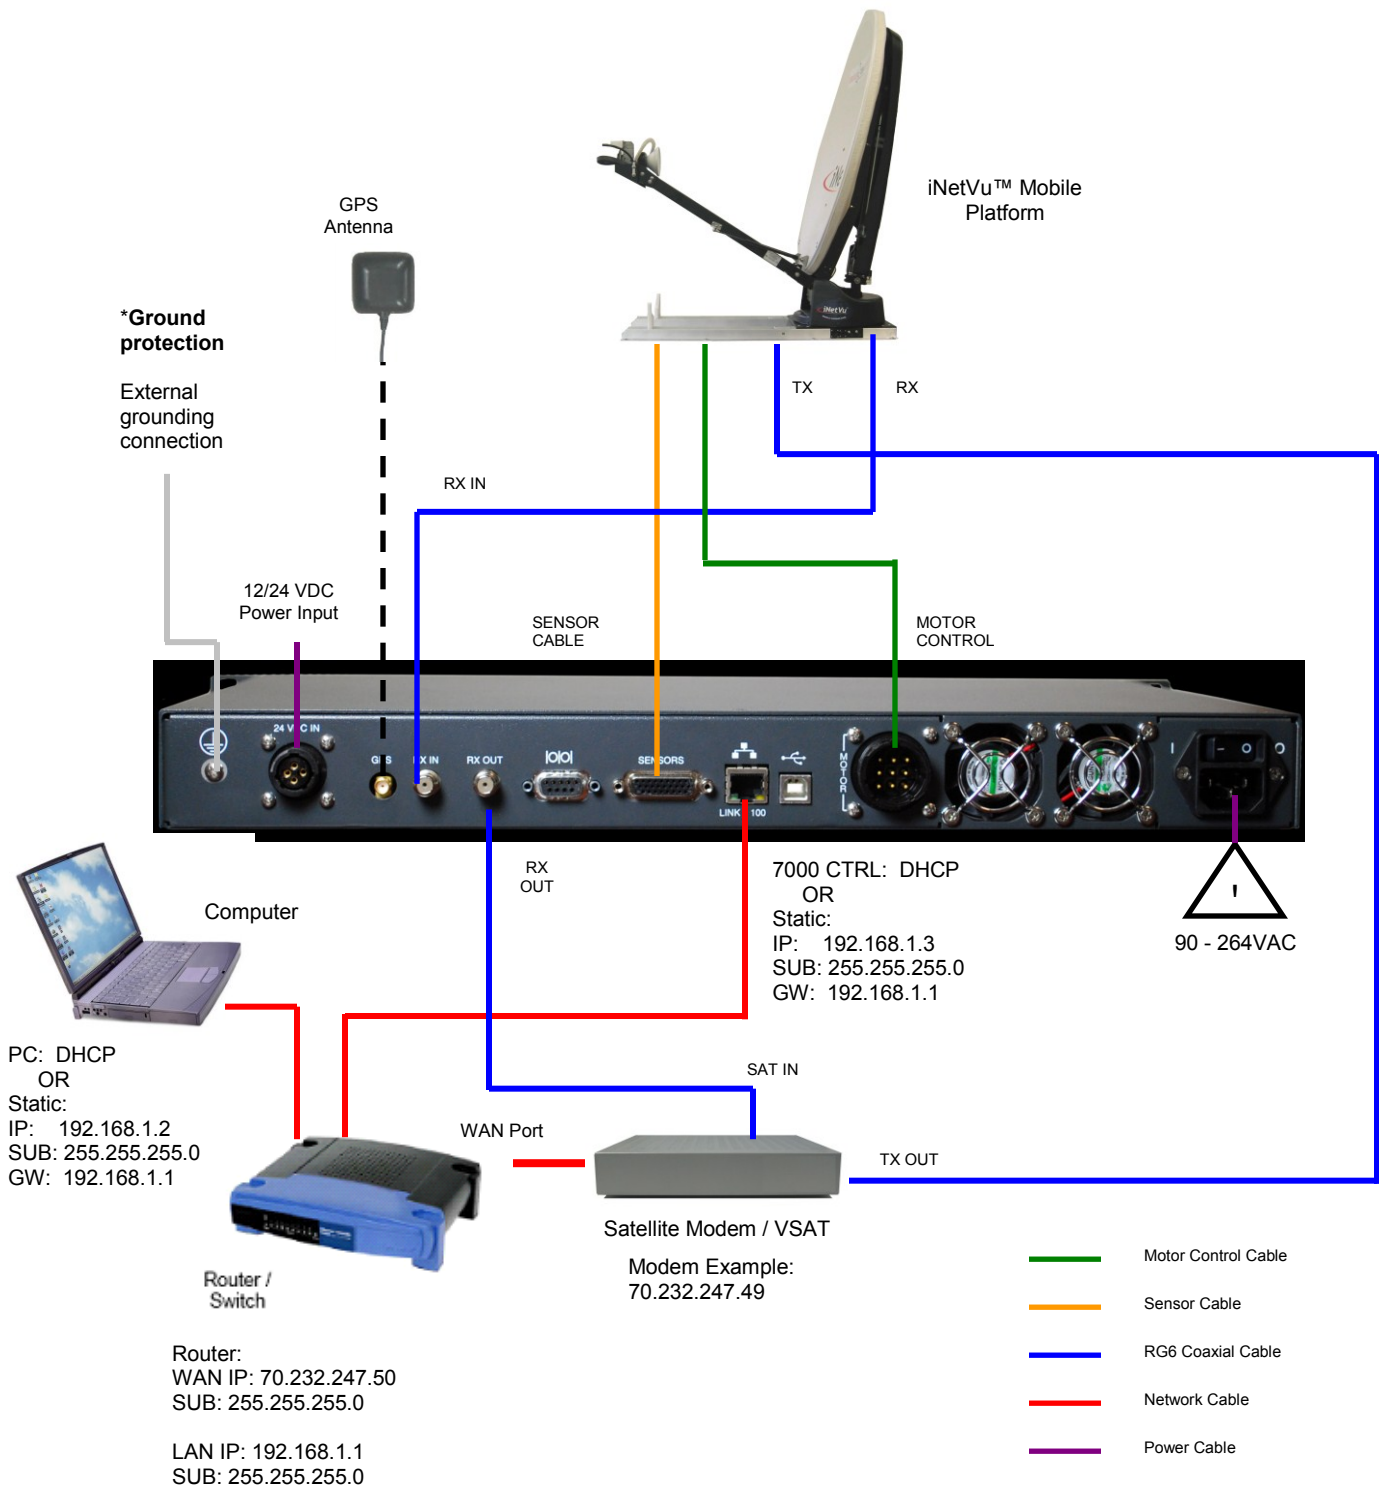


Note: VDC Power Input feature is available in the 7000C and 7024C Models Only. See Appendix for VDC power input external cable wiring.

12.5. Appendix 5: Tooway Look-up Table

Configuring Tooway Auto Beam Color Search on Controller LCD


The following procedure will only work on Controllers with Hardware ID >= (greater or equal to) 1, this can be confirmed in the software “About” window.

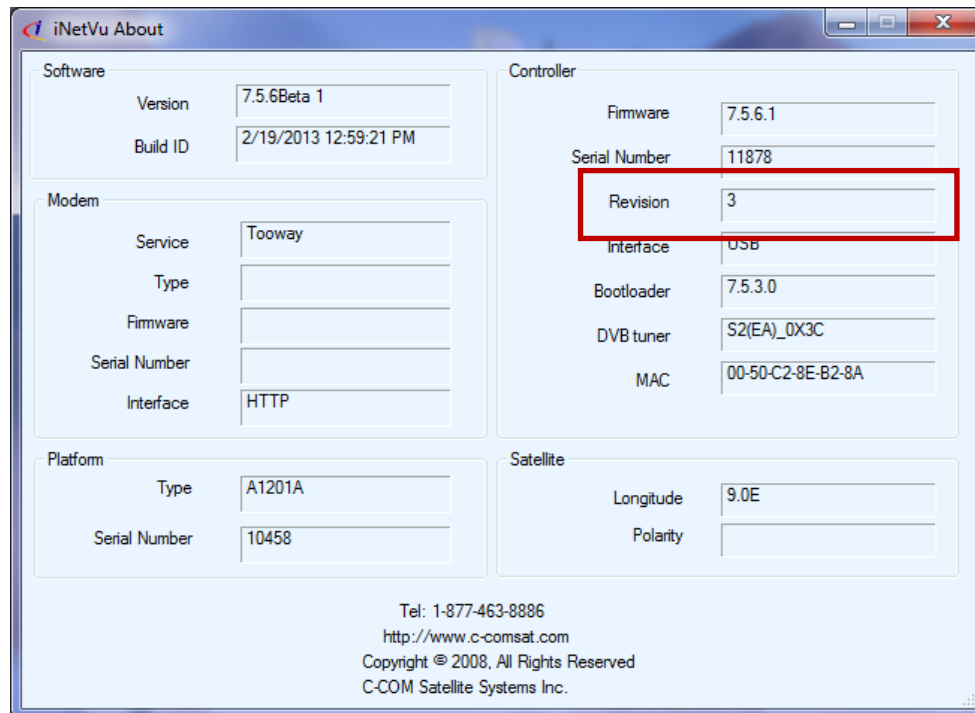

1. Upload to Latest iNetVu FW.
2. Launch iNetVu Mobile 7000 Software.
3. Configure Application to use desired Platform i.e **A0755A** or **A0985A** (In **Maintenance** Window) and Modem type (In **Configuration** Window).
4. Click **Send ALL** followed by **Write EPROM**.
5. Reset (recycle power) on Controller.

*****Note***** The Tooway Look-up Table must be uploaded to the Controller via the Application software before it can be used directly from the Controller LCD. This process is only required once as long as no changes are made to the Beam Colors which than will require another Table Upload.

6. In the **Configuration** Window, click on **Update Look-up Table**
7. This process will take approximately 6-10min depending on your system. Status will be displayed on the bottom of the **Configuration** window.

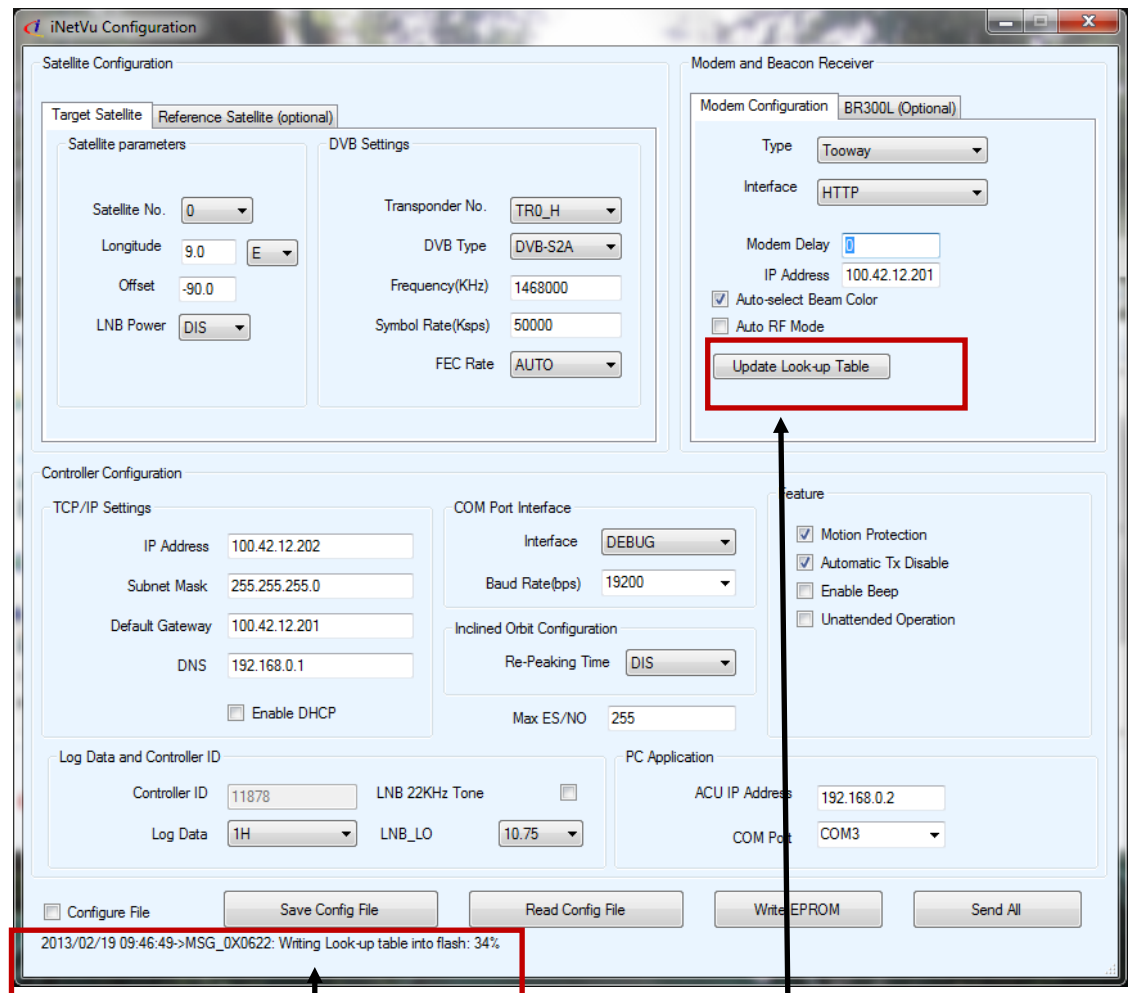

Look-up Table Upload

Look-up Table Upload

8. The Upload status will be confirmed with an OK once it finishes.

The image shows the iNetVu Configuration window with the following sections:

- Satellite Configuration:**
 - Target Satellite: Reference Satellite (optional)
 - Satellite parameters: Satellite No. 0, Longitude 9.0 E, Offset -90.0, LNB Power DIS.
 - DVB Settings: Transponder No. TR0_H, DVB Type DVB-S2A, Frequency(KHz) 1468000, Symbol Rate(Kbps) 50000, FEC Rate AUTO.
- Modem and Beacon Receiver:**
 - Modem Configuration: BR300L (Optional)
 - Type: Tooway, Interface: HTTP, Modem Delay 8, IP Address 100.42.12.201.
 - Auto-select Beam Color (checked), Auto RF Mode (unchecked).
 - Update Look-up Table button.
- Controller Configuration:**
 - TCP/IP Settings: IP Address 100.42.12.202, Subnet Mask 255.255.255.0, Default Gateway 100.42.12.201, DNS 192.168.0.1, Enable DHCP (unchecked).
 - COM Port Interface: Interface DEBUG, Baud Rate(bps) 19200.
 - Inclined Orbit Configuration: Re-Peaking Time DIS, Max ES/NO 255.
 - Feature: Motion Protection (checked), Automatic Tx Disable (checked), Enable Beep (unchecked), Unattended Operation (unchecked).
 - Log Data and Controller ID: Controller ID 11878, LNB 22KHz Tone (unchecked), Log Data 1H, LNB_LO 10.75.
 - PC Application: ACU IP Address 192.168.0.2, COM Port COM3.
- Status Bar:** A red box highlights the message: "2013/02/19 09:47:22->MSG_0X6111: Updating Look-up Table OK".

9. Ensure **Auto-select Beam Color** option is selected on the Application side in order to see which Beam color the auto selection is searching on.


The image shows the Modem status window with the following sections:

- Modem:** Signal Strength (0), Isolation (0).
- Satellite:** SAT 0 -9E, SAT 1 -9E, SAT 2 -9E, SAT 3 -9E, SAT 4 91W.
- Automatic Controls:** Select (blue bar), Transmit Control (STOP button), Elevation Data.

10. The Controller is now ready to do Auto Beam selection.

11. Press **FIND SAT**, the system will begin the Auto Beam search

12. Hold down the **FIND SAT** button for 3 seconds then let go, Tooway menu will display, which will allow the user to manually select the Beam Color they desire.

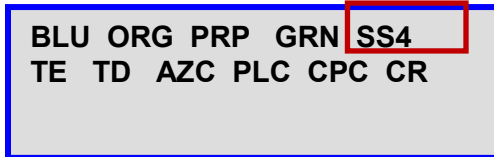

13. Selecting **SS4** will put system back into Auto Beam search mode.

12.6. Appendix 6: DC Input Power Cable Connectivity

Note: DC Input connector exists in 7000C and 7024C controllers ONLY, older versions do not have the DC Input connector.


Controller Receptacle

J1 Panel Receptacle
4-Socket Contacts Mating View



External Cable Plug

P1 Straight Plug
4-Pin Contact Mating View

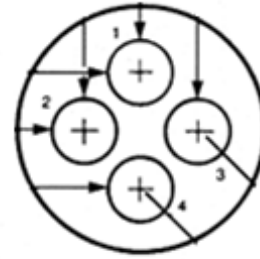

P1 External Cable Plug Pin List (4-CONTACTS)

RECEPTACLE PIN	SIGNAL	Notes
P1-1	DC + In 2	Must have an Inline Fast Blow Fuse – 15A@24VDC
P1-2	DC - In 2	
P1-3	CHASSIS GND	
P1-4	NOT USED	

Note: VDC Power Input feature is available in the 7000C and 7024C Models Only. The correct external power source should be used with the correct controller type, (7000C-12VDC/7024C-24VDC input). The DC cable if assembled by end user must include INLINE FAST BLOW FUSE rated at 15A@24VDC.


Materials Required for External Cable:

Part #	Quantity	Description
206429-1	1	TEConnectivity AMP CPC Plug Assembly, Shell Size 11, Reverse Sex, 4-Pin Contacts, Series 1
206358-5	1	TEConnectivity AMP CPC Cable Clamp, Size 11
66361-4	4	TEConnectivity AMP CPC Pin Contact, Series 1, Wire 18-14 AWG
-----	1	Heatshrink, Adhesive, 25mm Dia X 60mm Lg
-----	X	External cable used should be a 3-wire, 14 AWG.
-----	1	inline fast blow fuse at 15A@24VDC


12.7. Appendix 7: Setup Wizard Configuration Steps

The Setup Wizard will launch every time the **iNetVuMobile7000** software is executed, select “Do not show this message again” to allow software to go straight to the Controls Window when the software application is launched.


1. Click **iNetVuMobile7000** icon on desktop.
2. Click Allow access button on the Windows Firewall pop-up window.

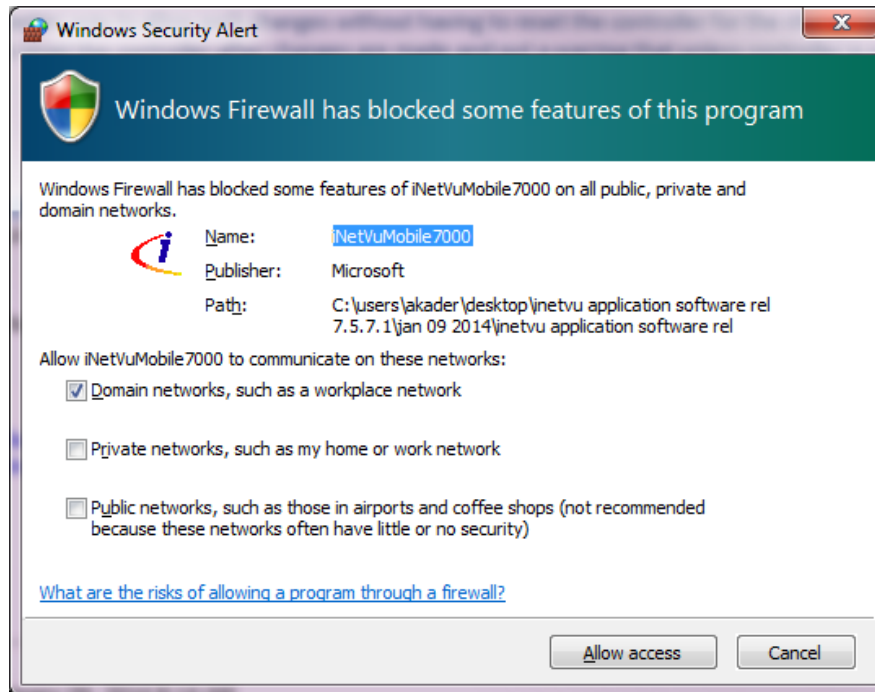


3. Put check mark in the box “Do not show this message again” and click Yes.

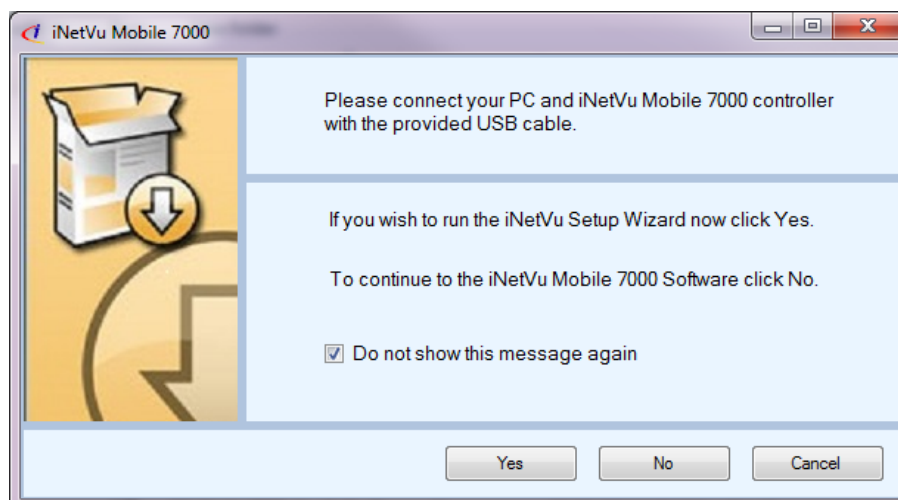


4. The Setup Wizard will check and ensure Firmware and Software versions are the same, if not the same version you will be prompted to update, select Yes.

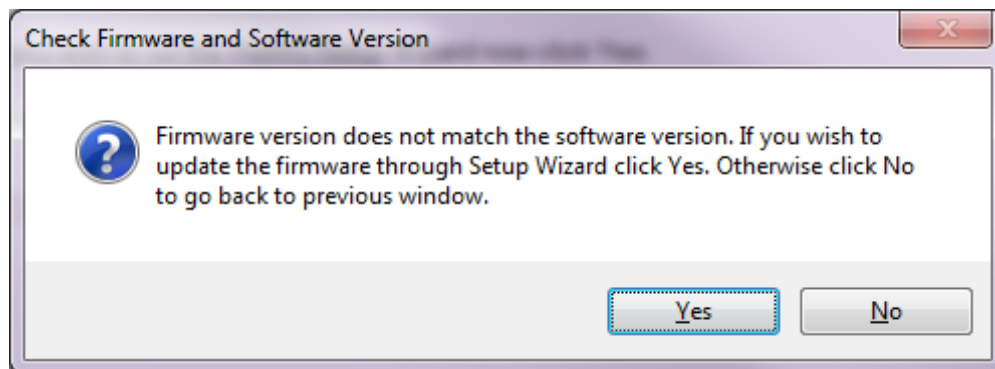


5. Put controller in Firmware update mode by following instructions on the screen.
6. Click Update Firmware button, it may take 10 seconds for button to become clickable.

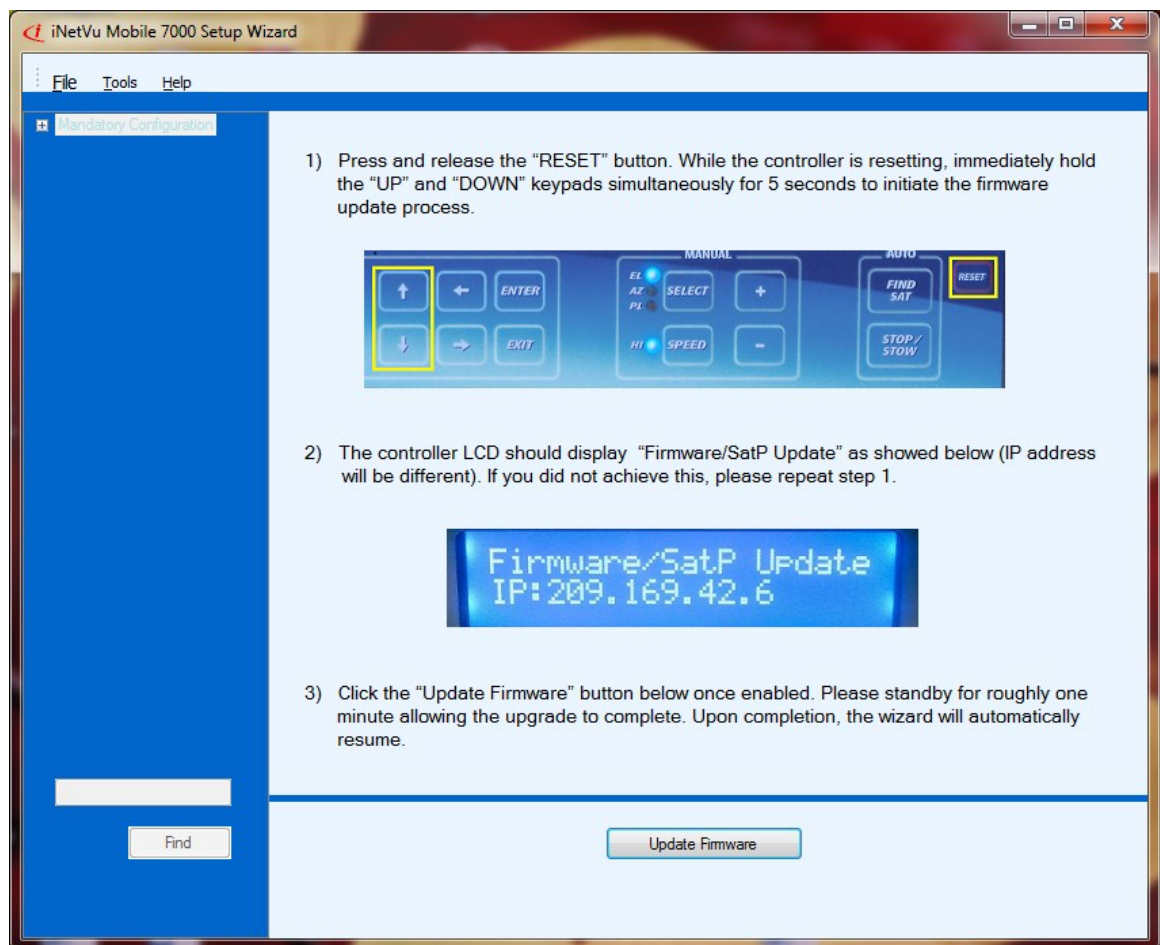


7. Firmware update status will be displayed on bottom of screen. The screen will automatically flip to the next step once the update has completed.

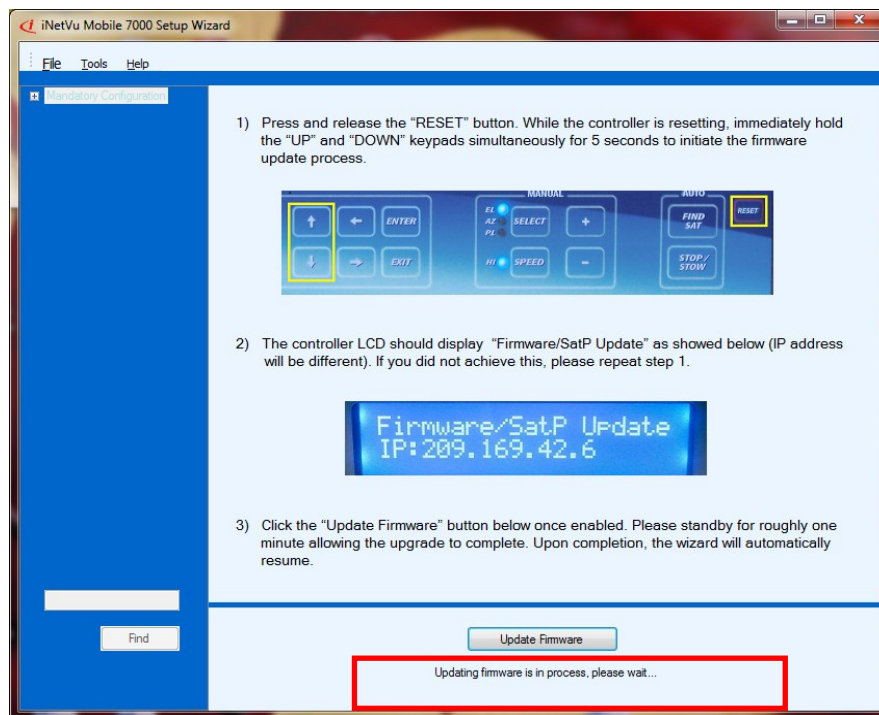

8. Select and or enter Platform type, version and Serial number and click Next.

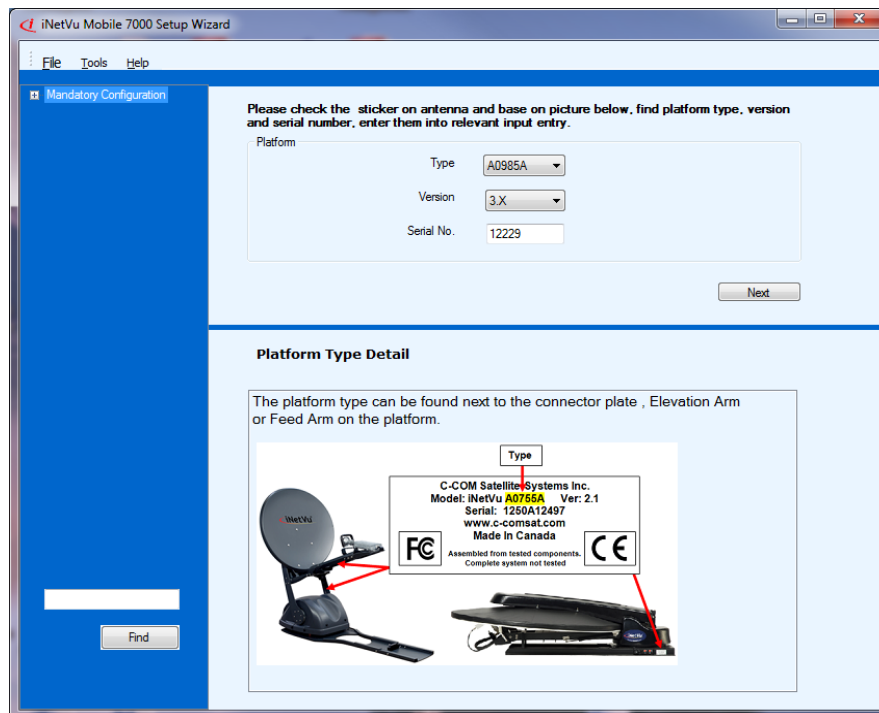

9. Select the service type (Modem service used), and interface, along with Controller and Modem information. Hover over each field to get tips, examples and clear explanation. Click Next

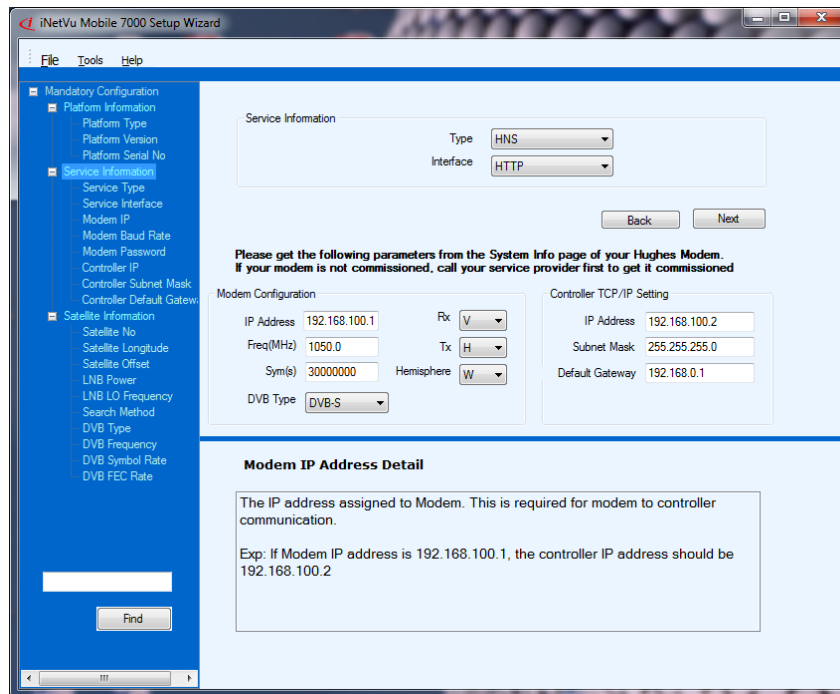

The screenshot shows the 'iNetVu Mobile 7000 Setup Wizard' window. The left sidebar lists configuration categories: Mandatory Configuration, Platform Information, Service Information, and Satellite Information. The 'Service Information' section is selected. The main area contains fields for 'Service Information' (Type: HNS, Interface: HTTP) and 'Modem Configuration' (IP Address: 192.168.100.1, Freq(MHz): 1050.0, Sym(s): 30000000, DVB Type: DVB-S). A 'Controller TCP/IP Setting' section shows IP Address: 192.168.100.2, Subnet Mask: 255.255.255.0, and Default Gateway: 192.168.0.1. A 'Modem IP Address Detail' box explains the IP address assignment. Navigation buttons 'Back' and 'Next' are present.

Service Information

Type: HNS
Interface: HTTP

Back Next

**Please get the following parameters from the System Info page of your Hughes Modem.
If your modem is not commissioned, call your service provider first to get it commissioned**

Modem Configuration

IP Address: 192.168.100.1 Rx: V
Freq(MHz): 1050.0 Tx: H
Sym(s): 30000000 Hemisphere: W
DVB Type: DVB-S

Controller TCP/IP Setting


IP Address: 192.168.100.2
Subnet Mask: 255.255.255.0
Default Gateway: 192.168.0.1

Modem IP Address Detail

The IP address assigned to Modem. This is required for modem to controller communication.
Exp: If Modem IP address is 192.168.100.1, the controller IP address should be 192.168.100.2

Find

10. Satellite information screen, allows user to configure Satellite, Search Method and DVB settings. Enter and select Parameters/Settings for the Satellite used with your Platform. Click Finish.

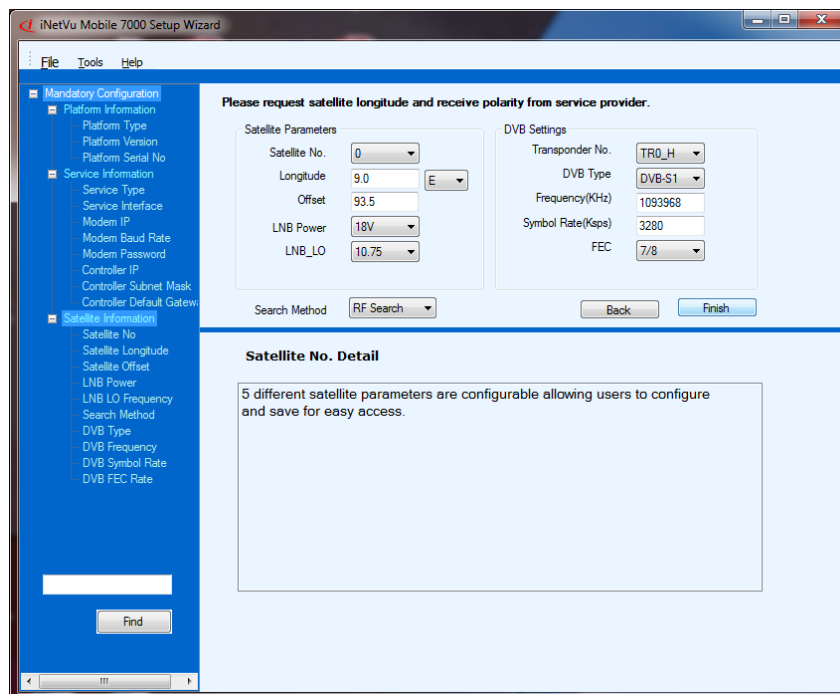

The screenshot shows the 'iNetVu Mobile 7000 Setup Wizard' window. The left sidebar lists configuration categories: Mandatory Configuration, Platform Information, Service Information, and Satellite Information. The 'Satellite Information' section is selected. The main area contains fields for 'Satellite Parameters' (Satellite No.: 0, Longitude: 9.0, Offset: 93.5, LNB Power: 18V, LNB_LO: 10.75) and 'DVB Settings' (Transponder No.: TR0_H, DVB Type: DVB-S1, Frequency(KHz): 1093968, Symbol Rate(Kbps): 3280, FEC: 7/8). A 'Search Method' dropdown is set to 'RF Search'. A 'Satellite No. Detail' box explains the configurability of satellite parameters. Navigation buttons 'Back' and 'Finish' are present.

Please request satellite longitude and receive polarity from service provider.

Satellite Parameters

Satellite No.: 0
Longitude: 9.0 E
Offset: 93.5
LNB Power: 18V
LNB_LO: 10.75

DVB Settings

Transponder No.: TR0_H
DVB Type: DVB-S1
Frequency(KHz): 1093968
Symbol Rate(Kbps): 3280
FEC: 7/8

Search Method: RF Search


Back Finish

Satellite No. Detail

5 different satellite parameters are configurable allowing users to configure and save for easy access.

Find

11. Click Yes to save and exit.

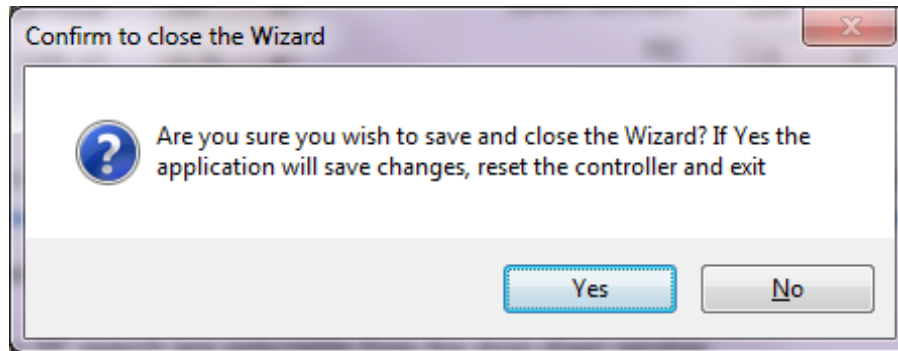

12. Launch the Application by double clicking the **iNetVuMobile7000** icon.

12.8. Appendix 8: Declaration of Conformity

Application of Council Directive

EMC Directive 89/336/EEC**Low Voltage Directive 73/23/EEC**

Standards to which Conformity is Declared:

EN55022 1998, Class B / ICES 003**FCC Part 15 Class B****EN 61000-6-3: 2001 Emission Class B****EN 61000-6-1: 2001 Immunity****EN 61000-4-4: Fast Transient Burst****EN 61000-4-2: Static Discharge****EN 60950: 1992 Safety of Information Technology Equipment**Manufacturers Name **C-COM Satellite Systems Inc.**Manufacturers Address **2574 Sheffield Road, Ottawa, Canada, K1B 3V7**

Importers Name (optional)

Importers Address (optional)

Type of Equipment **Satellite Antenna Controller**Model Number **iNetVu Mobile System**

CE Marked 2005


Serial No. (Optional) Year of Manufacture (Optional) 2004

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directives and Standards.

Signed on behalf of the Manufacturer and Importer

Place **Ottawa, Canada**

Signature

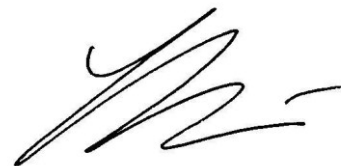Date **April 4, 2005**Full Name: **Dr. Leslie Klein, P.Eng.**
Position: **President and CEO**

Declaration of Conformity

Application of Council Directive

EMC Directive 2004/108/EC**Low Voltage Directive 2006/95/EC**

Standards to which Conformity is Declared

**CISPR 22:2006/EN55022 2006, Class B
CISPR 24:1997/EN55024 1998 (+A1+A2)
FCC 47 Part 15 Class B
ICES 003 2004 Class B****EN 61000-3-2: 2006****EN 61000-3-3: 1995, A1 2001****EN 61000-4-2: 2006 ; EN 61000-4-3: 2006 ; EN 61000-4-4: 2006 ;****EN 61000-4-5: 2006 ; EN 61000-4-6: 2006 ; EN 61000-4-11: 2006 ;****EN 60950-1: 2006, A11:2009 and A12:2011;****VCCI:2012/ CISPR22:2008 Class A**Manufacturers Name **C-COM Satellite Systems Inc.**Manufacturers Address **2574 Sheffield Road, Ottawa, Canada, K1B 3V7**

Importers Name (optional)

Importers Address (optional)

Type of Equipment **iNetVu Satellite Antenna**Model Number **iNetVu 7000 Controller, Model C7024C**

CE Marked 2012; VCCI Tested 2013

Serial No. (optional) Year of Manufacture (Optional) 2012

I, the undersigned, hereby declare that the equipment specified above conforms to the above Directives and Standards.

Signed on behalf of the Manufacturer and Importer

Place **Ottawa, Canada**

Signature:

Date **Sept. 19, 2013**Full Name: **Dr. Leslie Klein, P.Eng.**
Position: **President and CEO**